


PUNTO eMANUAL

Electrical Equipment

Title	Page
Diagrams	1 ➡

WIRING DIAGRAM

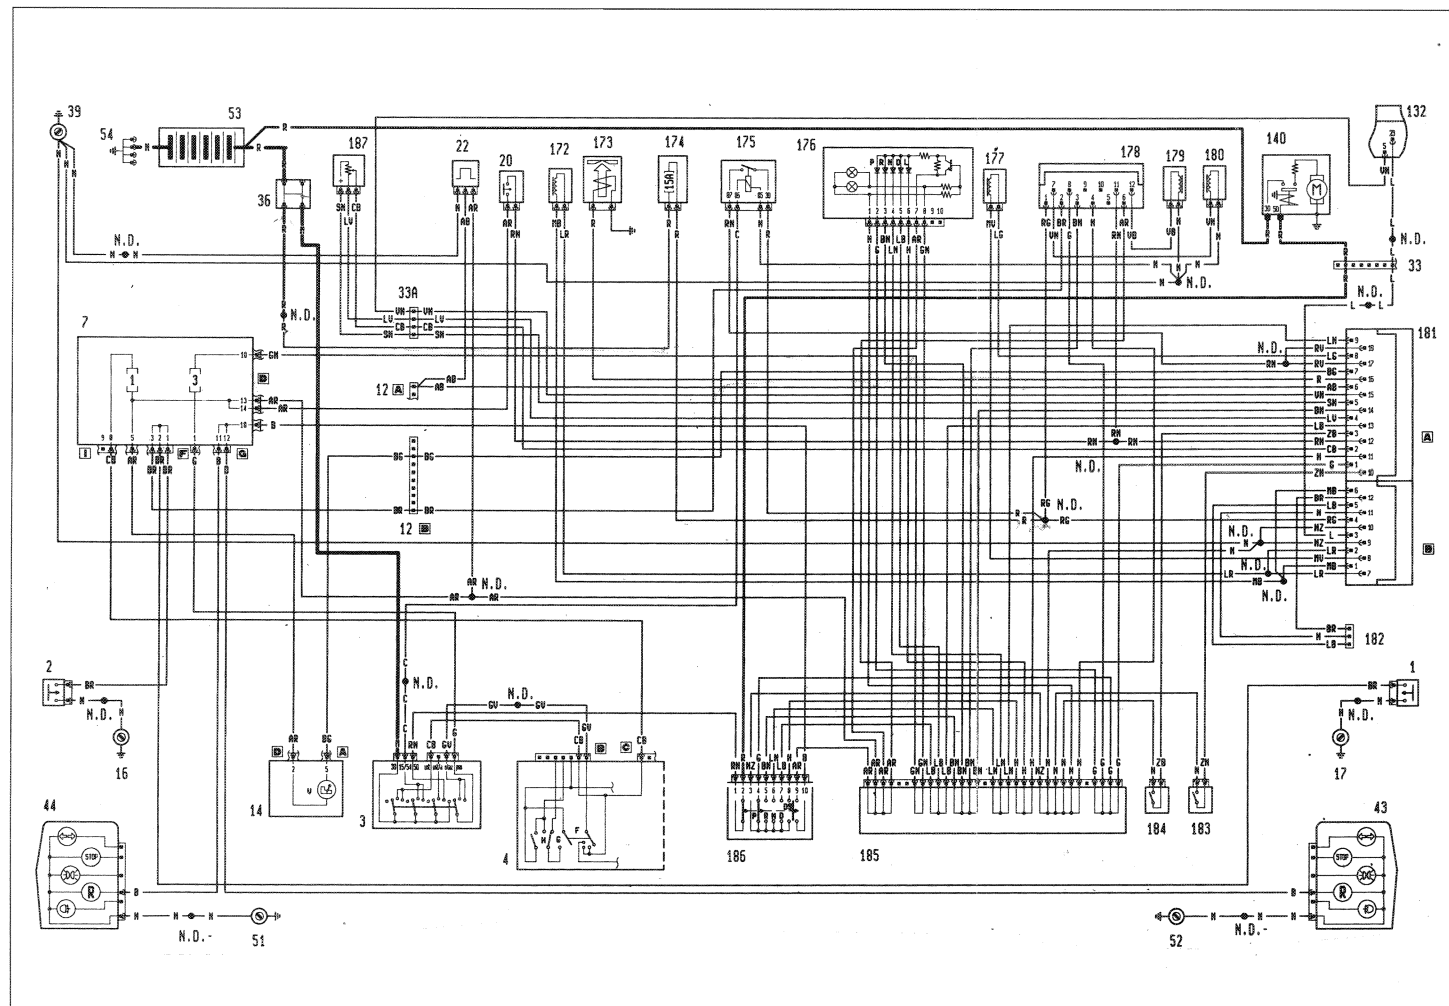

KEY TO COMPONENTS

- 1 Right front courtesy light button and door open indicator
- 2 Left front courtesy light button and door open indicator
- 3 Ignition switch
- 4 Stalk unit:
 - F Side light/dipped headlamp stalk
 - G Dipped headlamp/main beam control stalk
 - H Main beam button
- 7 Junction unit
- 12 Connection between facia and front wires
- 14 Instrument panel
- 16 Left hand facia earth
- 17 Right hand facia earth
- 20 Brake light switch
- 22 Pulse generator for speedometer signal
- 33 Front wiring connection
- 33A Front wiring connection for automatic transmission
- 36 Connector block
- 39 Left front earth
- 44 Right tail-light cluster
- 44 Left tail-light cluster
- 51 Left rear earth
- 52 Right rear earth
- 53 Battery
- 54 Battery earth
- 132 Control unit for I.A.W. electronic ignition and injection
- 140 Starter motor
- 172 Magnetic sensor on clutch
- 173 Automatic transmission control solenoid
- 174 15A automatic transmission fuse
- 175 Automatic transmission control relay
- 176 Speed selector and speed engagement indicator lighting display
- 177 Vehicle speed sensor
- 178 Safety ECU for automatic transmission
- 179 Shift-lock solenoid
- 180 Ignition switch solenoids
- 181 Automatic transmission ECU
- 182 Diagnostic socket for automatic transmission
- 183 Switch on accelerator for automatic transmission
- 184 Switch on accelerator for automatic transmission
- 185 Wiring connection for multiple bridges
- 186 Multifunction switch on automatic transmission
- 187 Butterfly valve potentiometer for automatic transmission