


PUNTO eMANUAL

EEFD

Title	Page
Introduction	1 ➡

INTRODUCTION

Interpreting the codes for the connector blocks

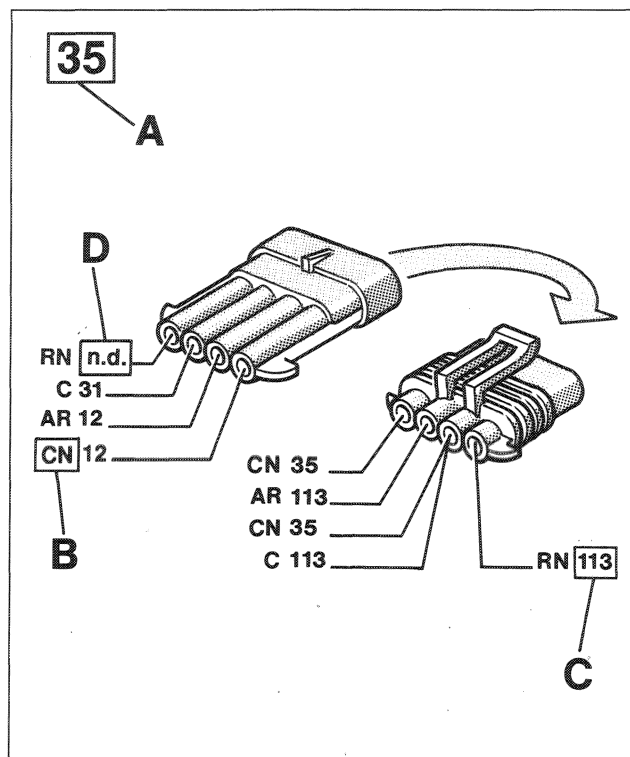

P3M025N01


- A** Identification no. for the connector block referred to in the wiring diagrams
- B** Cable colour identification code (see table at the foot of the page)
- C** Identification no. for the destination block for the cable marked with the relevant code
- D** The code identifies a connected taped to the cable loom

Cable colour code


A	Light blue	BG	White-Yellow	LB	Blue-White
B	White	BL	White-Blue	LG	Blue-Yellow
C	Orange	BN	White-Black	LN	Blue-Black
G	Yellow	BR	White-Red	LR	Blue-Red
H	Grey	BV	White-Green	LV	Blue-Green
L	Blue	BZ	White-Violet	MB	Brown-White
M	Brown	CA	Orange-Light blue	MN	Brown-Black
N	Black	CB	Orange-White	NZ	Black-Violet
R	Red	CN	Orange-Black	RB	Red-White
S	Pink	GN	Yellow-Black	RG	Red-Yellow
V	Green	GL	Yellow-Blue	RN	Red-Black
Z	Violet	GR	Yellow-Red	RV	Red-Green
AB	Light blue-White	GV	Yellow-Green	SN	Pink-Black
AG	Light blue-Yellow	HG	Grey-Yellow	VB	Green-White
AN	Light blue-Black	HN	Grey-Black	VN	Green-Black
AR	Light blue-Red	HR	Grey-Red	VR	Green-Red
AV	Light blue-Green	HV	Grey-Green	ZB	Violet-White

55D.



- 1** Right front push button controlling doors ajar warning light

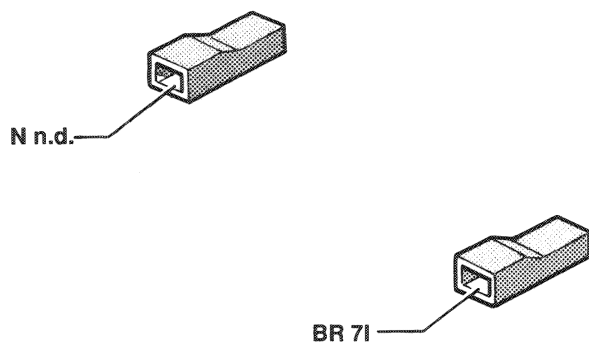



- 2** Left front push button controlling doors ajar warning light

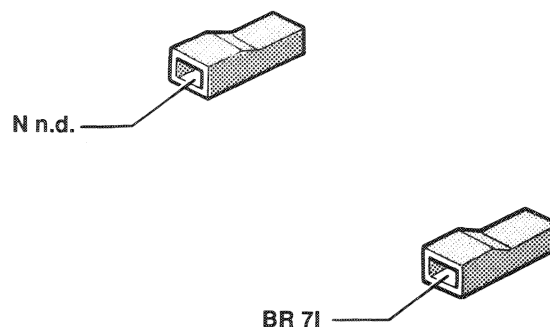

- 3** Ignition switch

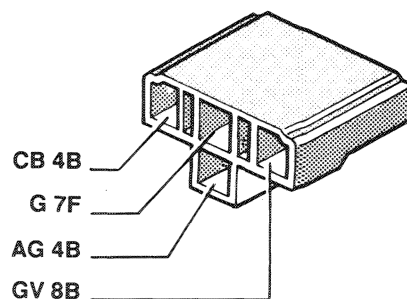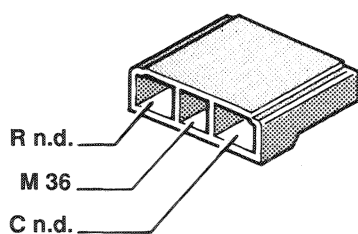


- 4** Steering column switch unit

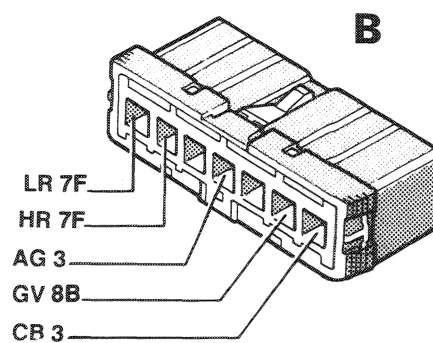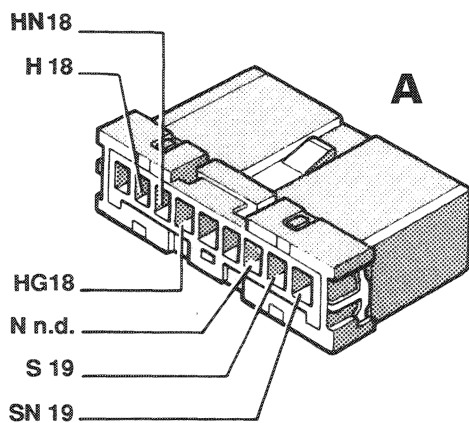


P3M026N01


4 Steering column switch unit

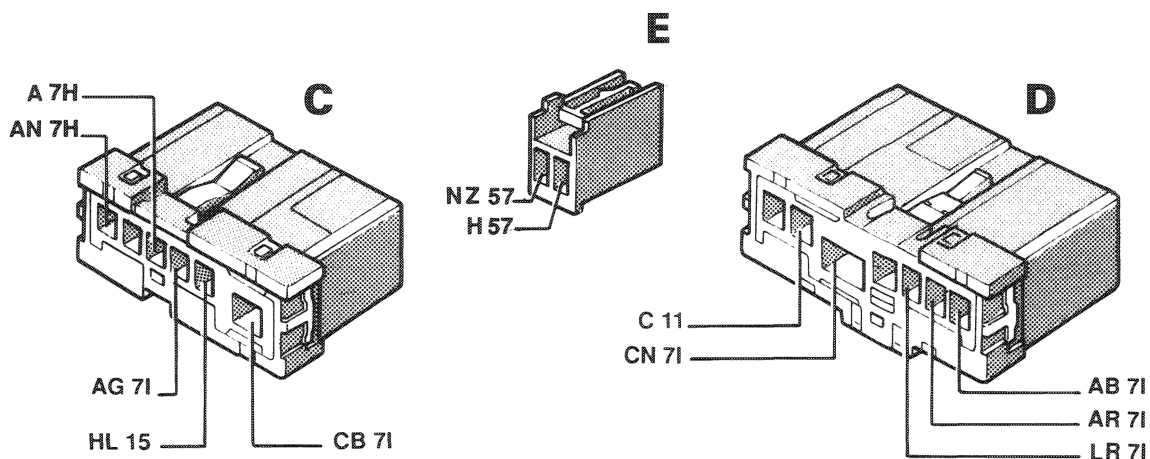


5 Right front side direction indicator

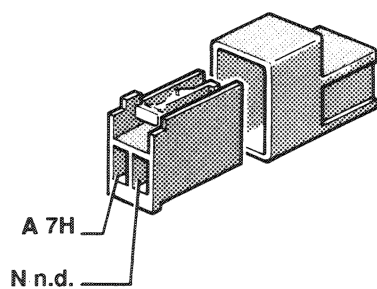


6 Left front side direction indicator

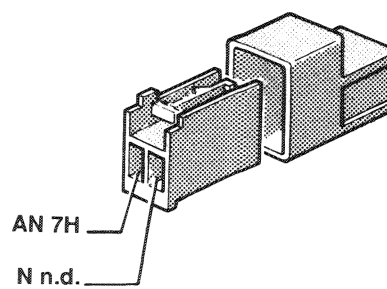


7A Junction unit

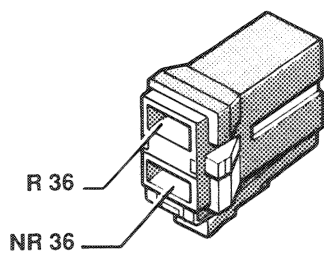


7B Junction unit

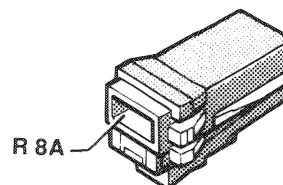


7C Junction unit

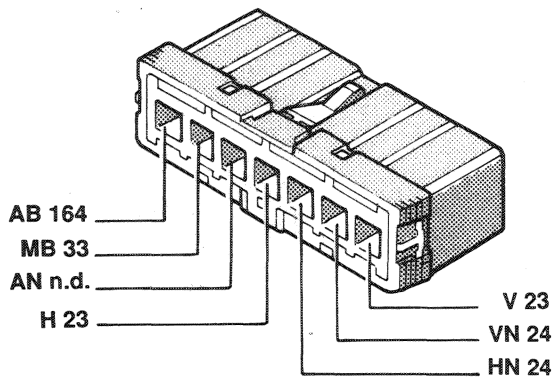


7D Junction unit

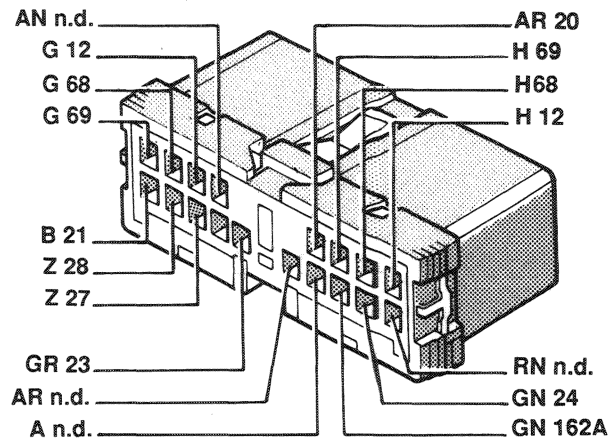


7E Junction unit

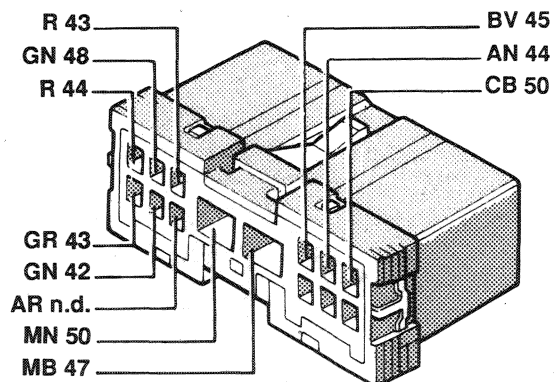


7F Junction unit

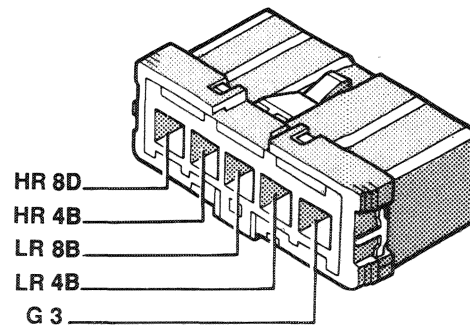


7G Junction unit

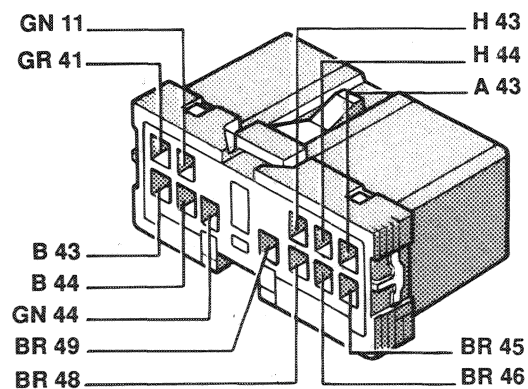


7H Junction unit

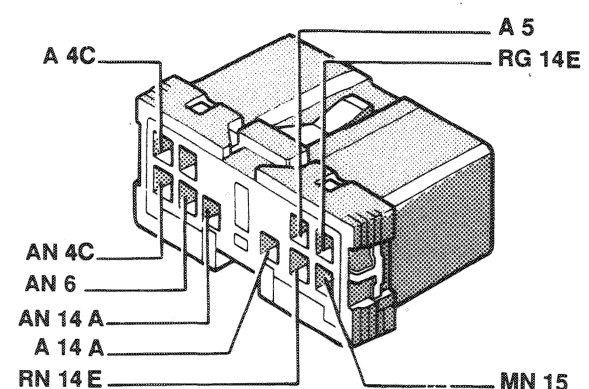


7I Junction unit

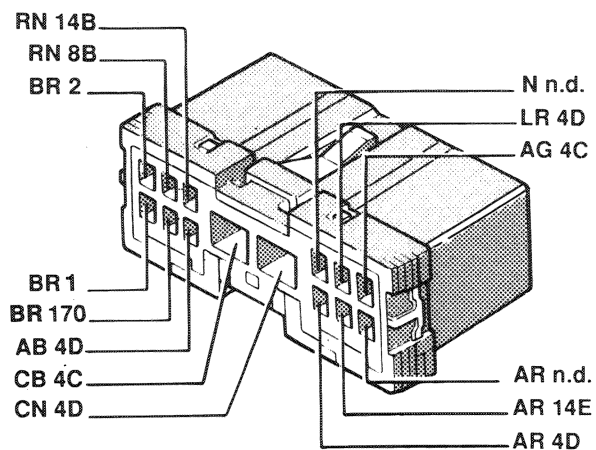


7J Junction unit

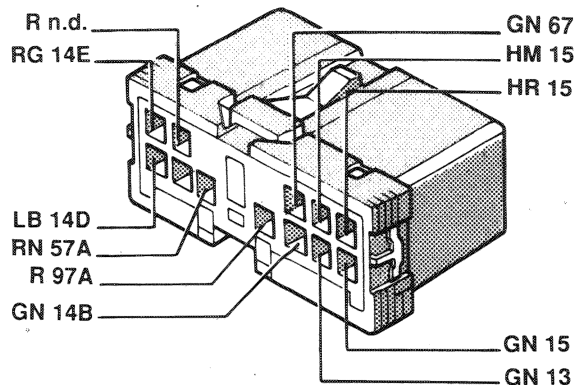


8A Control unit for optional equipment

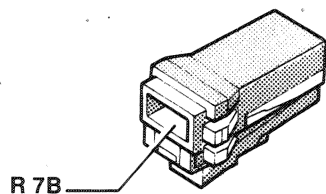


8B Control unit for optional equipment

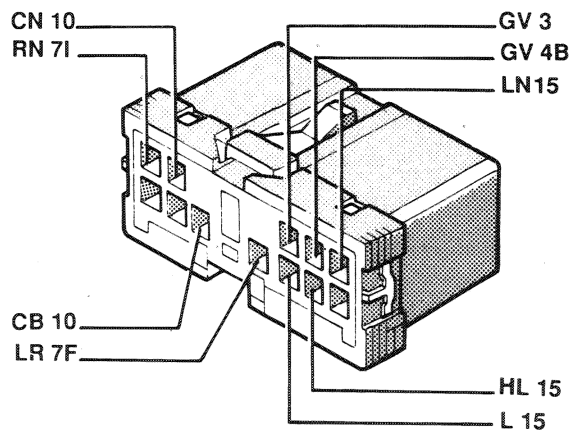

8C Control unit for optional equipment

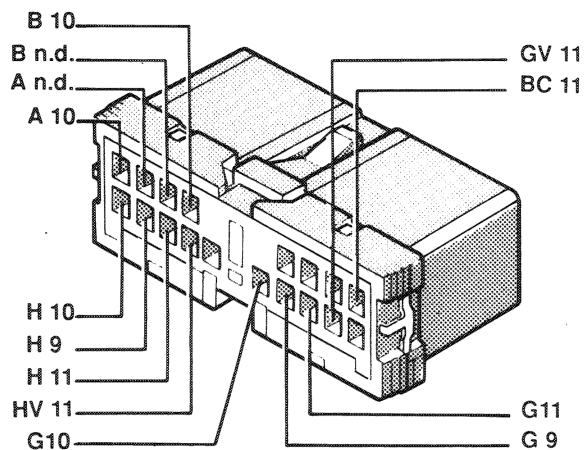


8D Control unit for optional equipment

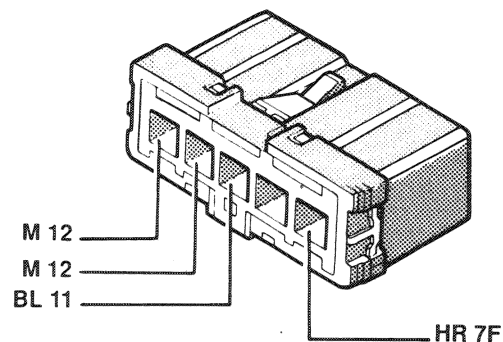


P3M029N01


8E Control unit for optional equipment

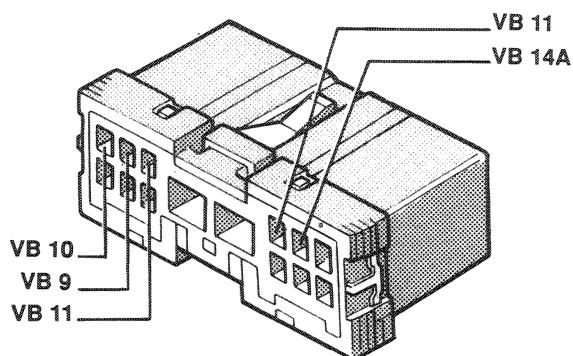


8F Control unit for optional equipment

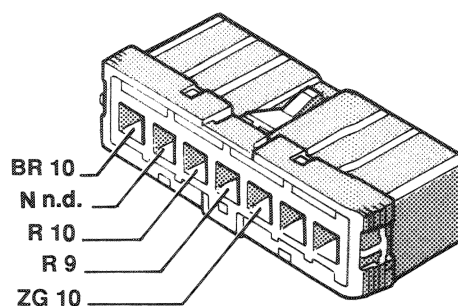

9 Connection for dashboard cables with right front door

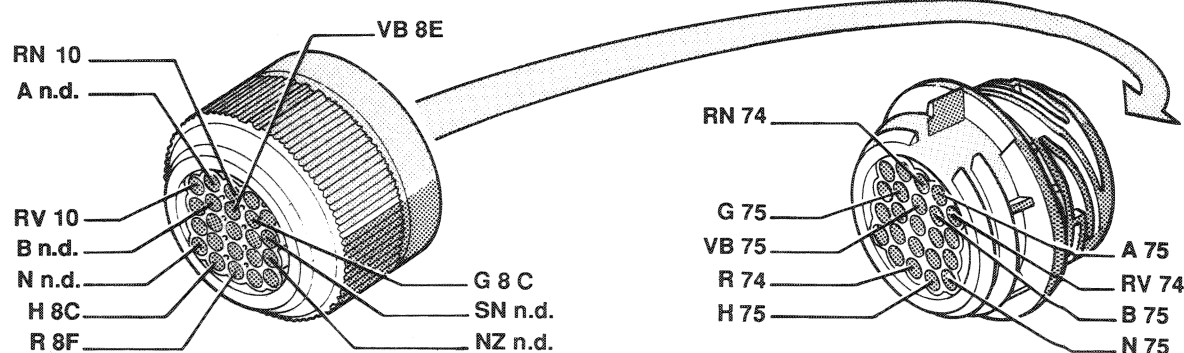


10 Connection for dashboard cables with left front door

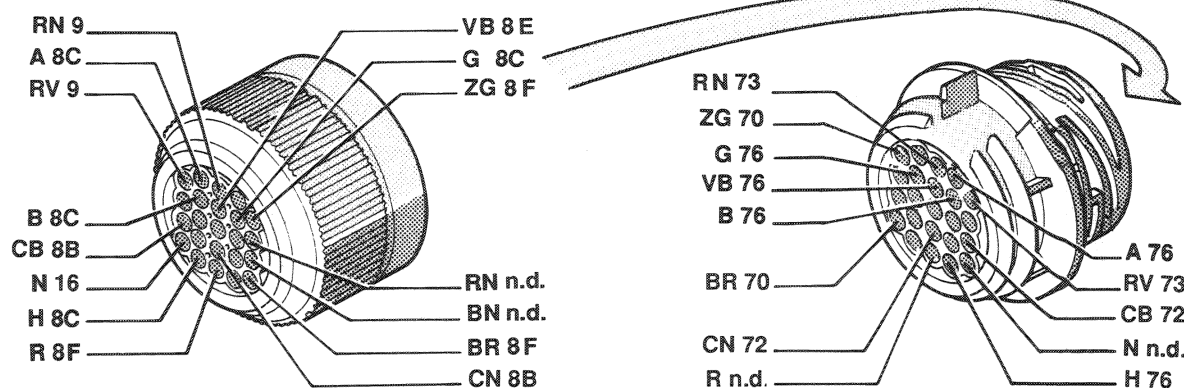


P3M030N01


11 Connection for dashboard cables with rear cables

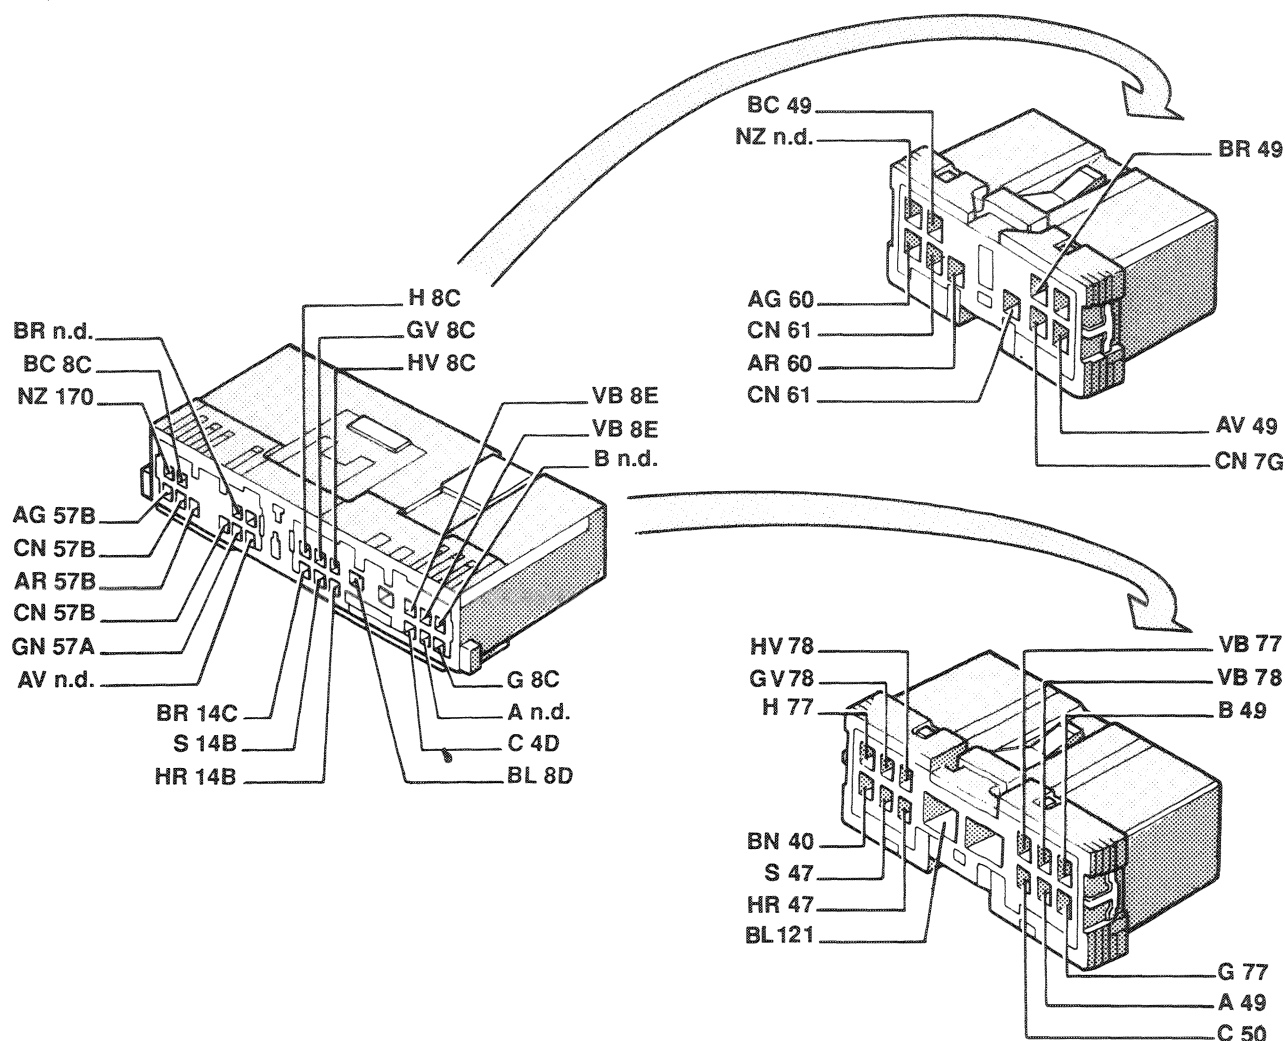

13 Cigar lighter

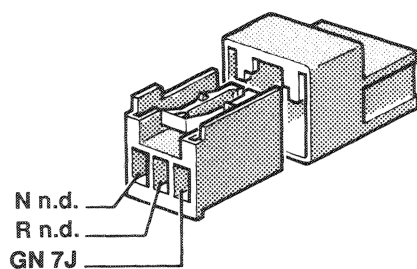


14A Instrument panel

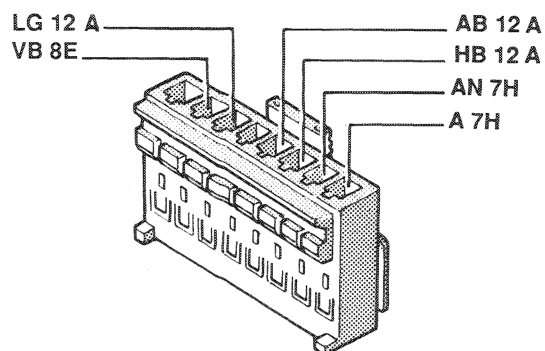


P3M031 N01

55D.


12 Connection for dashboard cables with front cables

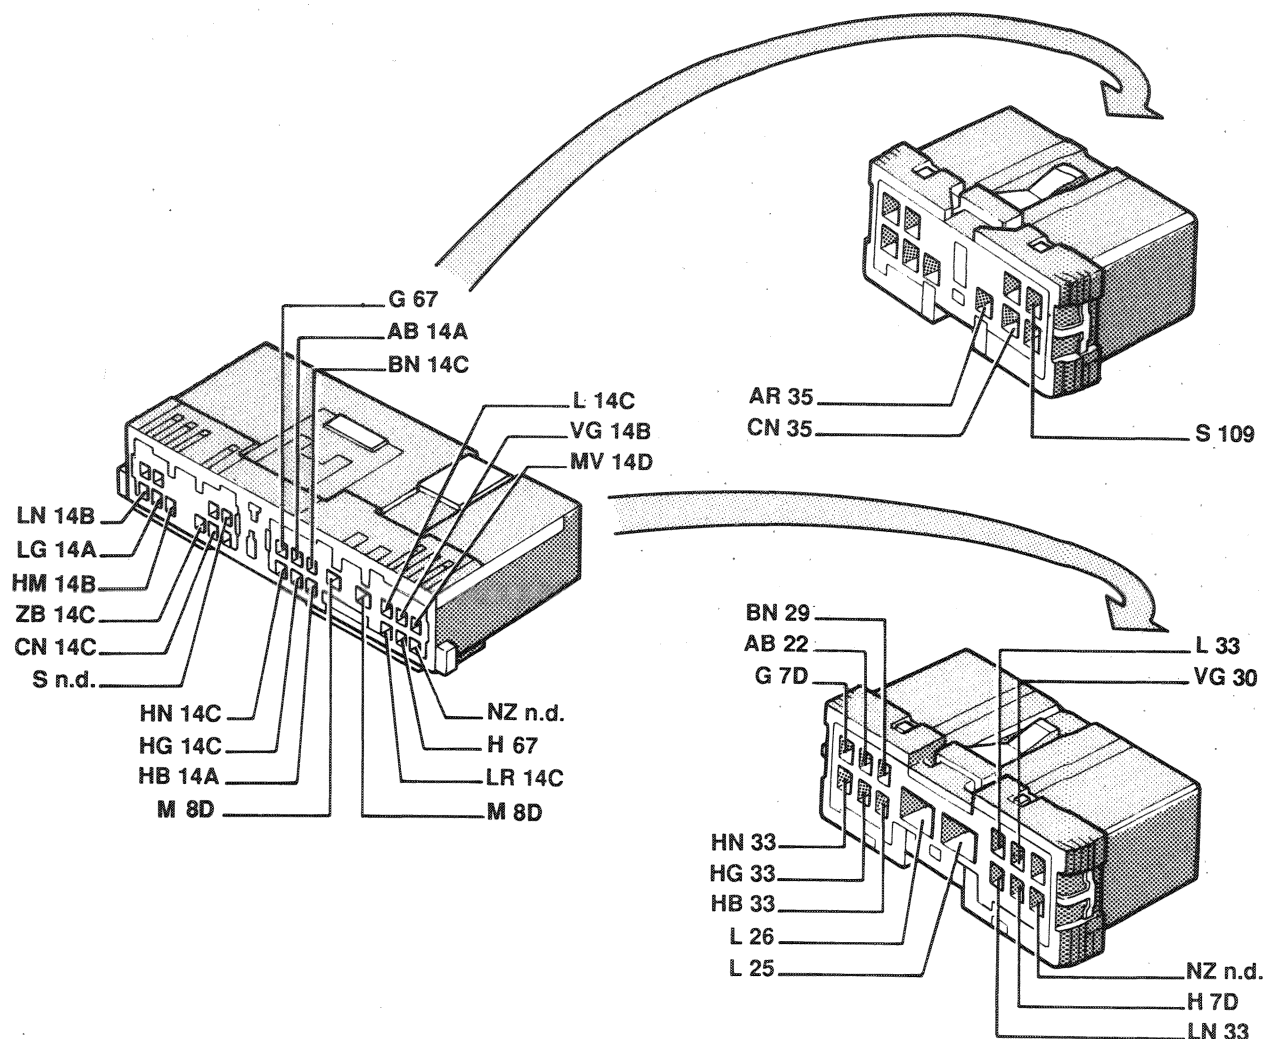

14B Instrument panel

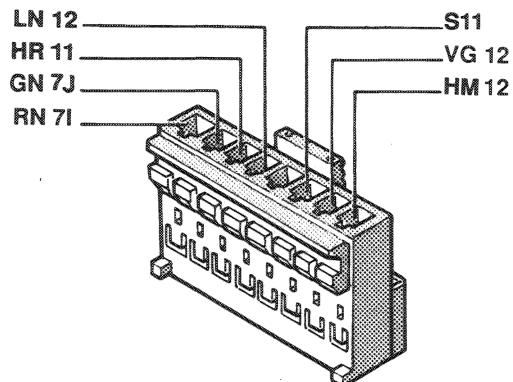


14C Instrument panel

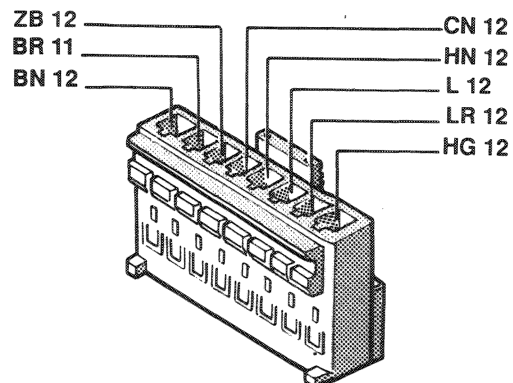


P3M032N01


14D Instrument panel

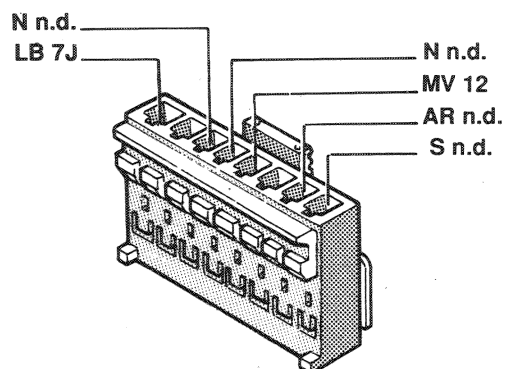


14E Instrument panel

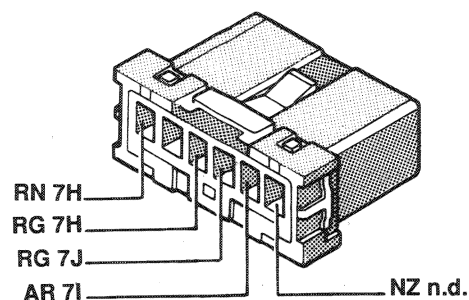


15 Switch unit

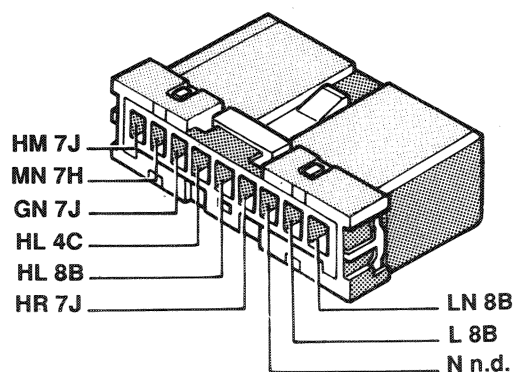


16 Left dashboard earth

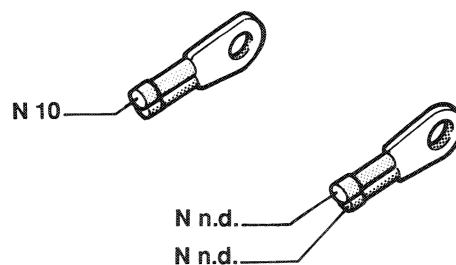

17 Right dashboard earth

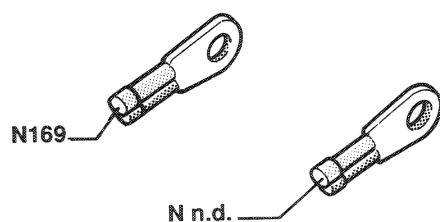


18 Windscreen wiper motor

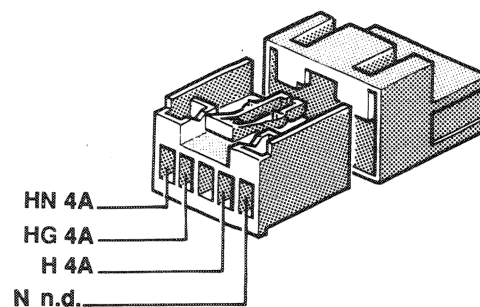


P3M033N01


19 Electric windscreen / rearscreen washer pump

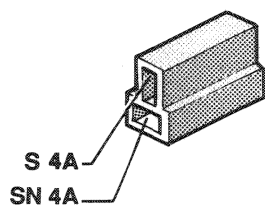


20 Brake lights switch

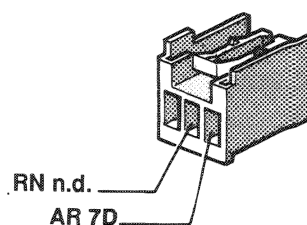



21 Reversing lights switch

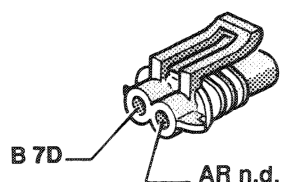



22 Impulse generator for speedometer signal

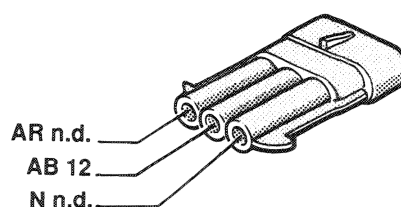


23 Right front light cluster

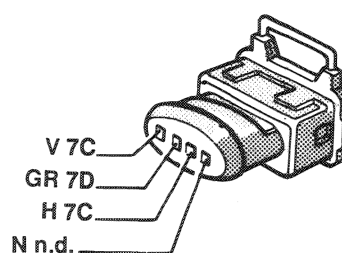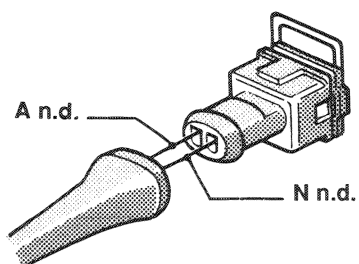


24 Left front light cluster

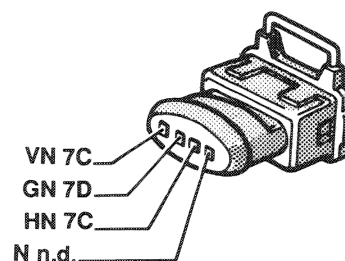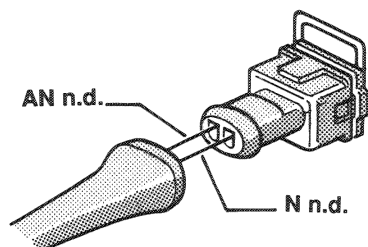


25 Right fog light

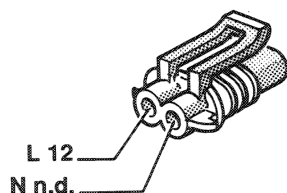


26 Left fog light

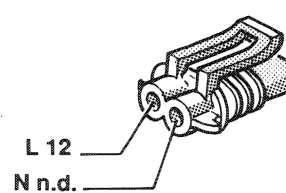


27 Right electric horn

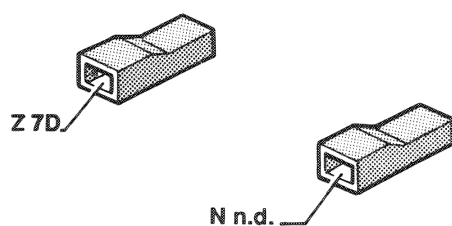


28 Left electric horn

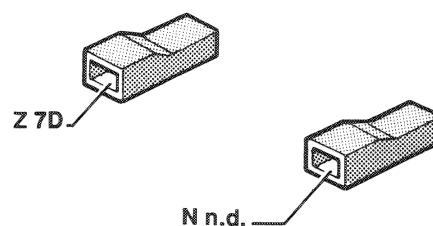


29 Insufficient brake fluid level sensor

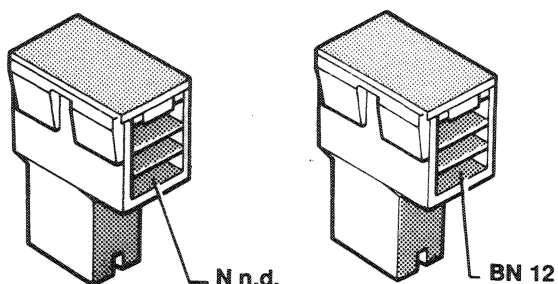


30 Left front brake pad wear sensor

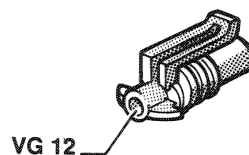


31 10A protective fuse for anti-lock brakes (A.B.S.)

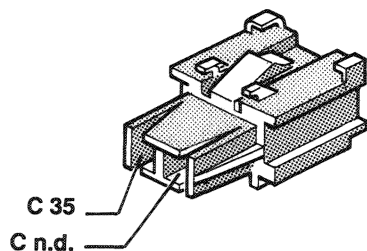

32 Connection for cables with anti-lock brakes (A.B.S.)

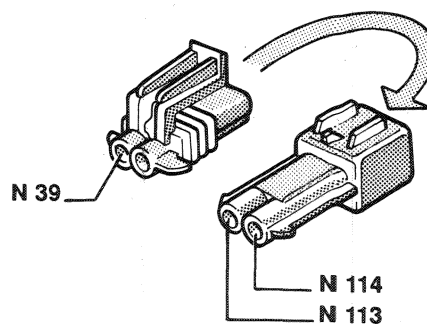


33 Connector for front cables

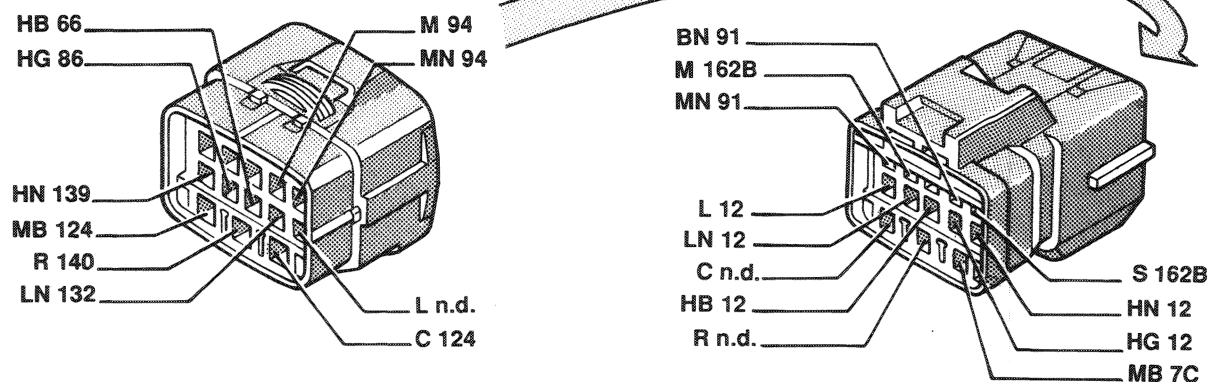


P3M036N01


35 Connection between front cables and anti-lock brakes (A.B.S.) cables

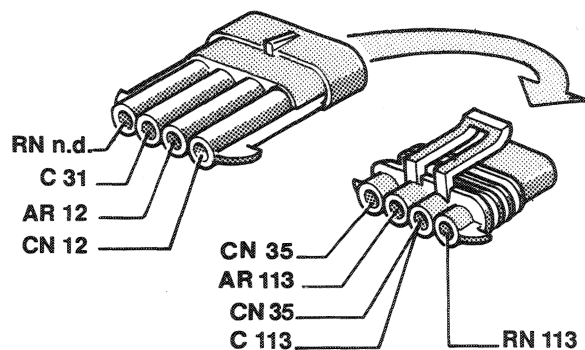


36 Connector block

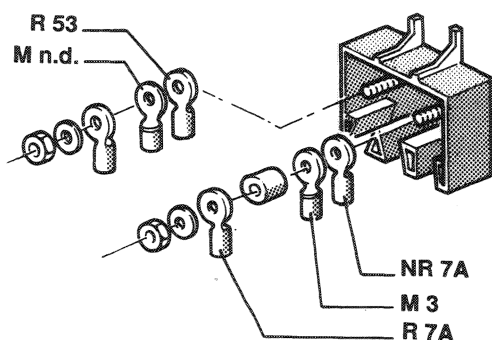


38 Right front earth

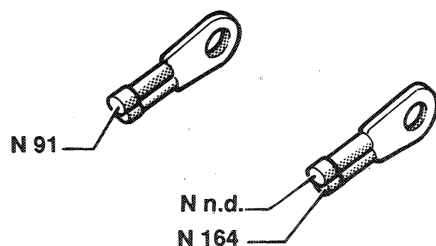


39 Left front earth

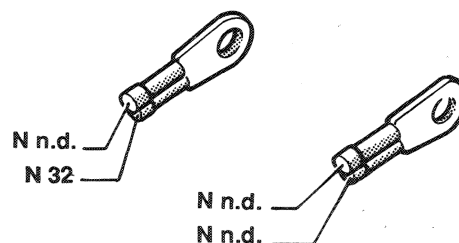

40 Switch signalling handbrake applied

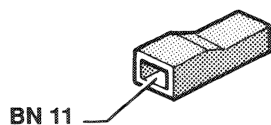


41 Right no. plate light

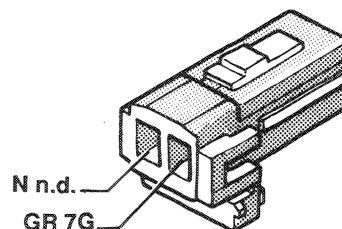


55D.


42 Left no. plate light

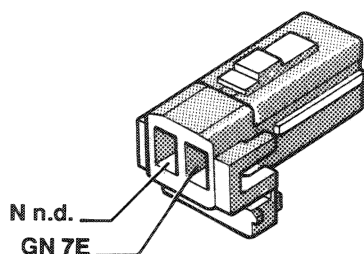


43 Right rear light cluster

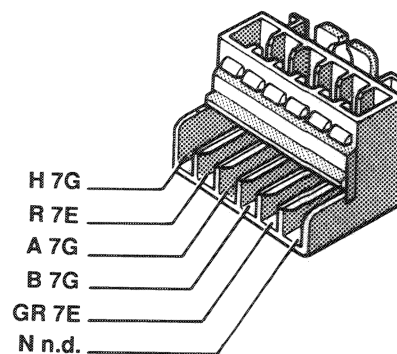


44 Left rear light cluster

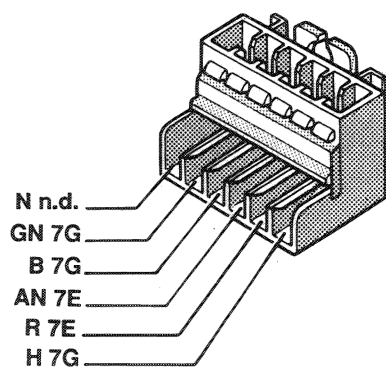


45 Courtesy lights

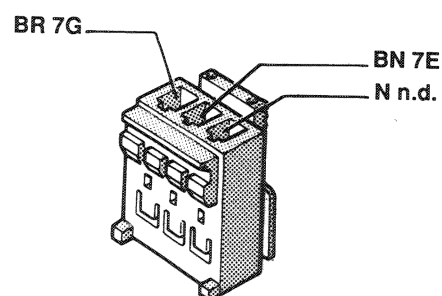

46 Luggage compartment light bulb

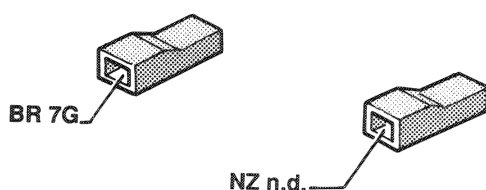


47 Fuel level gauge / Electric fuel pump

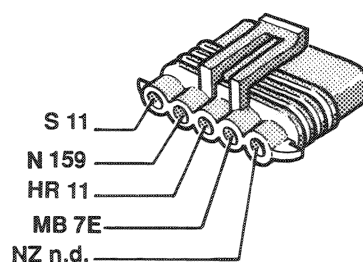


P3M038N01


48 Digital clock

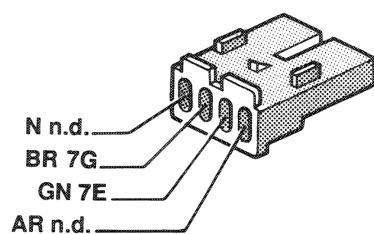


49 Central locking remote control receiver

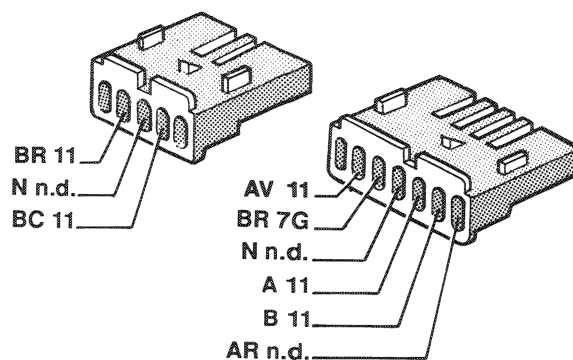


50 Connection for rear cables

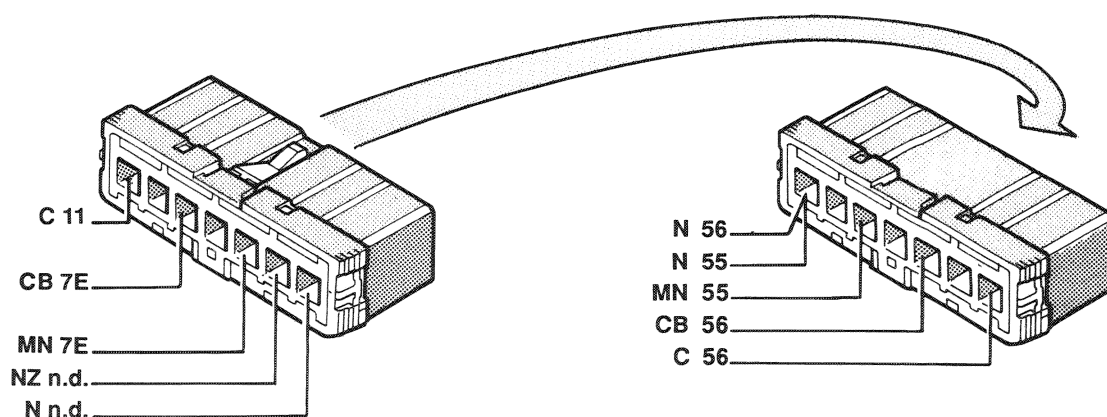


51 Left rear earth

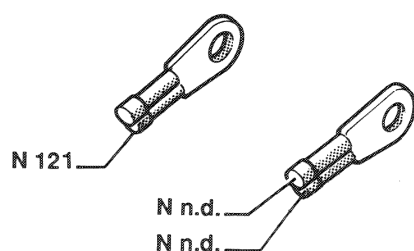


52 Right rear earth

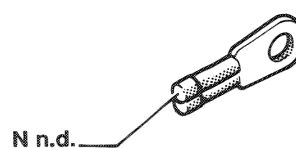


53 Battery

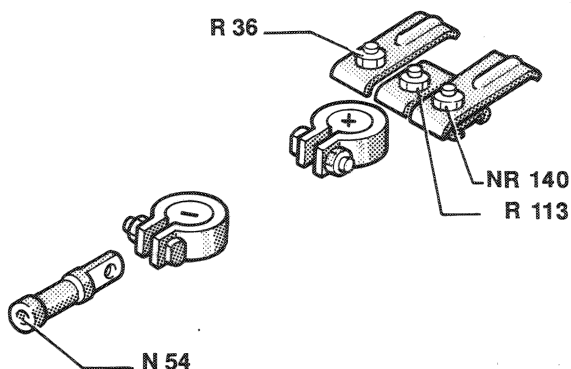


54 Earth for battery

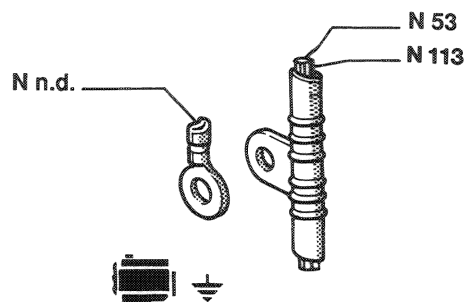



55 Heated rear windscreen

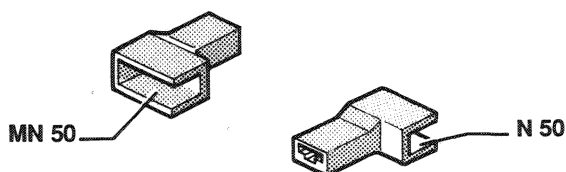


56 Rearscreen wash/wipe

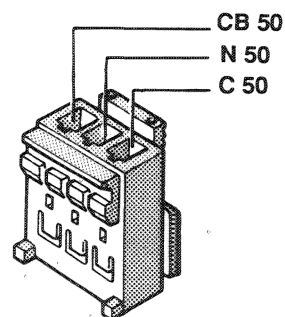


57 Radio

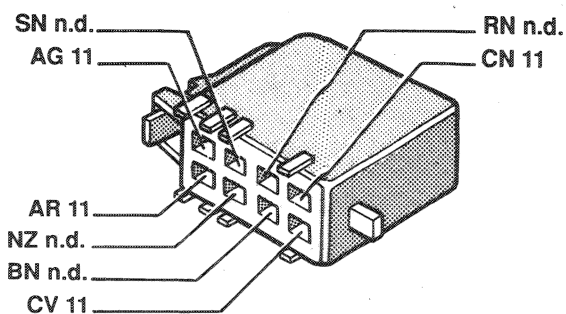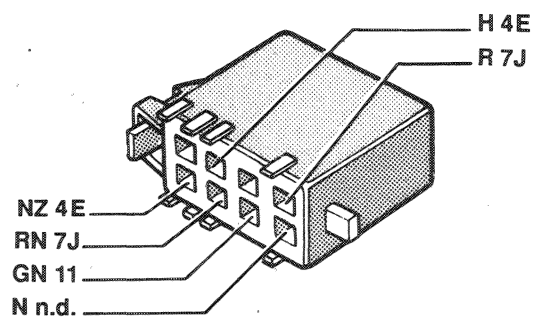


58 Speaker in right front door

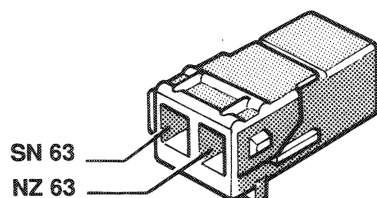


59 Speaker in left front door

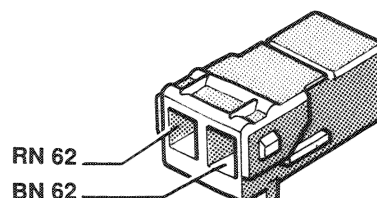


60 Right rear speaker

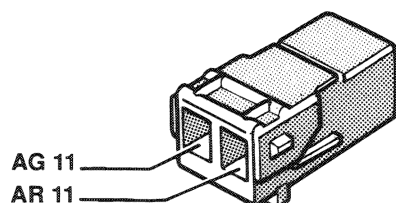


61 Left rear speaker

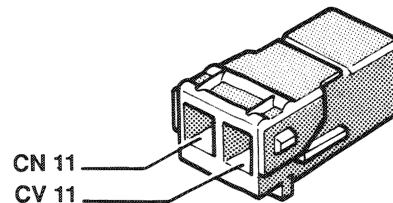


62 Left front speaker

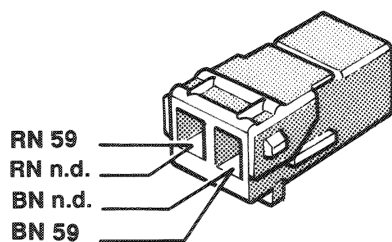


63 Right front speaker

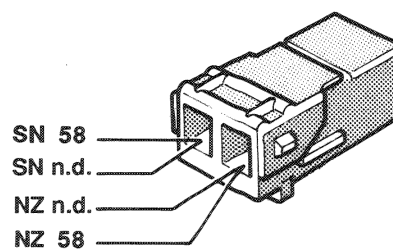


64 Engine cooling fan

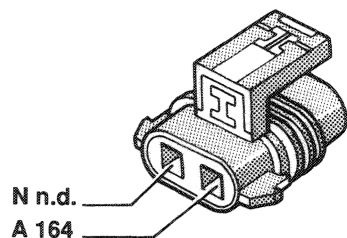


66 Sensor signalling engine coolant temperature

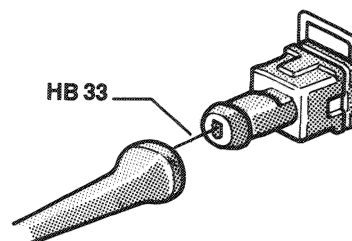


67 Headlamp alignment device control unit

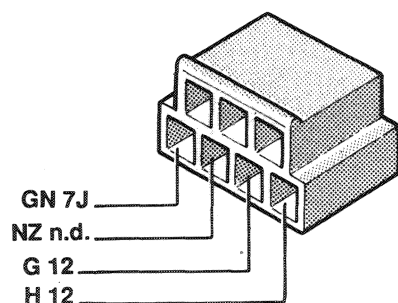


68 Left headlamp alignment correcter

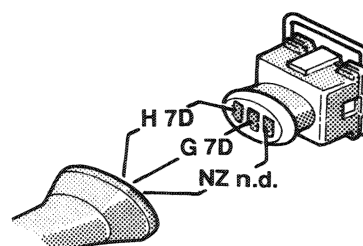


69 Right headlamp alignment correcter

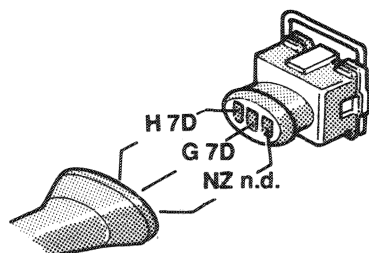


70 Left front electric window motor

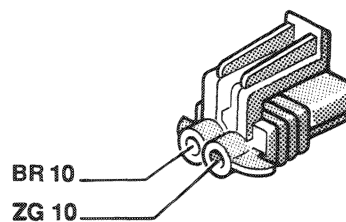


71 Right front electric window motor

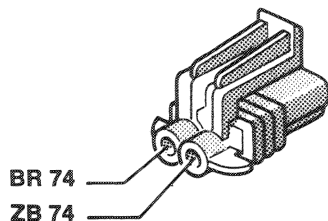


72 Left front electric windows control panel, driver's side

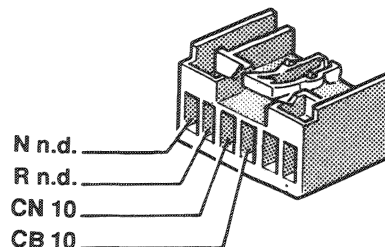


73 Right front electric windows control panel, driver's side

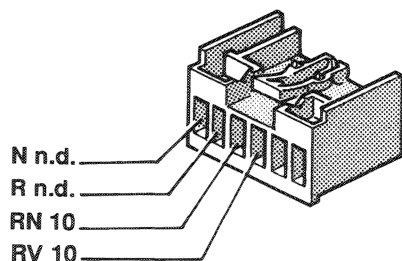


74 Right front electric windows control panel, passenger side

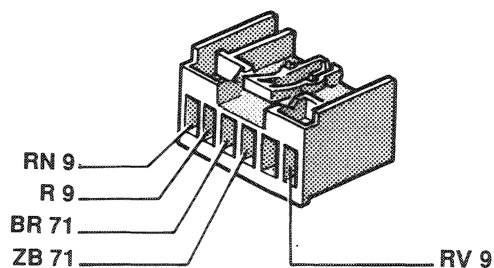

75 Right front central locking geared motor and door ajar signal

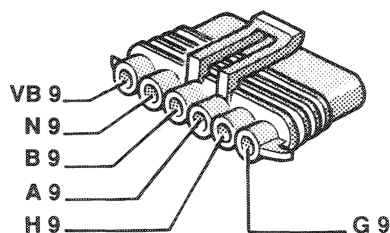


76 Left front central locking geared motor and door ajar signal

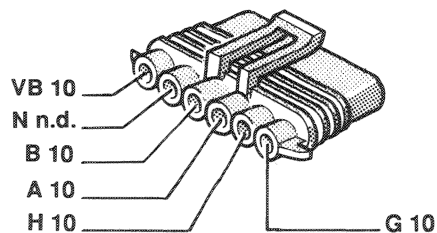


55D.


77 Connection for left rear door rear cables

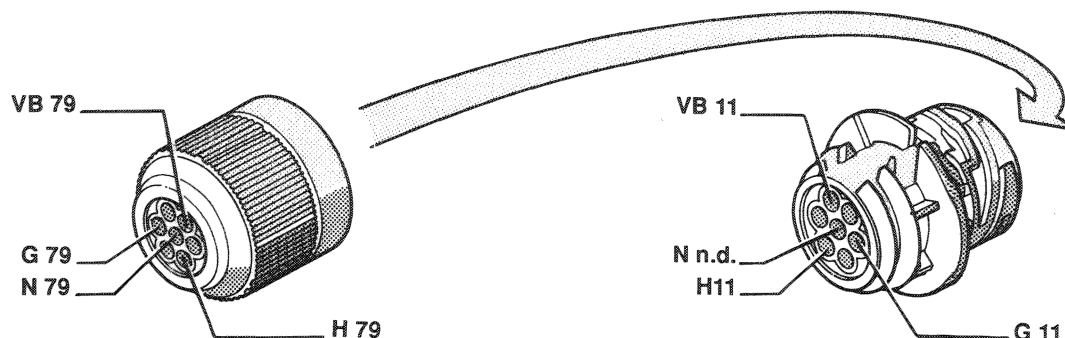


78 Connection for right rear door rear cables

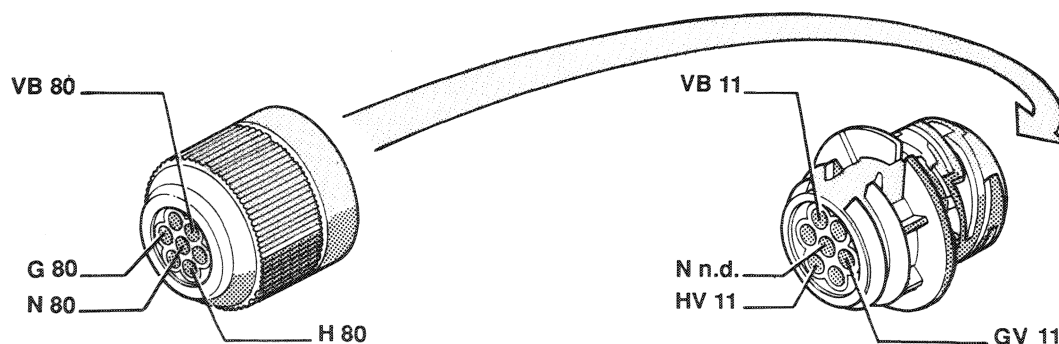

79 Left rear central locking geared motor and door ajar signal

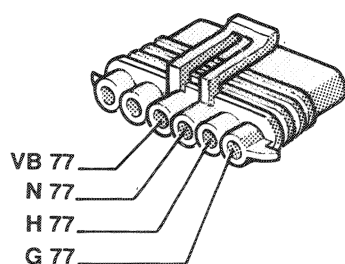


80 Right rear central locking geared motor and door ajar signal

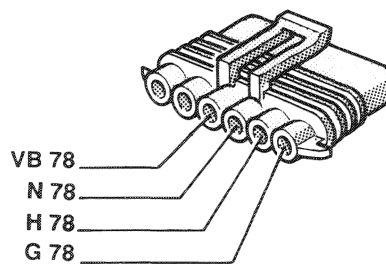

P3M044N01


81

Electrically operated sun roof end of travel switch

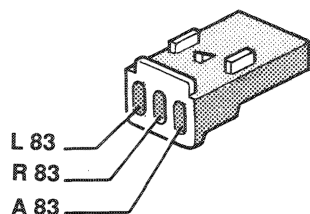


82

Electric sun roof operating motor

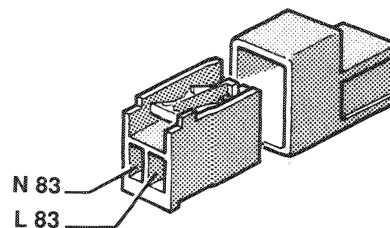


83

Electronic control unit for electrically operated sun roof

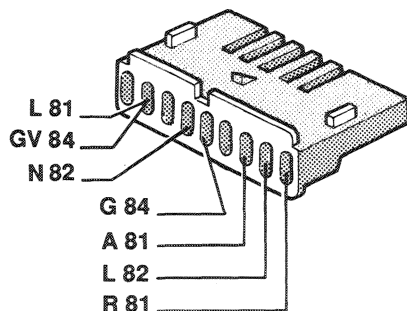


84

Electrically operated sun roof control switch

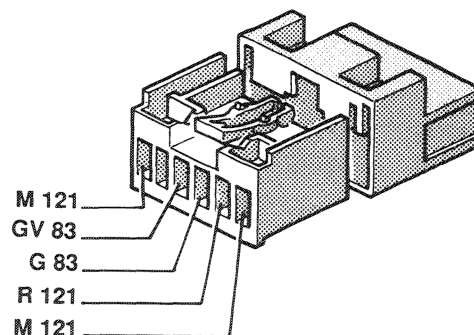


86

Switch signalling insufficient engine oil pressure


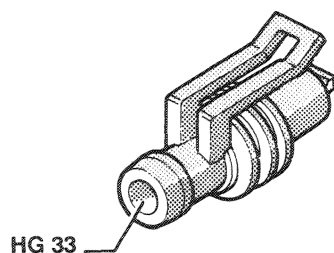


88


Air conditioning system 30A protective fuse

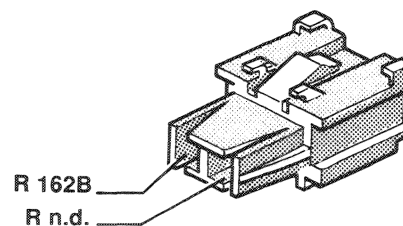


91 Fuse and relay control box for air conditioning

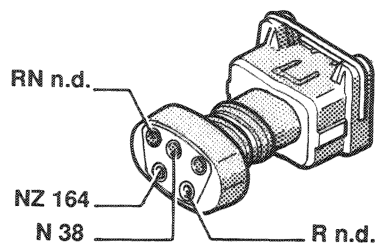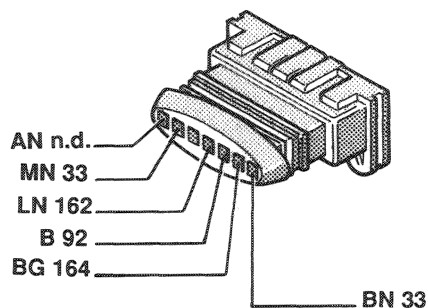


90 Engine cooling fan speed adjustment resistor

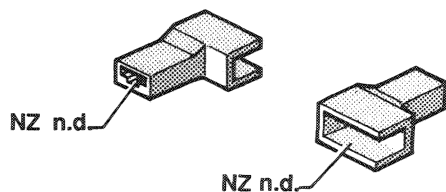


92 Three stage pressure switch for air conditioner

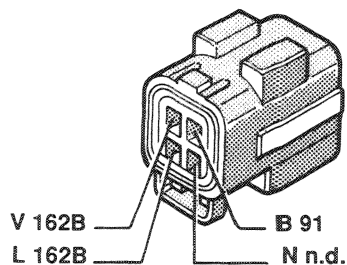


93 Thermostatic switch with twin contact on radiator

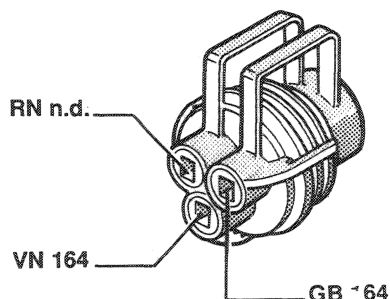


94 Compressor for air conditioner

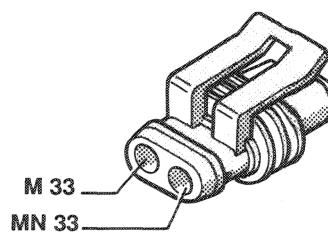


95 Electronic control unit for air conditioning system (Nippondenso)

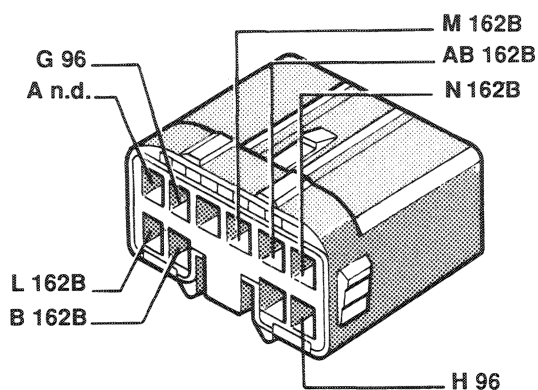


96 Evaporator area temperature sensor

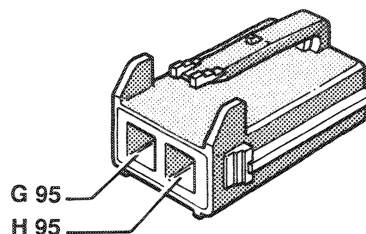


99 Air conditioning system on switch

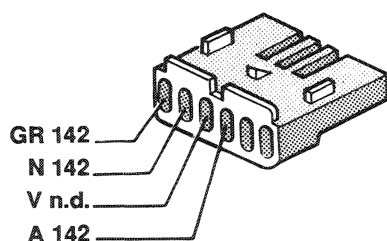


100 Air conditioning system electric fan relay

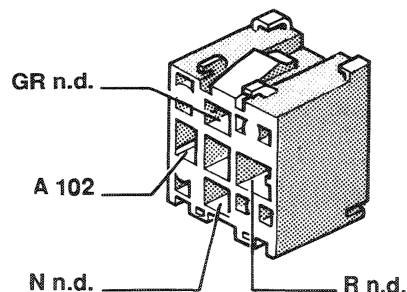

101 Relay for engaging 1st fan speed

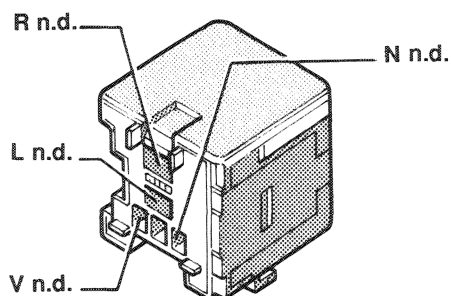


102 Switch for air conditioner electric fan

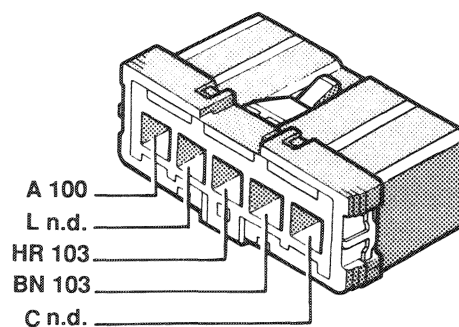


P3M047N01


103 Additional resistor

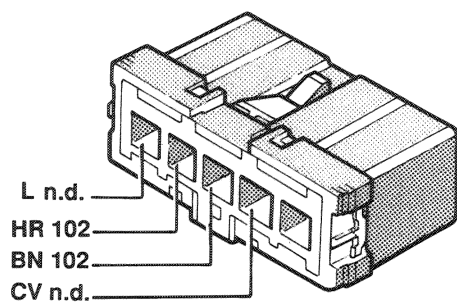


104 Air conditioner unit electric fan

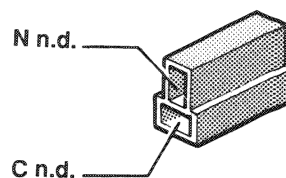


108 AIR-BAG loading protection (driver's side)

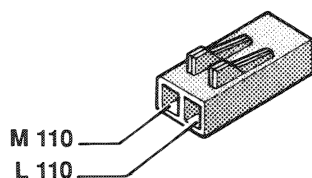

110 AIR-BAG electronic control unit

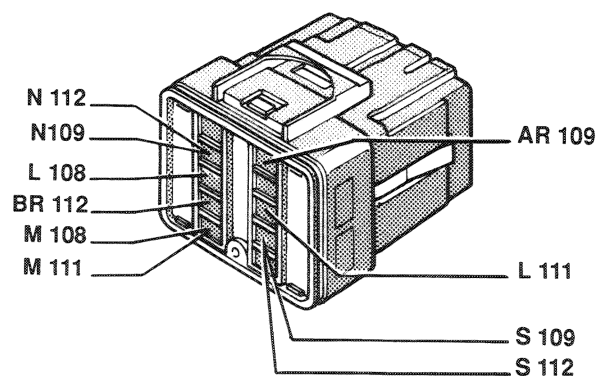


109 Connection for AIR-BAG device cables

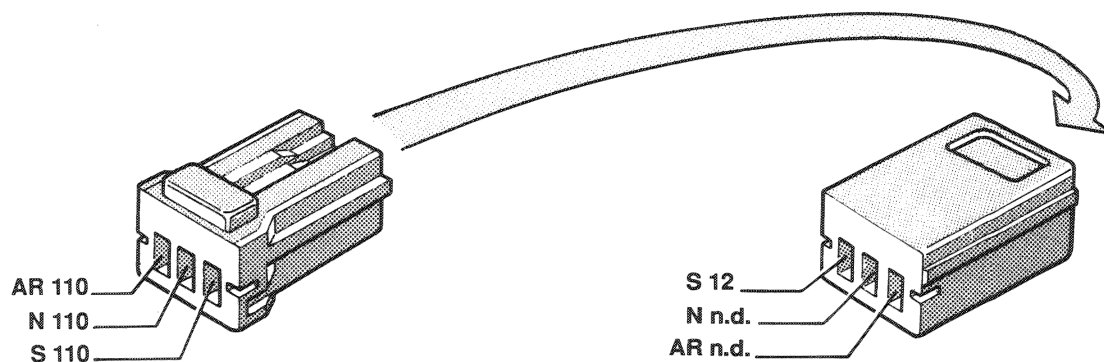


P3M048N01



111 AIR-BAG loading protection (passenger side)

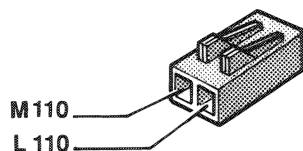


112 Diagnostic socket for AIR-BAG device

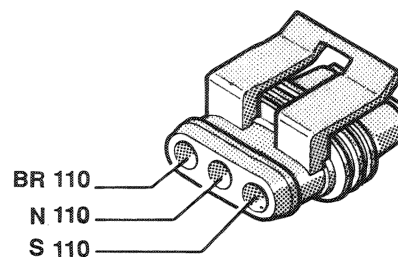


113 Electronic control unit for anti-lock brakes (A.B.S.)

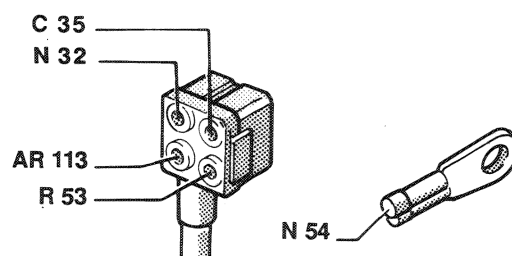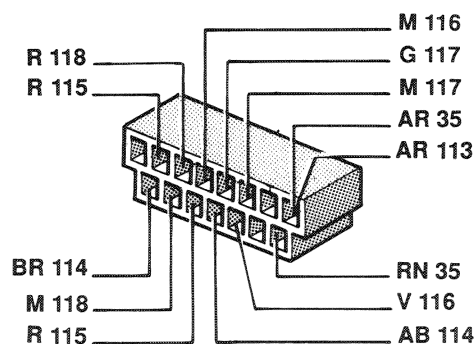


114 Diagnostic socket for anti-lock braking system (A.B.S.)

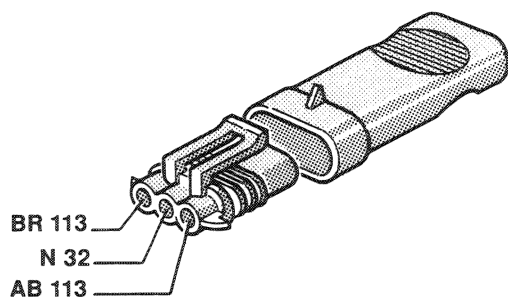


115 Sensor on left front wheel (A.B.S.)

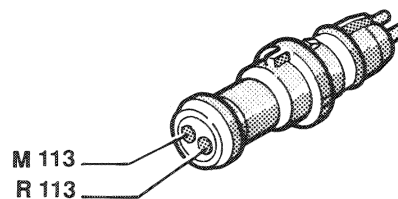


116 Sensor on right front wheel (A.B.S.)

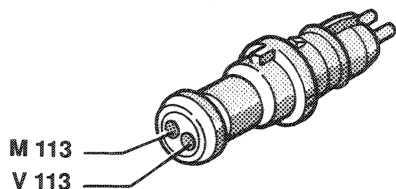


117 Sensor on left rear wheel (A.B.S.)

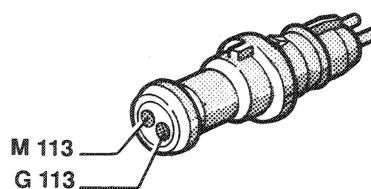


118 Sensor on right rear wheel (A.B.S.)

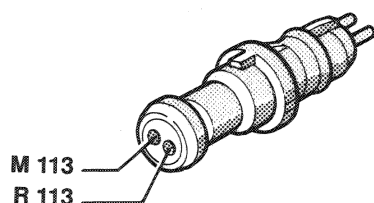


121 Connector for electric sun roof cables

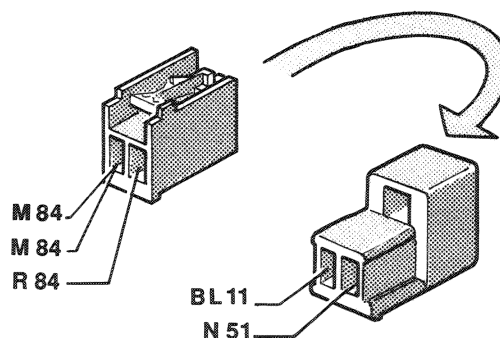


122 Injection system 5A protective fuse

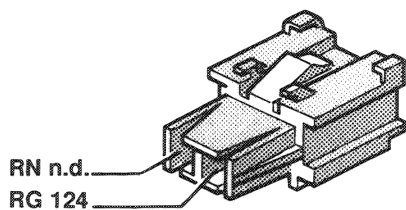


123 25A protective fuse for injection electric pump, Lambda sensor, injectors

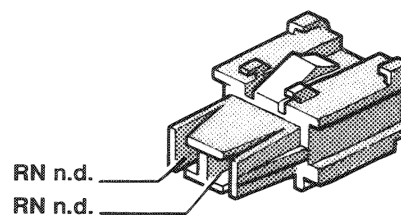


124 Multiple relay

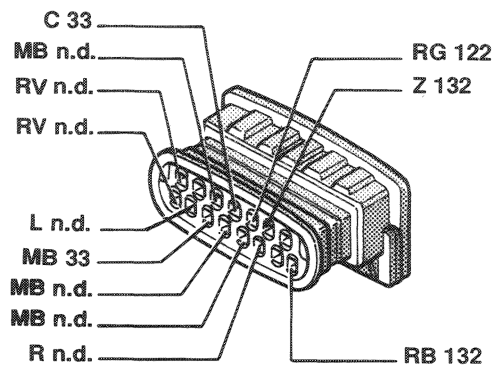


125 Heated Lambda sensor

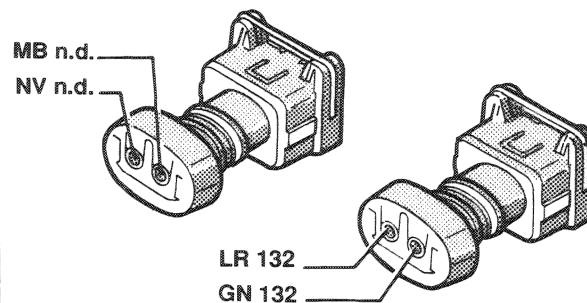


126 Potentiometer on throttle valve

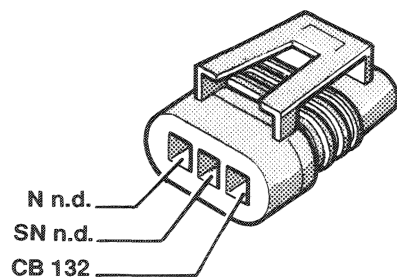


127 Water temperature sensor

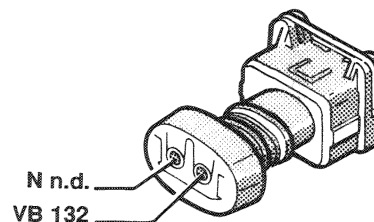

128 Air temperature sensor

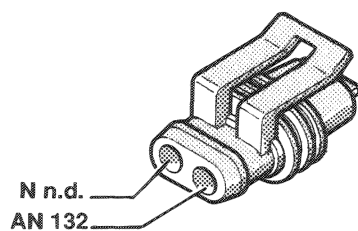


129 Absolute pressure sensor

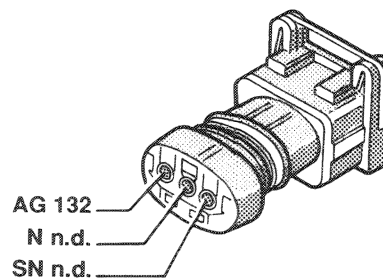


P3M051N01


130 Earths on engine

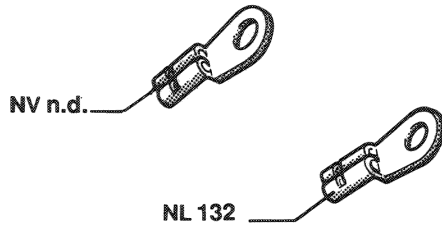



131 Earth on control unit

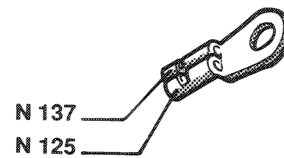


132 I.A.W. electronic injection and ignition control unit

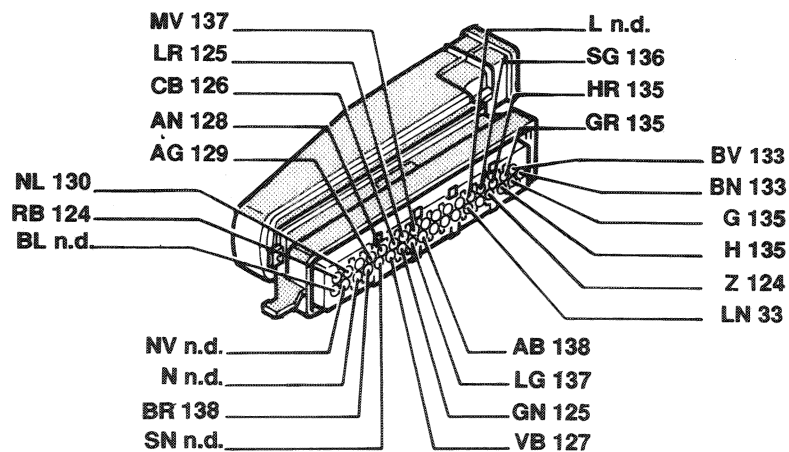


133 Ignition coil unit

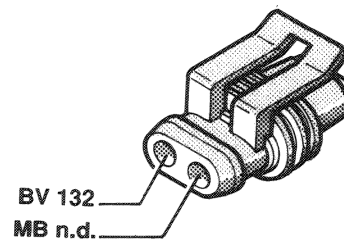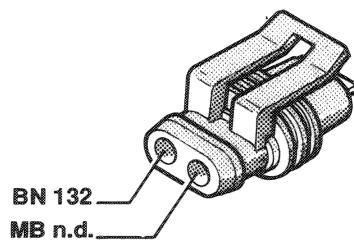


135 Stepping actuator

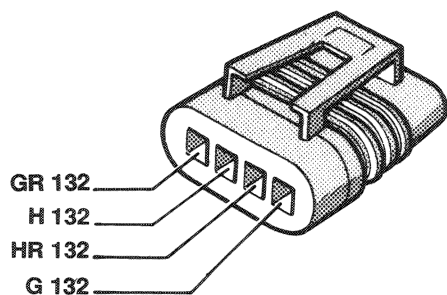


136 Canister solenoid valve

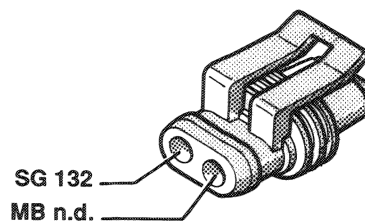


137 Rpm and T.D.C. sensor.

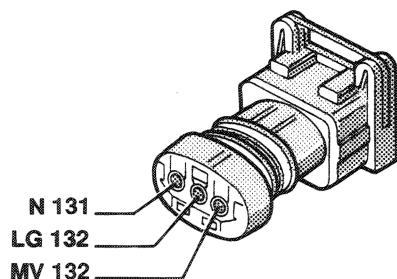


138 Diagnostic socket for injection system

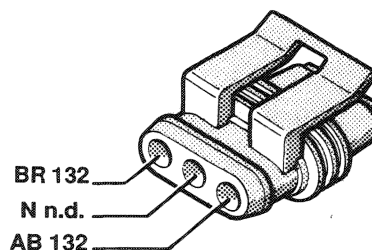


139 Alternator

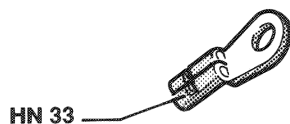


140 Starter motor

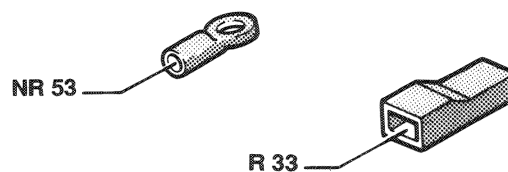


141 Injectors

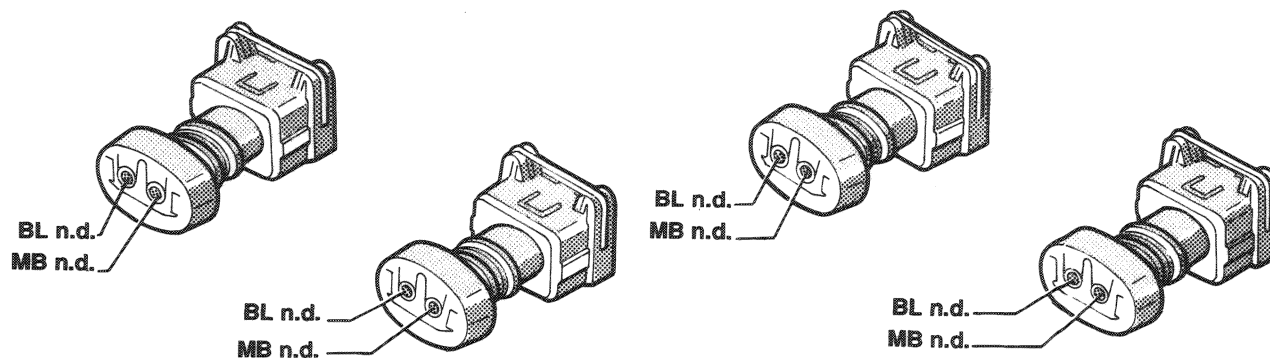


142 Car interior air recirculation control switch

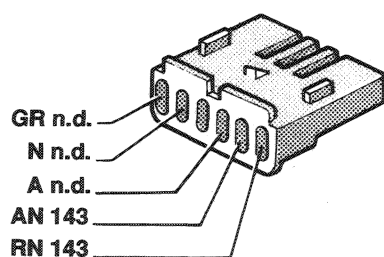


143 Car interior air recirculation actuator

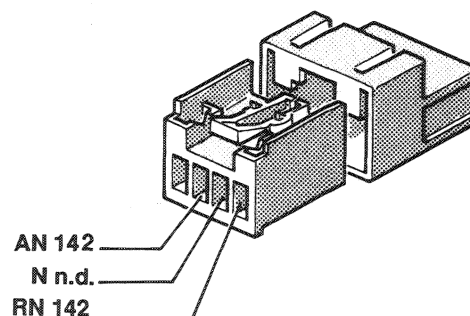


145 Air conditioner / heater controls light bulbs

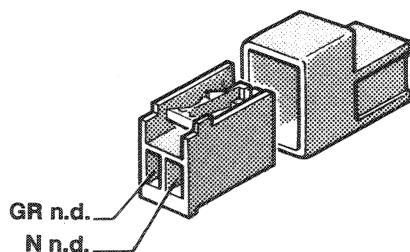


159 Electric fuel pump off switch

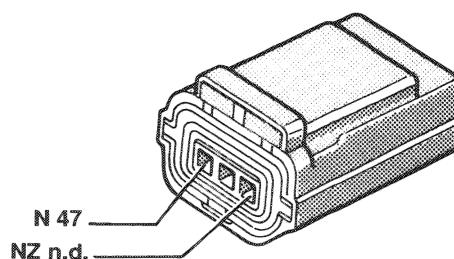


162A Air conditioner unit cables connection

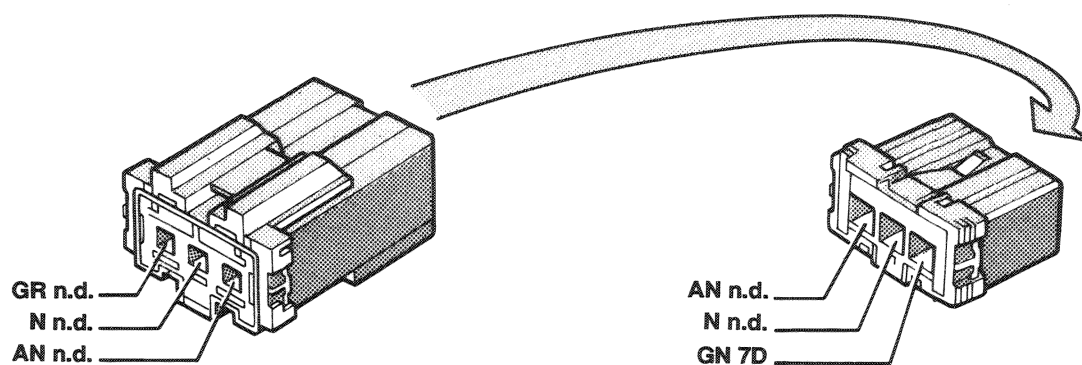

162B Connector for air conditioner unit cables

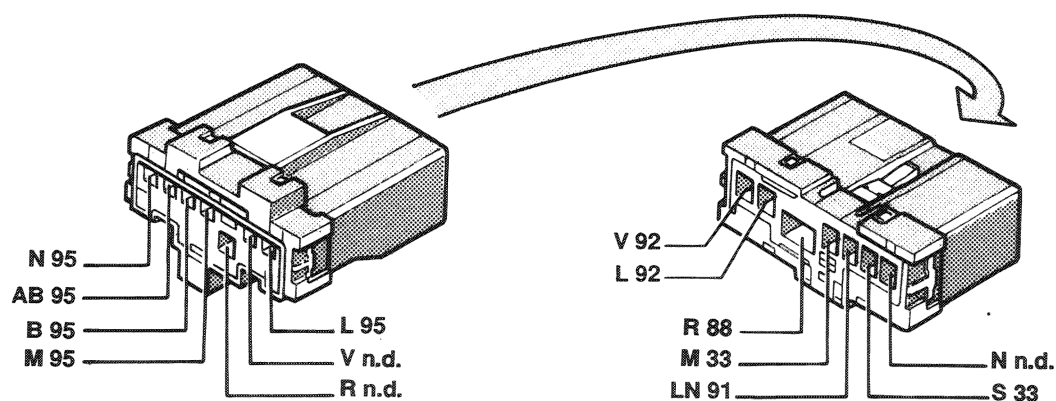


164 Connector for front cables

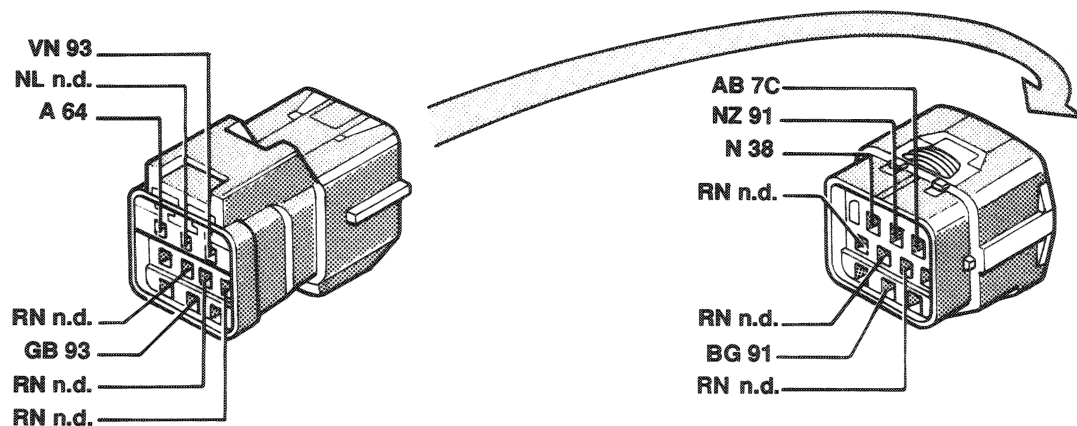

P3M055N01

55D.

165 Connector for AIR-BAG cables

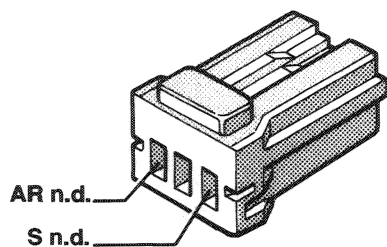

P3M056N01

Key to components

- 1 Right front courtesy light push button signalling door ajar
- 2 Left front courtesy light push button signalling door ajar
- 3 Ignition switch
- 4 Steering column switch unit:
 - A Direction indicators switch
 - B Horn control
 - C Hazard warning lights switch
 - D Direction indicators/hazard w/lights timer
 - E Hazard warning lights warning light
 - F Side lights/dipped beam headlamps control switch
 - G Dipped beam headlamps/main beam headlamps control switch
 - H Main beam headlamps switch
 - I Rearscreen wiper control switch
 - L Windscreen/rearscreen and headlamp wash/wipe control button
 - M Windscreen wiper control switch
 - N Volume increase control (on steering wheel)
 - O Volume decrease control (on steering wheel)
 - P Programme selection control (on steering wheel)
 - Q Band selection control (on steering wheel)
- 5 Right front side direction indicator
- 6 Left front side direction indicator
- 7 Junction unit :
 - E1 Ignition discharge relay
 - E2 Electric horn relay feed
 - E3 Heated rear windscreen relay feed
- 8 Control unit for optional equipment:
 - E1 Central locking control unit
 - E2 Electric front windows control unit
 - E3 Power relay (sun roof)
 - E4 Dipped beam headlamps/headlamp alignment correcter relay feed
 - E5 Fog lights control unit
 - E6 Rear fog lamps relay with fog lights switched on
- 9 Connection between dashboard cables and passenger side front door
- 10 Connection between dashboard cables and driver's side front door
- 11 Connection for dashboard cables with rear cables
- 12 Connection for dashboard cables with front cables
- 13 Cigar lighter
- 14 Instrument panel :
 - A Check-panel module
 - A1 Warning light signalling brake lights failure
 - B Fuel level gauge
 - B1 Fuel reserve warning light
 - C Water temperature gauge
 - C1 Engine coolant overheating warning light
 - D Engine oil pressure gauge
 - E Speedometer
 - F Rev counter
 - H Direction indicators warning light
 - I Handbrake warning light
 - G Clock
 - J Insufficient engine oil pressure warning light
 - L Insufficient brake fluid level warning light
 - M Anti-lock braking system failure warning light
 - N Maximum turbocharging pressure warning light
 - O Brake pad wear warning light
 - Q Water in the fuel filter warning light
 - R Warning light signalling doors ajar
 - S Heater plugs warning light
 - T Side lights warning light
 - T1 Ideogram light bulbs
 - U Main beam headlamps warning light
 - V Automatic transmission failure warning light
 - Z Injection system failure warning light
 - X Recharging system warning light
 - Y AIR-BAG circuit failure warning light
- 15 Switch unit :
 - A Heated rear windscreen control switch
 - B Heated rear windscreen warning light
 - C Switch unit ideograms light
 - D Rear fog lamps warning light
 - E Rear fog lamps control switch
 - F Fog lights warning light
 - G Fog lights control switch
- 15A Switch panel :
 - A Led signalling incorrect switching on of anti-theft device
- 16 Left dashboard earth
- 17 Right dashboard earth
- 18 Windscreen wiper motor with intermittent device incorporated
- 19 Electric windscreen/rearscreen washer pump
- 20 Brake lights control switch
- 21 Reversing lights control switch
- 22 Impulse generator for speedometer signal
- 23 Right front light cluster
- 24 Left front light cluster
- 25 Right fog light
- 26 Left fog light
- 27 Right electric horn
- 28 Left electric horn
- 29 Insufficient brake fluid level sensor
- 30 Left front brake pad wear sensor
- 31 Anti-lock braking system 10A protective fuse
- 32 Connection for anti-lock brakes cables
- 33 Front cables connection
- 33A Connection for front cables for automatic gearbox
- 34 Front cables connection
- 35 Connection for front cables with anti-lock brakes cables
- 36 Connector block
- 37 Heater unit controls :
 - A Car interior heater fan
 - B Car interior speed control switch
 - C Heater controls light bulbs
- 38 Right front earth
- 39 Left front earth
- 40 Switch signalling handbrake applied

Key

55D.

- 41 Right no. plate light
- 42 Left no. plate light
- 43 Right rear light cluster
- 44 Left rear light cluster
- 45 Courtesy lights
- 46 Luggage compartment light
- 47A Fuel level gauge
- 47B Electric fuel pump
- 48 Digital clock
- 49 Central locking remote control receiver
- 49A Anti-theft device remote control receiver
- 50 Connection for rear cables
- 51 Left rear earth
- 52 Right rear earth
- 53 Battery
- 54 Earth for battery
- 55 Heated rear windscreen
- 56 Rearscreen wiper motor
- 57 Radio
- 58 Speaker in right front door
- 59 Speaker in left front door
- 60 Right rear speaker
- 61 Left rear speaker
- 62 Left front speaker
- 63 Right front speaker
- 64 Engine cooling fan
- 65 Thermostatic switch for engine cooling fan
- 66 Sensor signalling engine coolant temperature
- 67 Headlamp alignment device control unit
- 68 Left headlamp alignment correcter
- 69 Right headlamp alignment correcter
- 70 Driver's side front electric window motor
- 71 Passenger side front electric window motor
- 72 Driver's side left front electric window control panel
- 73 Driver's side right front electric window control panel
- 74 Passenger side right front electric window control panel
- 75 Right front central locking geared motor and door ajar signal
- 76 Left front central locking geared motor and door ajar signal
- 77 Connection for left rear door rear cables
- 78 Connection for right rear door rear cables
- 79 Left driver's side rear central locking motor and door ajar signal
- 80 Right side rear central locking motor and door ajar signal
- 81 Electric sun roof end of travel position switch
- 82 Electric sun roof operating motor
- 83 Electronic control unit for electrically operated sun roof
- 84 Electric sun roof control switch
- 85 Sensor signalling water in the fuel filter
- 86 Switch signalling insufficient engine oil pressure
- 87 30A protective fuse for engine cooling fan
- 88 30A protective fuse for air conditioning system
- 89 Engine cooling fan
- 90 Engine cooling fan speed adjustment resistor
- 91 Fuse and relay control box for air conditioning :
 - A Cooling fan 2nd speed engagement timer
 - B Cooling fan 1st speed engagement relay
 - C Cooling fan 2nd speed engagement relay
 - D Compressor coupling engagement auxiliary relay
 - E Compressor coupling engagement relay
 - F 3A protective fuse for fan 2nd speed
 - G 7.5A protective fuse for compressor electro-magnetic coupling
- 92 Three stage pressure switch for air conditioner
- 93 Thermostatic switch with twin contact on radiator
- 94 Compressor for air conditioner
- 95 Electronic control unit for air conditioning system (Nippondenso)
- 96 Evaporator area temperature sensor
- 97 Rpm sensor
- 98 Control unit for switching off compressor (Biron)
- 99 Air conditioning system on switch
- 100 Air conditioning system electric fan relay feed
- 101 Relay for engaging electric fan 1st speed
- 102 Air conditioner electric fan control switch
- 103 Additional resistor
- 104 Air conditioner unit electric fan
- 106 Electric headlamp washer pump
- 107 Timer for headlamp washer
- 108 AIR-BAG loading protection (driver's side)
- 109 AIR-BAG device cables connection
- 110 Electronic control unit for AIR-BAG
- 111 AIR-BAG loading protection (passenger side)
- 112 Diagnostic socket for AIR-BAG device
- 113 Electronic control unit for anti-lock brakes (A.B.S.)
- 114 Diagnostic socket for anti-lock braking system
- 115 Sensor on left front wheel (A.B.S.)
- 116 Sensor on right front wheel (A.B.S.)
- 117 Sensor on left rear wheel (A.B.S.)
- 118 Sensor on right rear wheel (A.B.S.)
- 119 BOSCH fuel injection control unit (1372 Turbo i.e.)
- 120 Engine oil pressure gauge sensor
- 121 Connection for electric sun roof cables
- 122 5A protective fuse for injection system (10A for the Turbo i.e. version)
- 123 25A protective fuse for the injection electric pump, Lambda sensor and injectors (20A for the 1108, 1242 versions)
- 124 Multiple relay
- 125 Heated Lambda sensor
- 126 Potentiometer on throttle valve
- 127 Water temperature sensor
- 128 Air temperature sensor
- 129 Absolute pressure sensor
- 130 Earth on engine
- 131 Earth on control unit

- 132 I.A.W. electronic injection and ignition control unit
- 133 Ignition coil unit
- 134 Spark plugs
- 135 Stepping actuator
- 136 Canister solenoid valve
- 137 Rpm and T.D.C. sensor.
- 138 Diagnostic socket for injection system
- 139 Alternator
- 140 Starter motor
- 141 Injector
- 142 Car interior air recirculation control switch
- 143 Car interior air recirculation actuator
- 144 Car interior recirculation control
- 145 Air conditioner / heater controls light bulbs
- 146 Electrically adjustable, heated left door mirror
- 147 Electrically adjustable, heated right door mirror
- 148 Control panel for electrically adjustable door mirrors
- 150 20A protective fuse for headlamp washer device
- 151 Dipped headlamps / headlamp alignment corrector relay feed
- 152 Fog lights relay
- 153 Rear fog lamps relay with fog lights on
- 154 20A protective fuse for fog lights
- 155 Electric front windows electronic control unit
- 156 30A protective fuse for electric front windows
- 157 Electronic control unit for central locking system
- 158 20A protective fuse for central locking system
- 159 Switch for de-activating electric fuel pump
- 160 Heated driver's seat control unit
- 161 Driver's seat heater pad
- 162 Air conditioning unit cables connection
- 163 Connection for front cables
- 164 Connection for front cables
- 165 Connection for Air-Bag cables
- 166 Electronic control unit for anti-theft device
- 167 Diagnostic socket (anti-theft device)
- 168 Connection for anti-theft device cables
- 169 Connection for anti-theft device cables
- 170 Connection for anti-theft device cables
- 171 Push button on bonnet lid for switching on anti-theft device
- 172 Magnetic sensor on clutch
- 173 Solenoid valve signalling engine oil pressure
- 174 15A protective fuse for automatic gearbox
- 175 Automatic gearbox relay feed
- 176 Display showing gear selector and signalling gears engaged
- 177 Vehicle speed sensor
- 178 Safety electronic control unit for automatic gearbox
- 179 Shift-lock electro-magnet
- 180 Ignition switch electro-magnet
- 181 Electronic control unit for automatic gearbox
- 182 Diagnostic socket for automatic gearbox
- 183 Switch on accelerator for automatic gearbox
- 184 Switch on accelerator for automatic gearbox
- 185 Cable connection for multiple bridges
- 186 Multi-purpose switch on automatic gearbox
- 187 Throttle valve potentiometer for automatic gearbox
- 188 Power module
- 189 Pierburg solenoid valve (Waste-Gate)
- 190 Idle adjustment actuator
- 191 Injector cooling fan switch
- 192 Connection for front cables
- 193 Injection system relay feed
- 194 Relay for Lambda sensor, electric fuel pump
- 195 10A protective fuse for electric fuel pump
- 196 10A protective fuse for Lambda sensor
- 197 Timing sensor
- 198 Detonation sensor
- 199 Distance corrector
- 200 Earth signal
- 201 Power earth
- 202 Air flow meter
- 203 Injector cooling fan
- 204 20A protective fuse for injector cooling
- 205 Pre-heating electronic control unit
- 206 Heater plugs
- 207 Water temperature sensor for K.S.B.
- 208 K.S.B. solenoid valve
- 209 Solenoid valve on injection pump
- 210 Switch signalling maximum turbocharging pressure
- 211 Switch for luggage compartment light and anti-theft device
- 212 Emergency switch for switching off anti-theft device (key)
- 213 Full load switch for air conditioner
- 214 Thermostatic switch for air conditioning compressor
- 215 Heated fuel filter relay feed
- 216 20A protective fuse for heated fuel filter
- 217 Heated fuel filter (P.T.C.)
- 218 Injection system relay feed (Turbo Diesel)
- 219 Timer for engine cooling fan 2nd speed
- 220 Relay for engine cooling fan 2nd speed
- 221 Relay for engine cooling fan 1st speed
- 222 Compressor coupling relay
- 223 3A protective fuse for engine cooling fan 2nd speed circuit
- 224 7.5A protective fuse for compressor electro-magnet coupling
- 225 Connection for air conditioner front cables
- 226 Electronic control unit for anti-pollution device (E.G.R.)
- 227 Potentiometer on injection pump
- 228 Water temperature sensor (E.G.R.)
- 229 Solenoid valve for E.G.R. device
- 230 Diagnostic socket for E.G.R. device