


PUNTO eMANUAL

Bodywork

Title	Page
Removing/replacing & adjustments	1 ➡

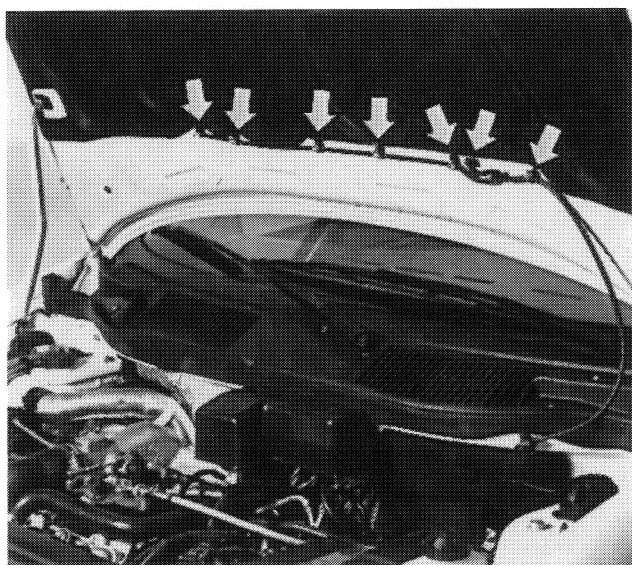

P3M019M01

REMOVING-REFITTING


- Raise the bonnet lid, then release the windscreen washer pipe from the retaining bands;
- disconnect the windscreen washer pipe from the jets, on the bonnet lid;



P3M019M02

0,74 daNm

- undo the bolts fixing the hinges to the bonnet lid;
- remove the bonnet lid, with the help of a second operator;
- after refitting, tighten the bolts fixing the hinges to the bonnet lid to torque.

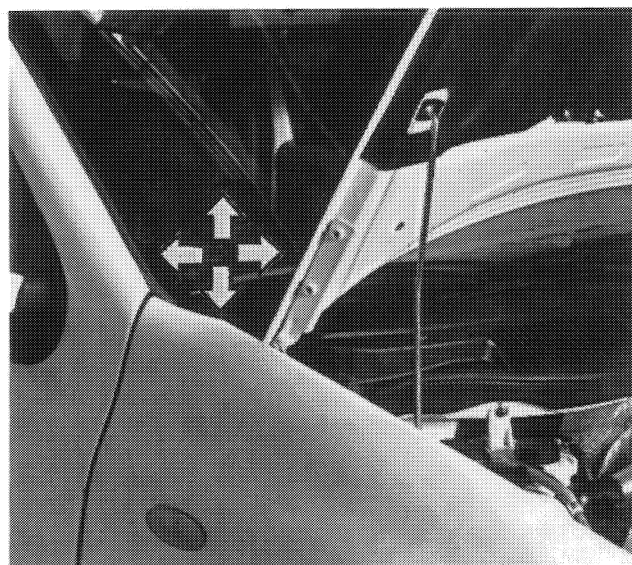

P3M019M03

ADJUSTMENTS

0,74 daNm


Adjusting position of bonnet lid

- Loosen the bolts fixing the hinges, then adjust the position of the bonnet lid;


NOTE The arrows indicate the possible movements.

- when the adjustment has been carried out, tighten the hinge fixing bolts to the recommended torque.

70.

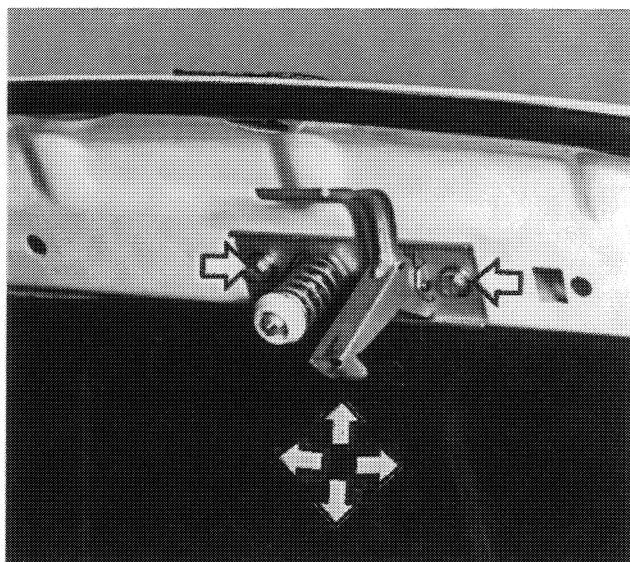


P3M020M01

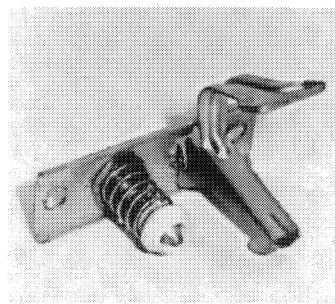

P3M020M02

Removing-refitting and adjusting bonnet release

NOTE *The arrows show the possible movements.*

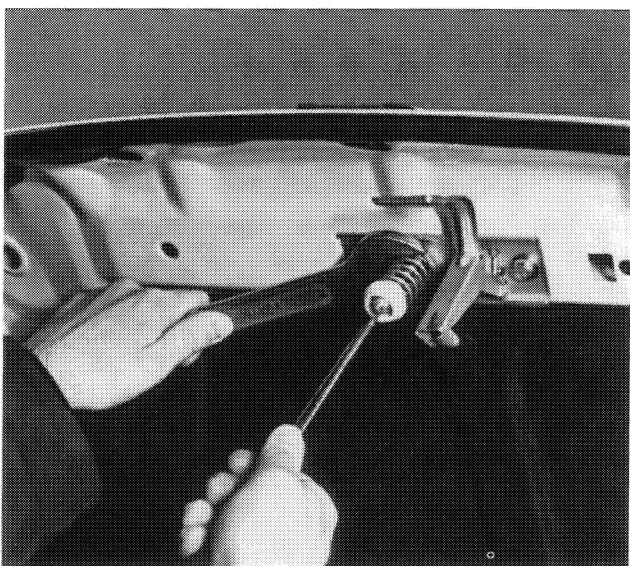


P3M020M03



Adjusting vertical position of bonnet lid

- Working as illustrated in the diagram, adjust the vertical position of the bonnet lid;

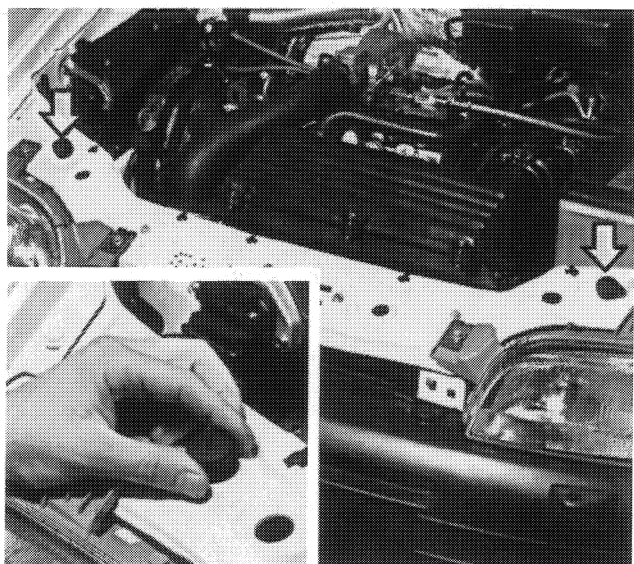


P3M020M04

P3M020M05




- check and, if necessary, adjust the vertical position of the lid, turning the rubber mountings at the ends of the engine compartment appropriately.

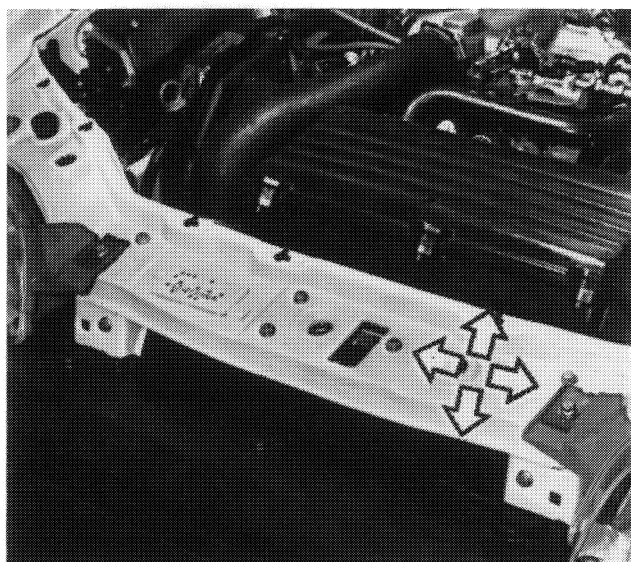

P3M021M01

Adjusting the bonnet lid lock striker


NOTE The arrows indicate the possible movements for the adjustment of the striker.

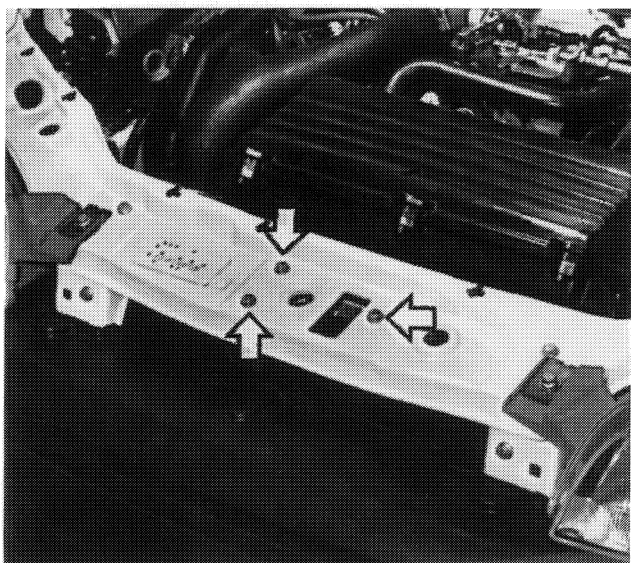



P3M021M02

Removing-refitting bonnet lid lock striker

- Undo the bolts shown and extract the striker;

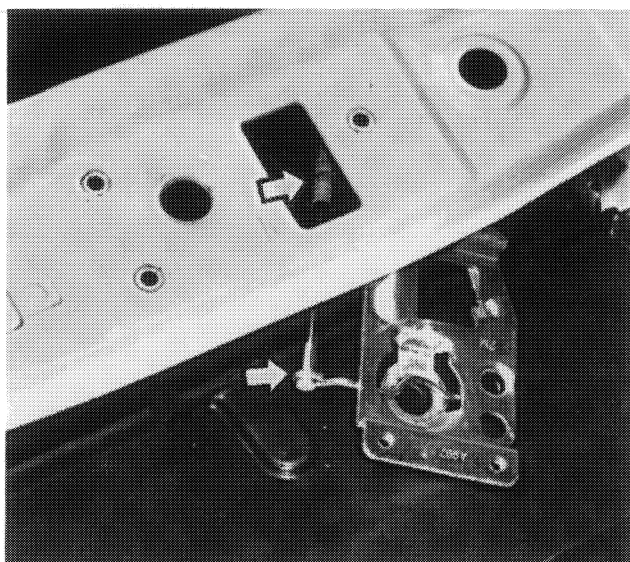

P3M021M03

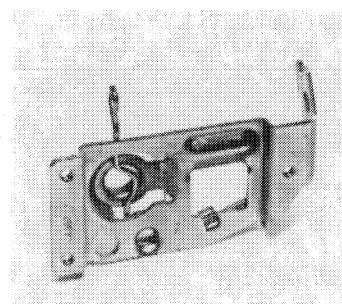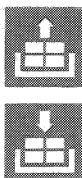

P3M021M04

- disconnect the bonnet opening control rod and remove the bonnet lid lock striker.