


PUNTO eMANUAL


Bodywork

Title	Page
Removing/replacing front	1 ➡
Removing/replacing rear	3 ➡

FRONT BUMPER

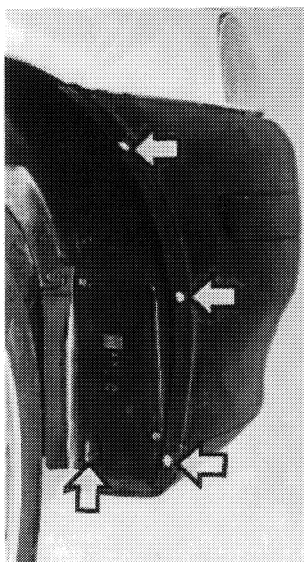


P3M015M01

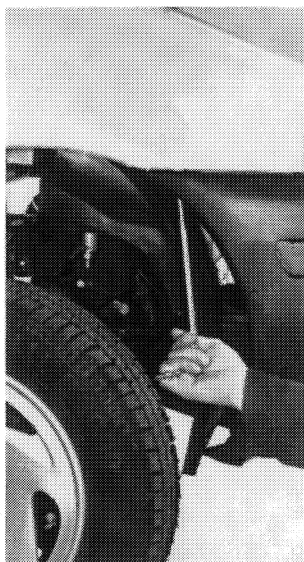

P3M015M02


Removing

- Undo the fixing bolts for the wheel arch liner to gain access to the fixing points beneath the bumper (left inset);
- move the wheel arch liner aside;
- undo the bolt fixing the bumper to the wing (right inset);

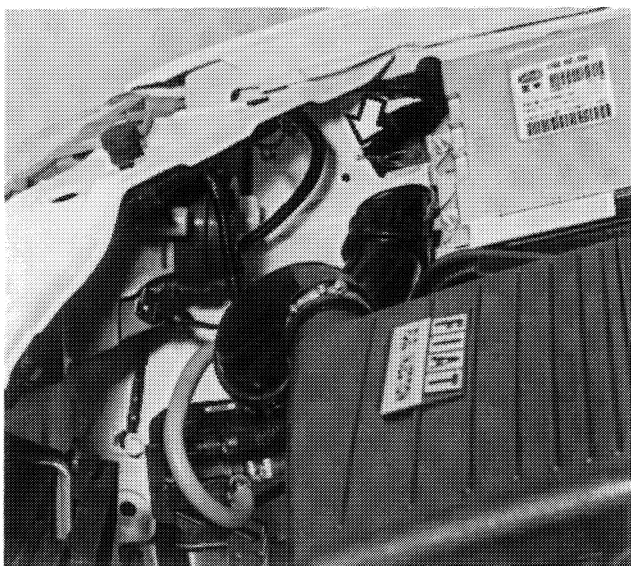


P3M015M03

- release the spring retaining the front direction indicator;

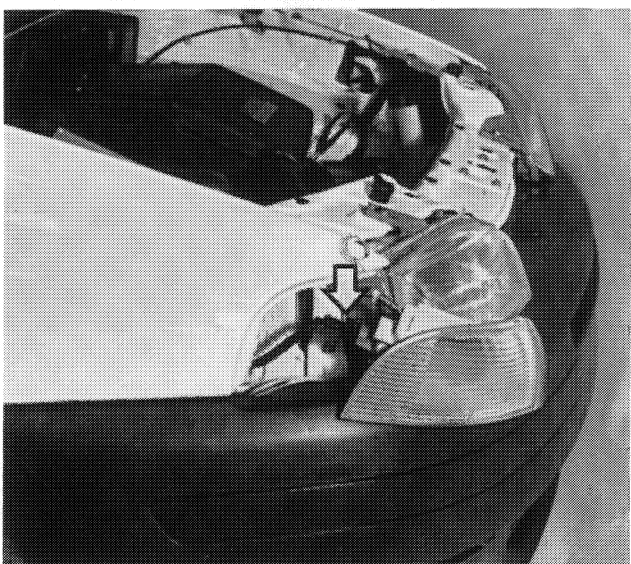


P3M015M04

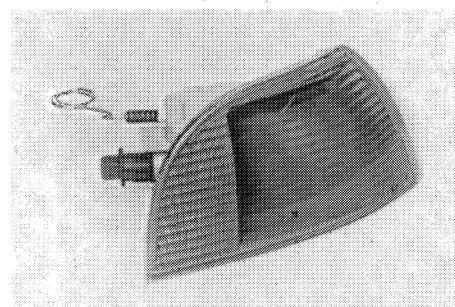

P3M015M05

- remove the connector shown and remove the direction indicator;


70.

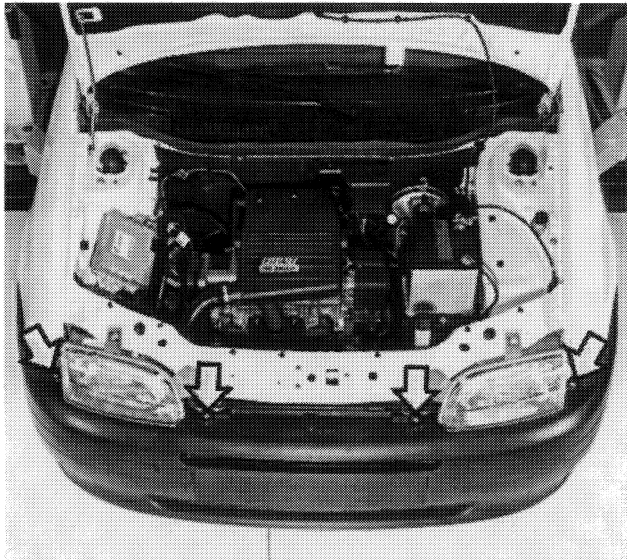



P3M016M01



- undo the upper fixing bolts for the front bumper;

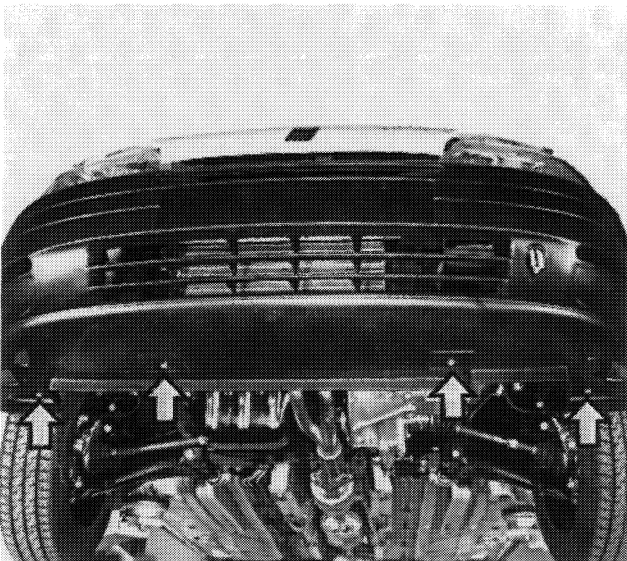


P3M016M02

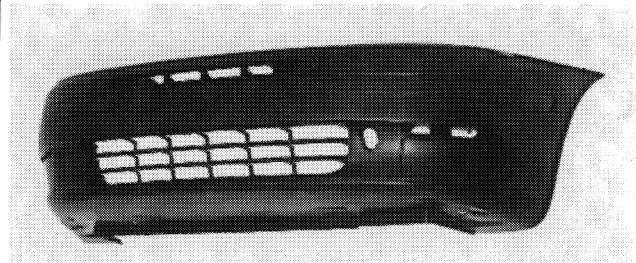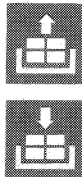

P3M016M03

- remove the front bumper from the bodyshell, undoing the lower fixing bolts shown in the diagram;

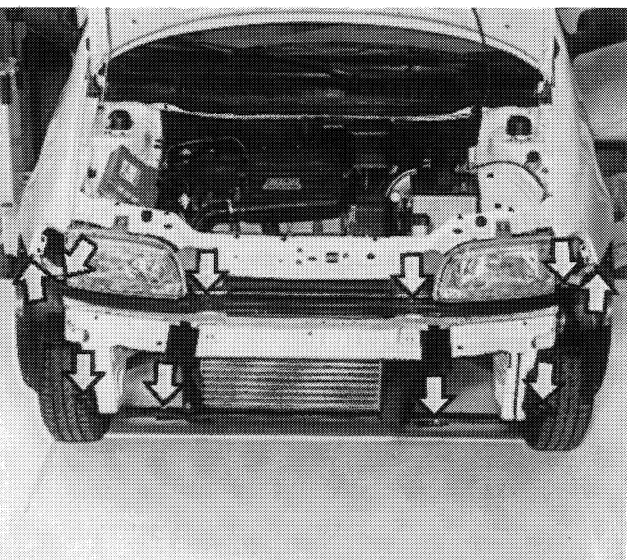

P3M016M04




Refitting

When refitting, simply reverse the order of the operations carried out for the removal.

NOTE *The arrows show the fixing points for the bumper and the bodyshell.*



P3M017M01

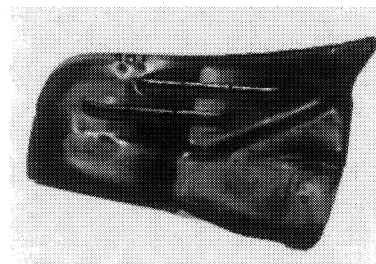**REAR BUMPER**

P3M017M02

Removing

- Remove the rear wheel arch liner, after having removed the fixing bolts and nut;



P3M017M03



- undo the upper fixing bolts for the rear bumper;




P3M017M04





- undo the bolt fixing the bumper to the rear wing;

70.

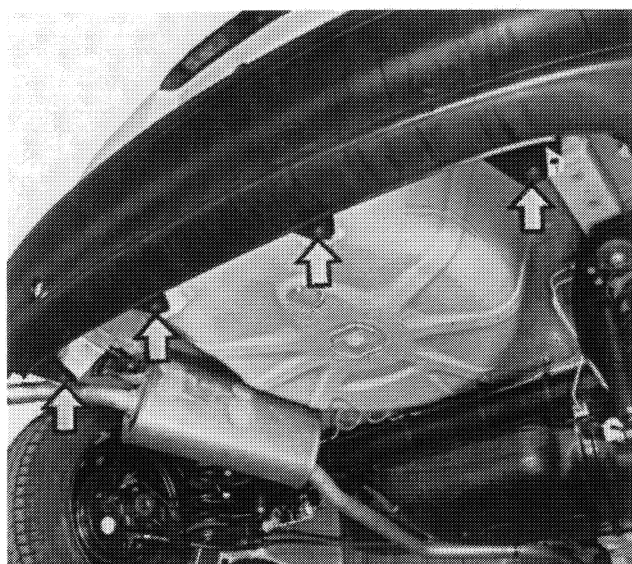


P3M018M01

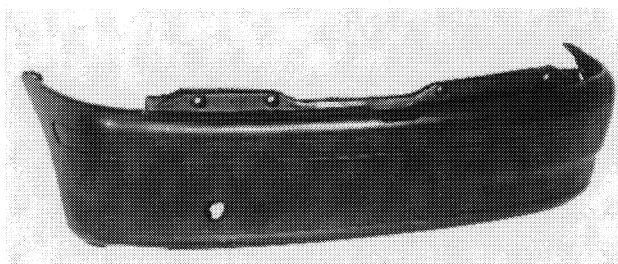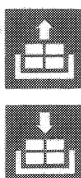

P3M018M02

- remove the rear bumper from the bodyshell, undoing the lower fixing bolts shown in the diagram;

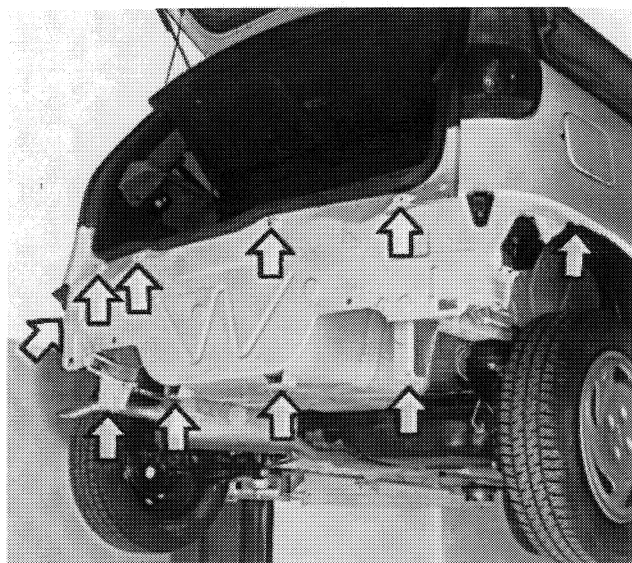


P3M018M03





Refitting

When refitting, simply reverse the order of the operations carried out for the removal.

NOTE *The arrows show the fixing points for the bumper and the bodyshell.*

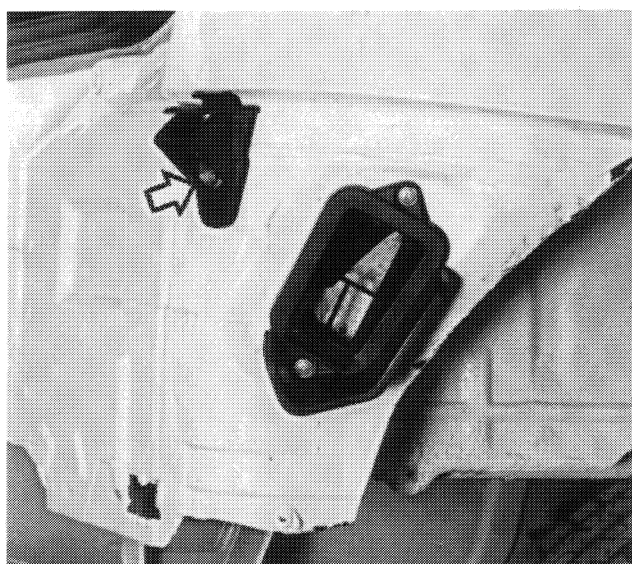

P3M018M04

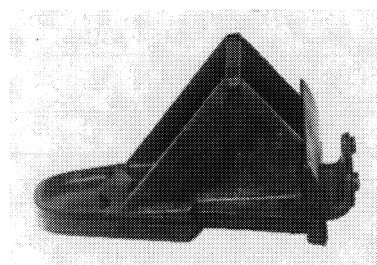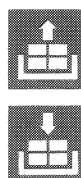

P3M018M05

Removing-refitting rear bumper guide

- Remove the bumper following the instructions given on the previous page;
- remove the guide, undoing the fixing bolt shown in the diagram.