


# PUNTO eMANUAL

Bodywork

Title	Page
Removing/refitting boot lid .....	1 ➡
Replacing lock .....	2 ➡

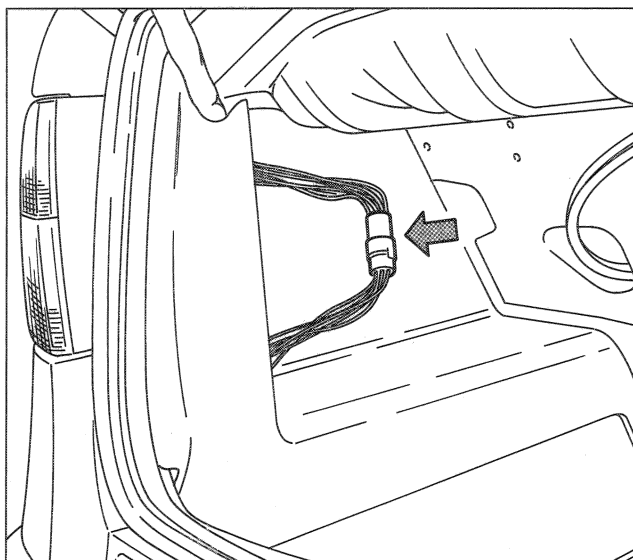


P3M65BM02 P3M65BM01




## REMOVING-REFITTING BOOT LID

- Lift up the boot lid, open the special access flap and disconnect the connector shown;

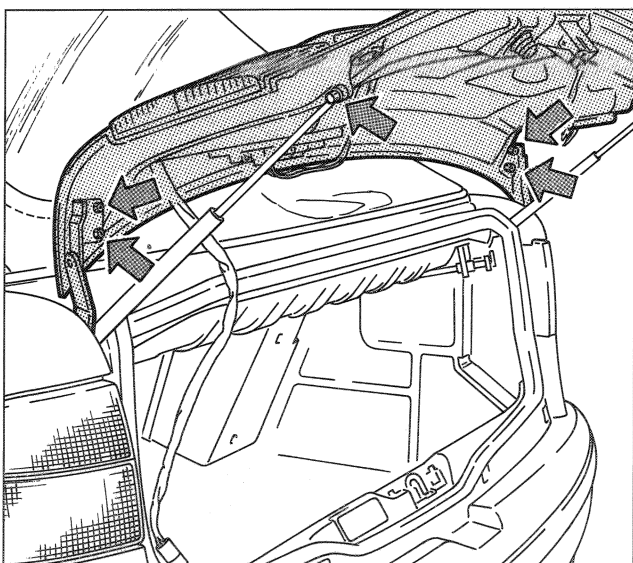


P3M65BM04 P3M65BM03

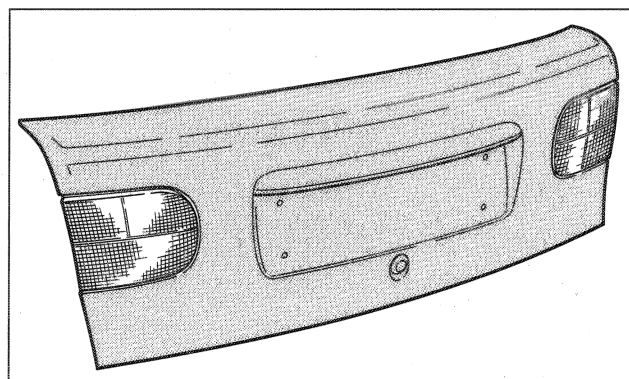

P3M65BM05

- remove the boot lid from the vehicle after having undone the nuts fixing the hinges and the compensators;
- to refit, simply reverse the order of the operations carried out for the removal.

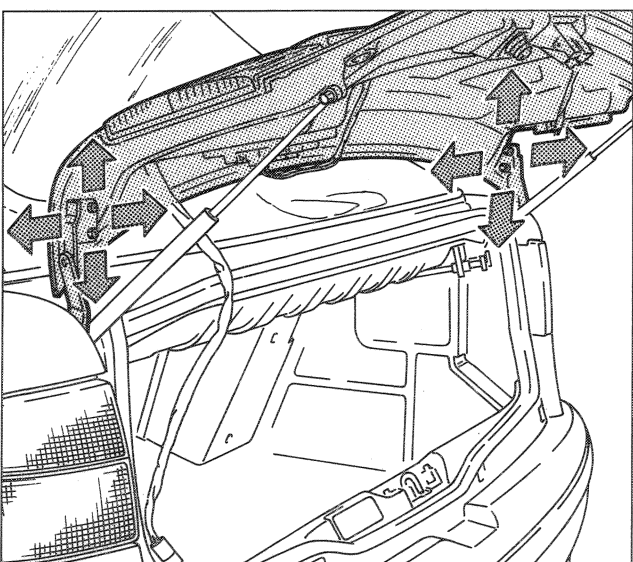


P3M65BM07 P3M65BM06




## ADJUSTING BOOT LID

Adjust the position of the tailgate, moving the hinge in the adjustment slot appropriately in the directions shown by the arrows.

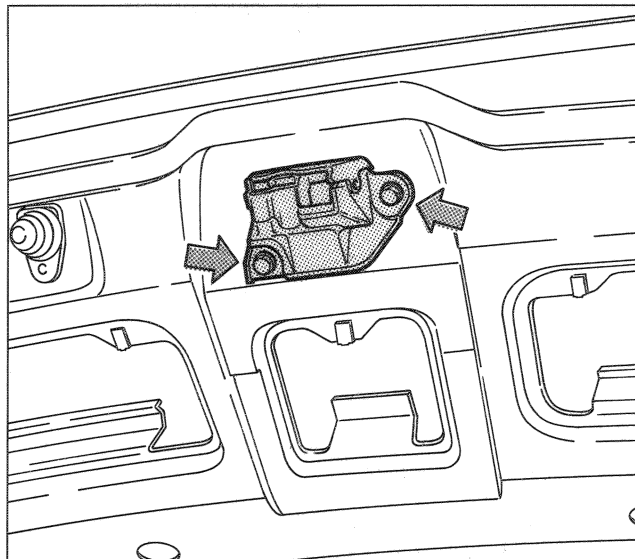

P3M66BM02 P3M66BM01


#### REPLACING LOCK BARREL

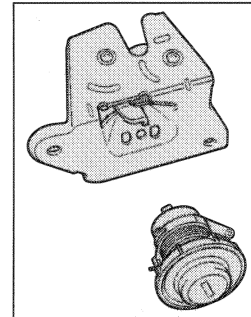

P3M66BM03


#### Order of operations

- Undo the bolts shown and remove the boot lid closing device;
- separate the lock barrel from the closing device;

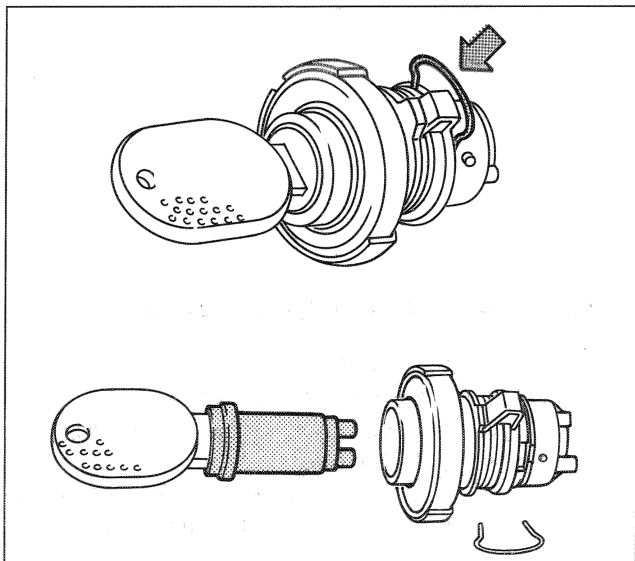

P3M66BM05 P3M66BM04

- insert the key in the barrel, then extract the circlip;
- extract the barrel, then replace it;
- to refit, simply reverse the order of the operations carried out for the removal.

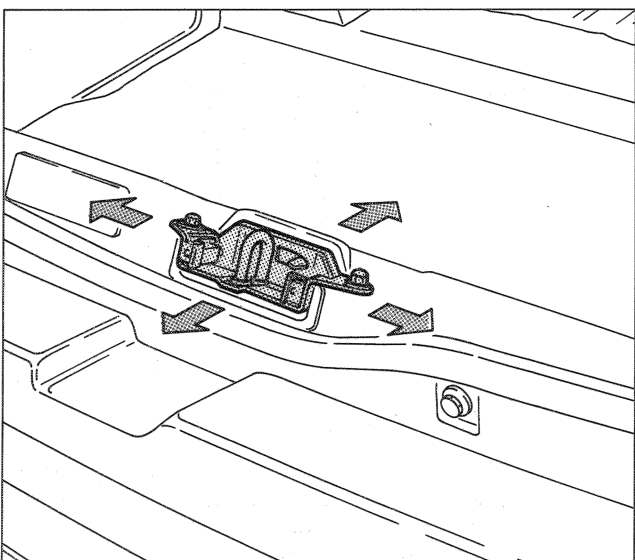

P3M66BM07 P3M66BM06

#### ADJUSTING POSITION OF BOOT LID LOCK STRIKER

**NOTE** *The arrows indicate the possible movements for adjusting the striker.*