



PUNTO eMANUAL

Bodywork

Title	Page
Removing/refitting rear side lowering window	1 ➡
Adjustment	4 ➡
Rear seat backrest lock	5 ➡
Removing/refitting rear seat belts	7 ➡

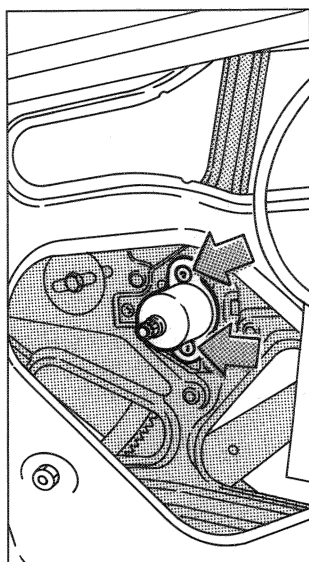

P3M45BM02 P3M45BM01

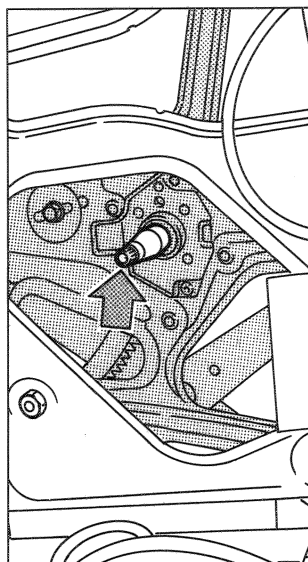

P3M45BM04 P3M45BM03




REMOVING-REFITTING REAR SIDE LOWERING WINDOW GLASS

Preliminary operations

- Remove the rear wing inner lining, following the instructions given on page 1 onwards;
- place the window in the completely lowered position, then move the fabric protection away.

Removing


- Remove the protection for the window opening pin by undoing the bolts shown (left inset);
- undo the window opening pin and extract it from the housing (right inset);

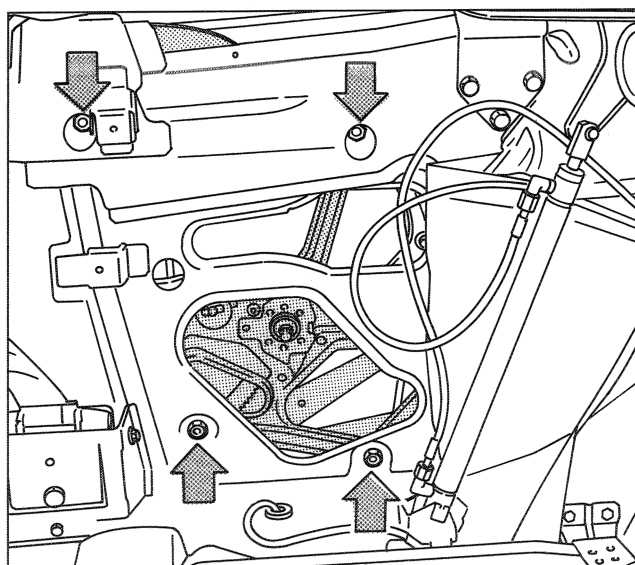


P3M45BM06 P3M45BM05



- undo the nuts fixing the window opening frame to the bodyshell;
- place the window in the closed position and undo the upper and lower adjustment pins;

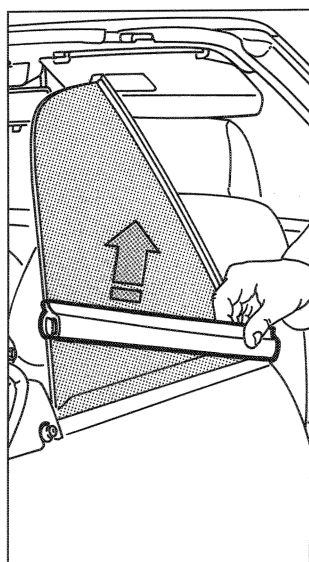

P3M45BM08 P3M45BM07

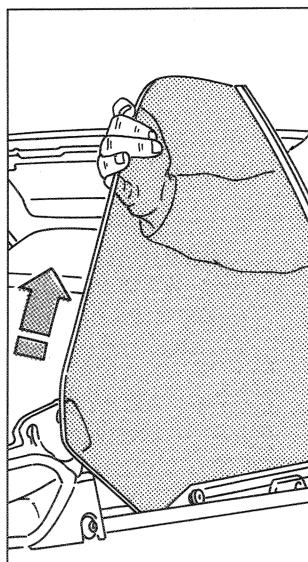


P3M45BM10 P3M45BM09




- move the outer window trim away and then extract the window complete with frame.

70.

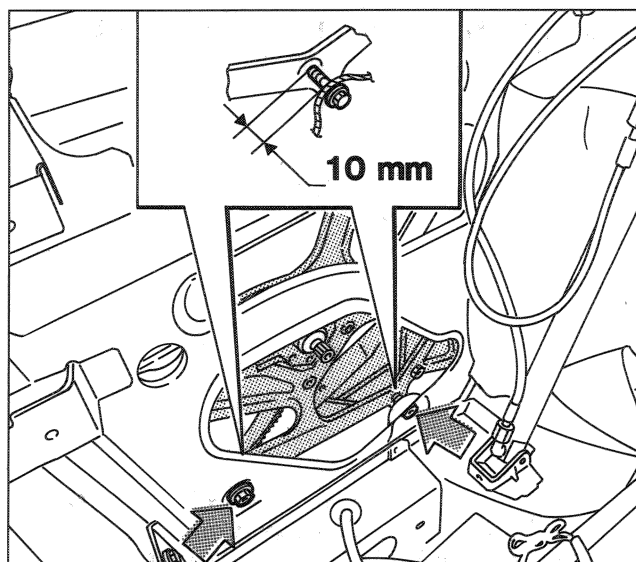


Refitting

- Place the window complete with window opening guide in the rear wing housing;
- fit the adjustment pins between the window opening and the bodyshell;
- ensure that there is a distance of about 10 mm between the window opening and the bodyshell and the lower adjustment pins, then tighten the appropriate nuts;

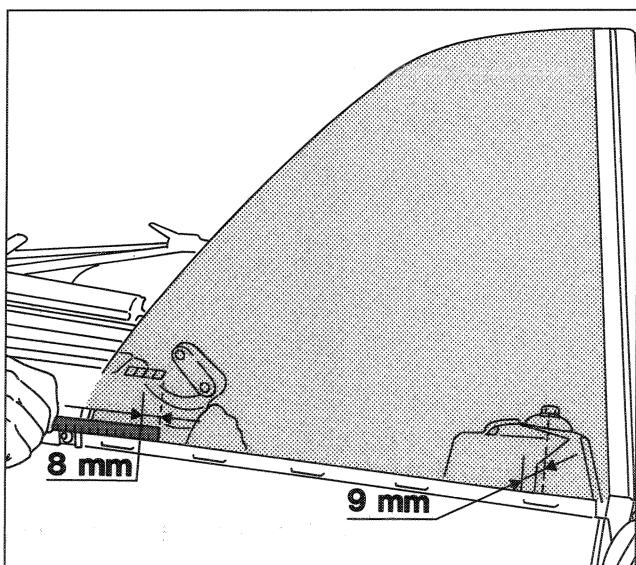

- place the window in the closed position;
- check that the distance between the window and the edge of the wing, at the height of the seat belts, is between 8 and 9 mm taking the serigraphy shown in the diagram as a reference point;

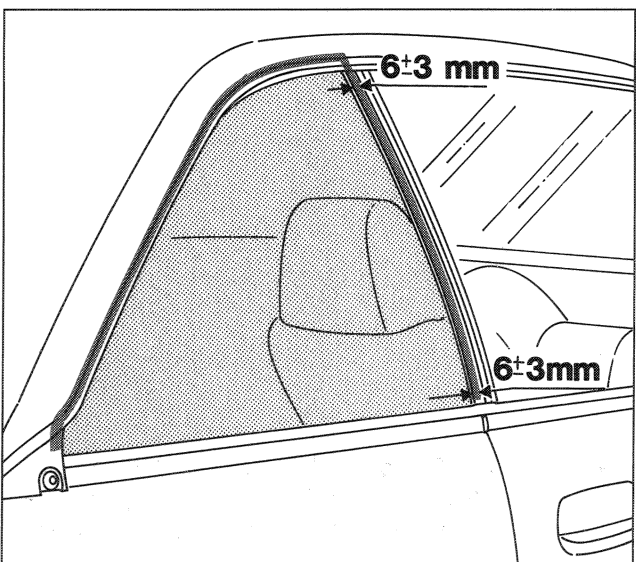


- place the hood and the window in the closed position;
- check that the profile and the distances are between 3 and 6 mm between the front window and the rear window seal;



See page 48 for the relevant adjustments.


- complete the refitting by suitably reversing the order of the operations carried out for the removal.

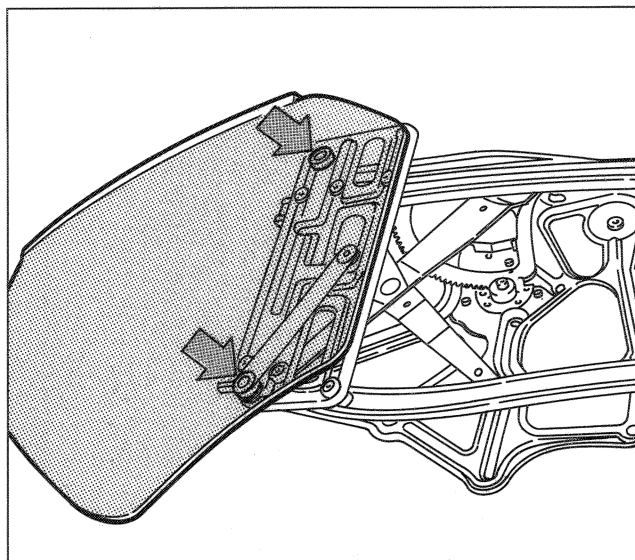

P3M47BM02 P3M47BM01


REMOVING REAR SIDE LOWERING WINDOW GLASS

- Remove the window complete with guide as shown in pages 45 and 46;
- remove the bolts shown in the diagram;

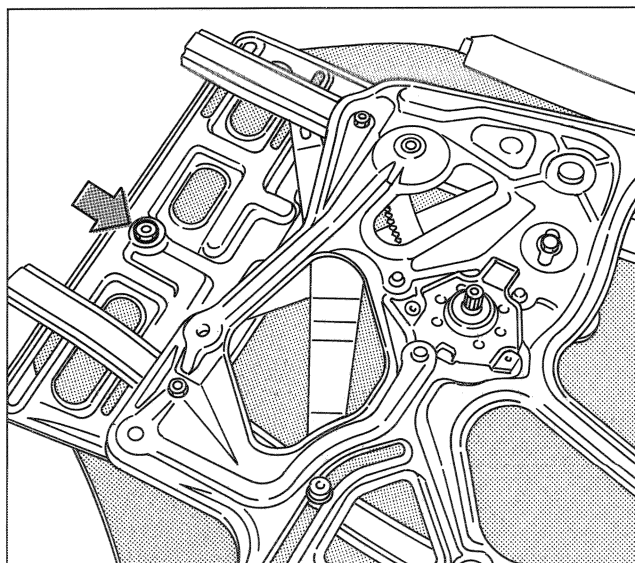

P3M47BM04 P3M47BM03

- undo the fixing nut between the guide and the window;

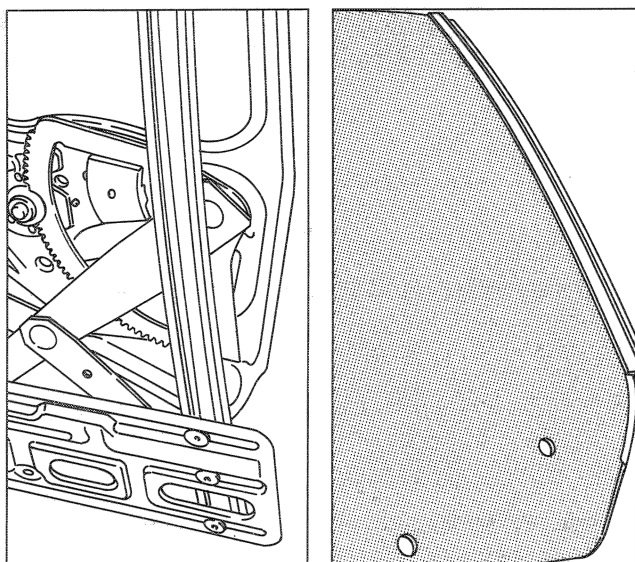


P3M47BM05

P3M47BM06

- separate the guide from the window;
- when refitting, suitably reverse the order of the operations carried out for the removal.

70.

ADJUSTING REAR SIDE LOWERING WINDOW GLASS POSITION

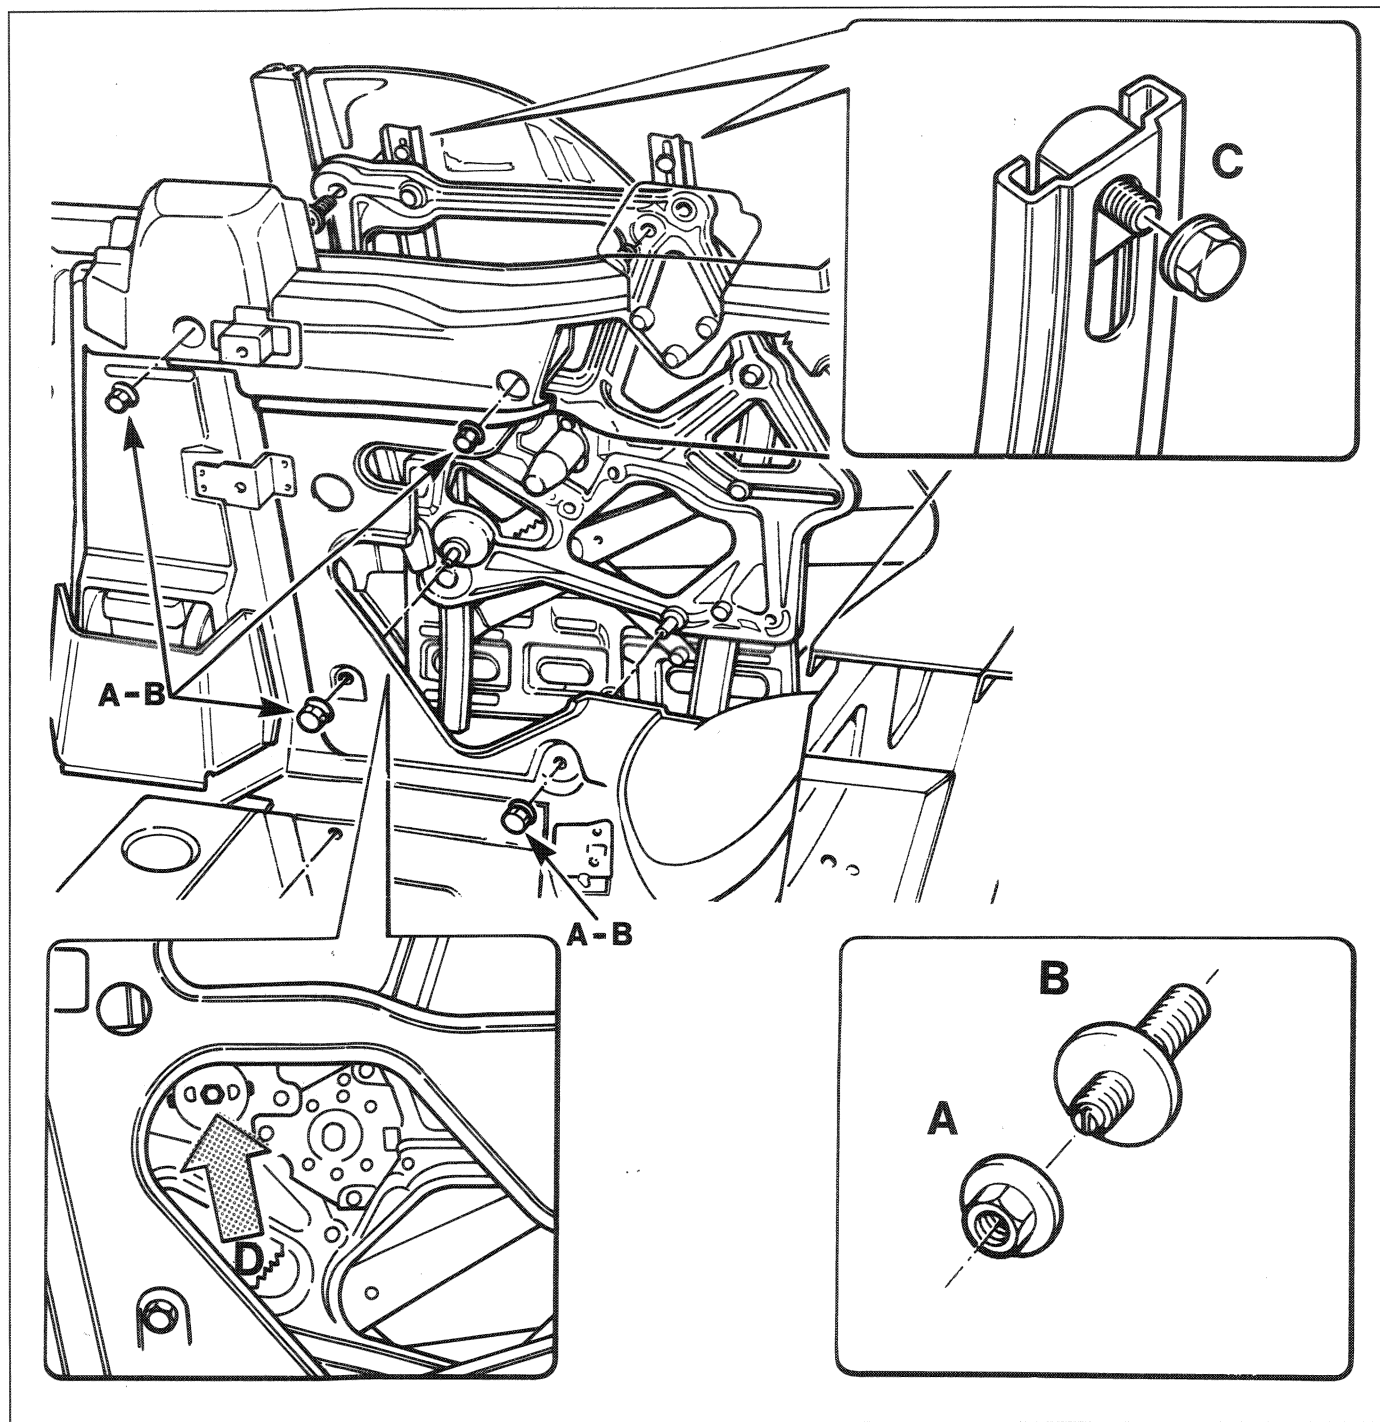

P3M08AM02 P3M08AM01

- Loosen the nuts (A) fixing it to the bodyshell and regulate the adjustment pins (B) to move the window closer to or further away from the hood and the door;
- when the adjustment has been carried out, tighten the nuts (A).





The bolts (C) are for adjusting the end of travel position and allow a rocking adjustment of the window.


The bolt (D) is for adjusting the end of travel position for the window opening rack, if necessary.

NOTE *The numerous adjustments are due to the need for the even adhesion of the window along the entire perimeter, the hood seal, the outer glass trim and the door window.*


P3M28BM04 P3M28BM03

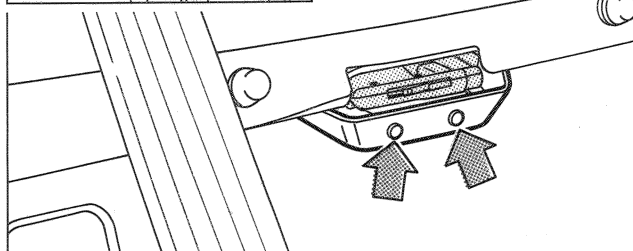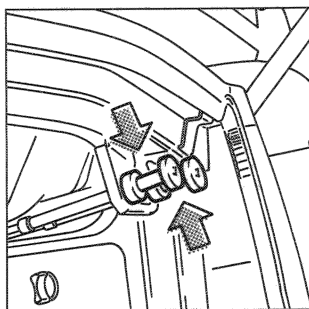

P3M49BM02 P3M49BM01

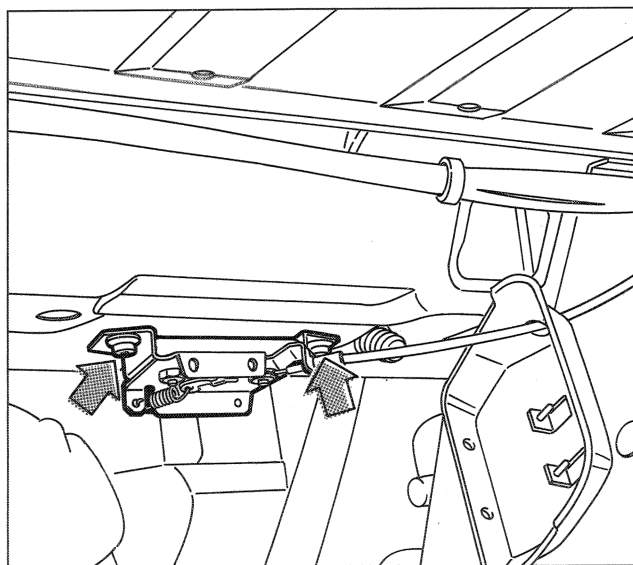

P3M49BM04 P3M49BM03

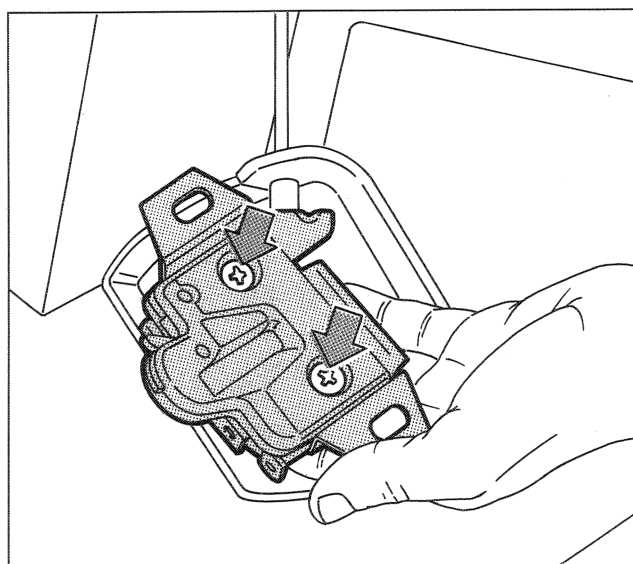

P3M49BM06 P3M49BM05

REAR SEAT BACKREST LOCK


Removing-refitting rear seat backrest lock

- Release the seat backrest working from the luggage compartment as illustrated in the inset;
- remove the lock cover removing the relevant fixing bolts;


- remove the lock fixing the backrest to the bodyshell by undoing the bolts shown;

- dismantle the lock, acting on the bolts shown in the diagram;


70.

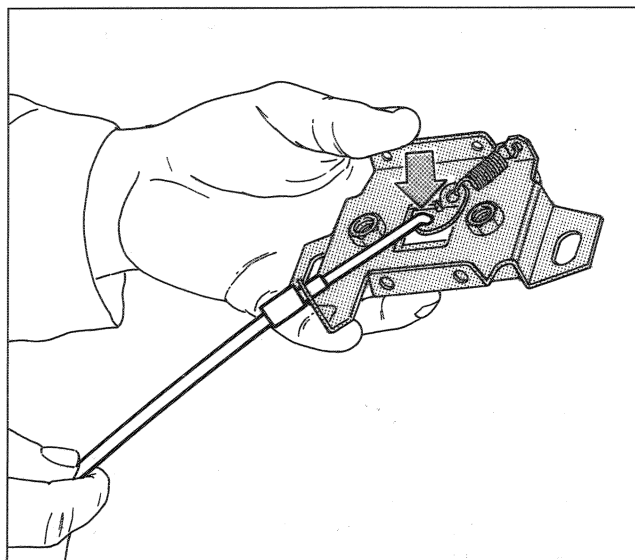

P3M50BM02 P3M50BM01

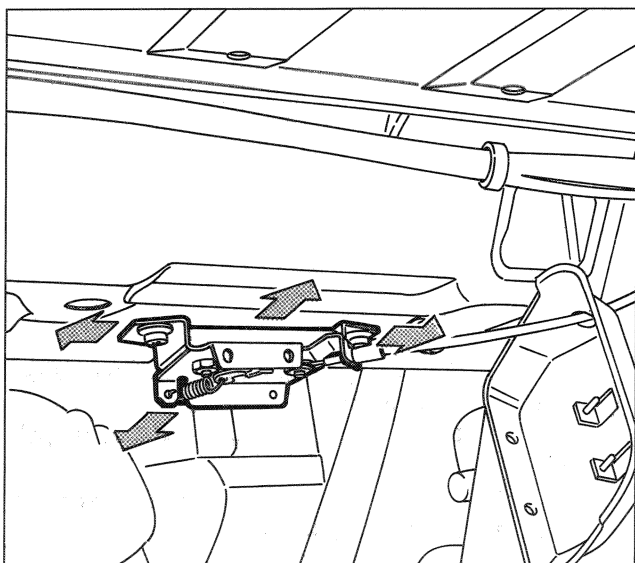

P3M50BM04 P3M50BM03

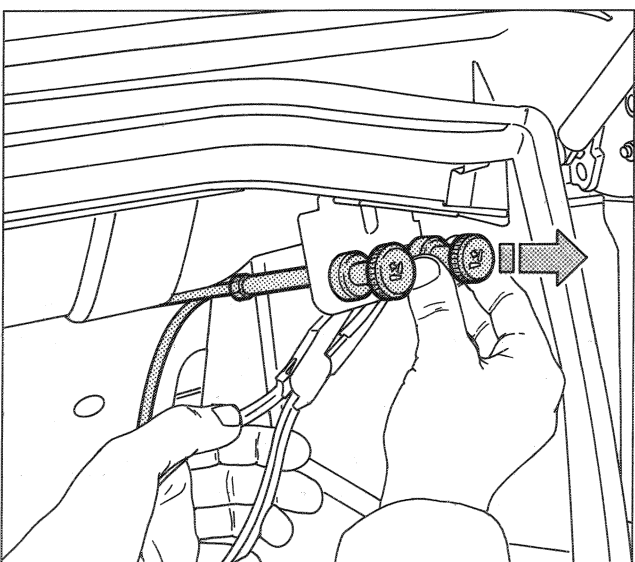


P3M50BM06 P3M50BM05

- remove the lock, after having released the rod from its housing;
- to refit, simply reverse the order of the operations carried out for the removal.

Adjusting rear seat backrest lock

Remove the backrest lock cover as described on page 49.


NOTE *The arrows indicate the possible movements for the adjustment of the backrest lock.*

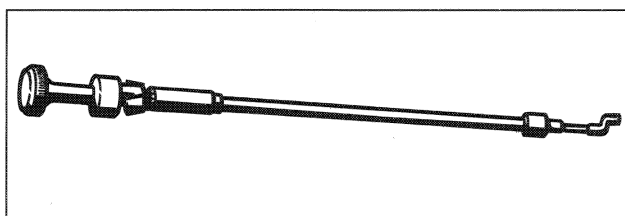


P3M50BM07

Removing-refitting backrest lock rod


- Remove the backrest lock, working as described above;
- remove the rod from its housing acting on the retaining tabs;
- to refit, simply reverse the order of the operations carried out for the removal.

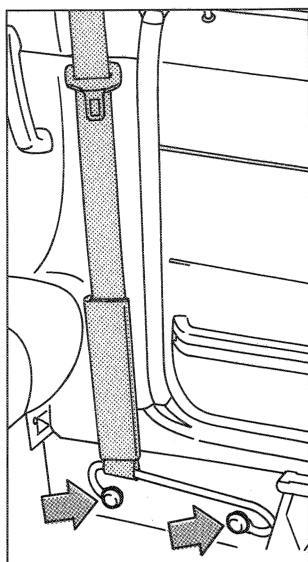

P3M51BM02 P3M51BM01

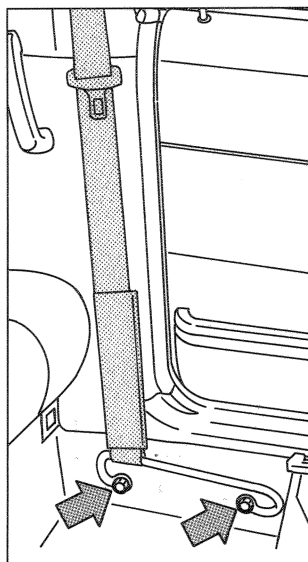


P3M51BM04 P3M51BM03

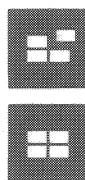

REMOVING-REFITTING SEAT BELTS

Removing front belt

- Remove the fixing covers for the belt attachment bracket;
- undo the bolts fixing the bracket and remove the belt;

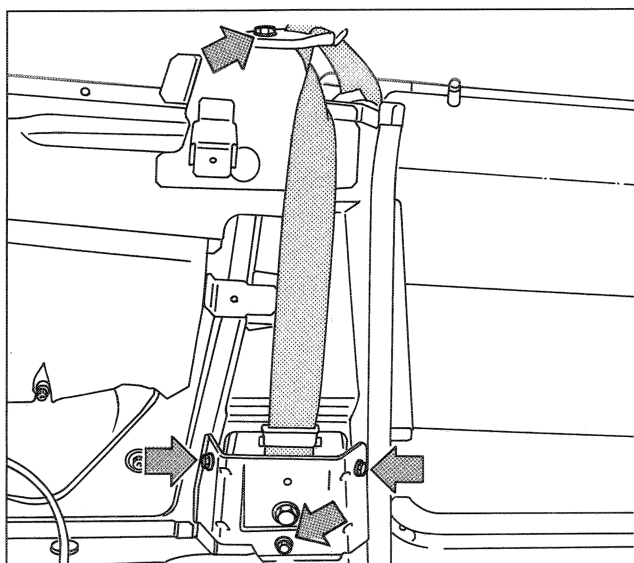


P3M51BM06 P3M51BM05




4 daNm

- remove the wing inner lining as described on page 1 onwards;
- extract the belt removing the fixing bolts shown;
- to refit reverse the order of the operations carried out for the removal.

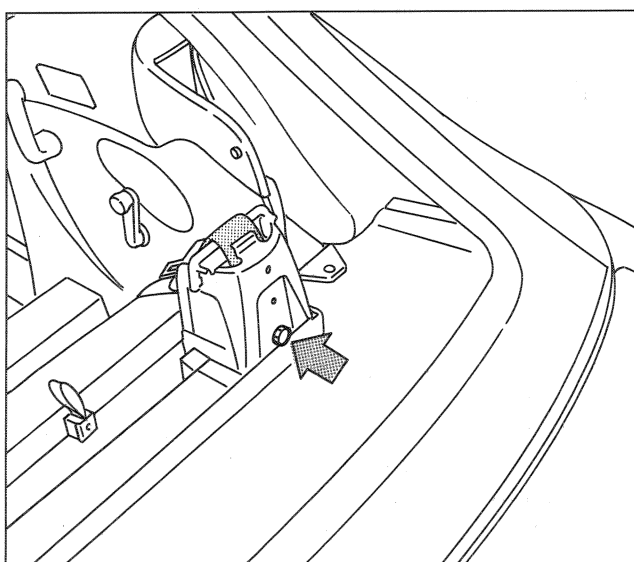

P3M51BM08 P3M51BM07

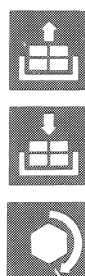

Removing rear belt

4 daNm

Before removing the belt the head restraint must be removed following the instructions given on page 63 onwards;

- remove the belt undoing the bolt fixing the reel to the rear parcel shelf;
- to refit reverse the order of the operations carried out for the removal.