

PUNTO eMANUAL

Bodywork


Title	Page
Removing/refitting cover & panel	1 ➡
Door mirror	4 ➡
Removing outer door handles	5 ➡
Lock	6 ➡
Removing/refitting glass	8 ➡
Window winder	9 ➡
Removing/refitting interior wiring	10 ➡
Partial replacements	11 ➡
Removing/refitting door	12 ➡
Adjustments	13 ➡



P3M001M01



REMOVING-REFITTING DOOR PROTECTIVE COVER AND PANEL

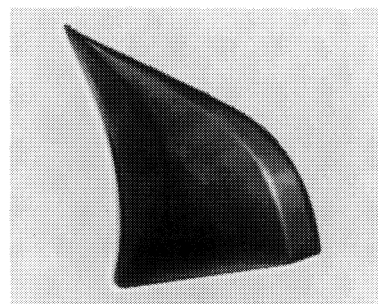


P3M001M02

Removing

- Remove the door mirror fixing cover trim;



P3M001M03

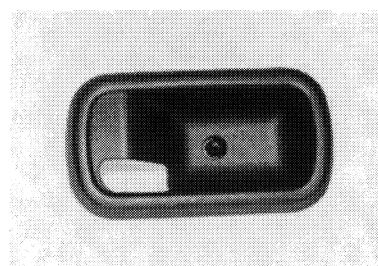

P3M001M04

- loosen the fixing bolt shown, then extract the trim releasing from the door opening control lever;



P3M001M05




- adjust the retaining tabs and extract the electric windows and door mirror adjustment control panel;

70.




P3M002M01

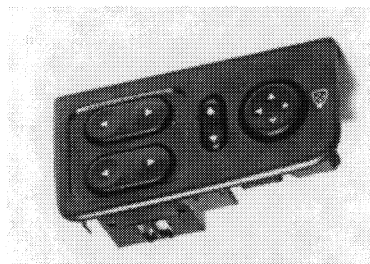

P3M002M02


- disconnect the supply connectors, then remove the electric windows and door mirror adjustment control panel;

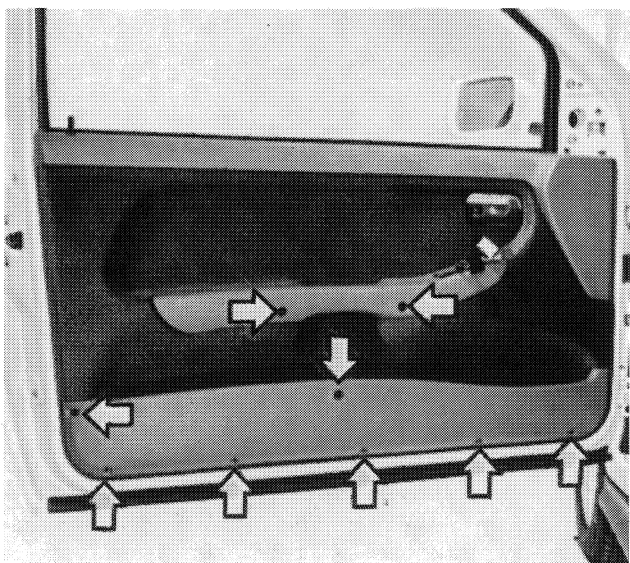

P3M002M03



- loosen the bolts fixing the door panel to the bodyshell;

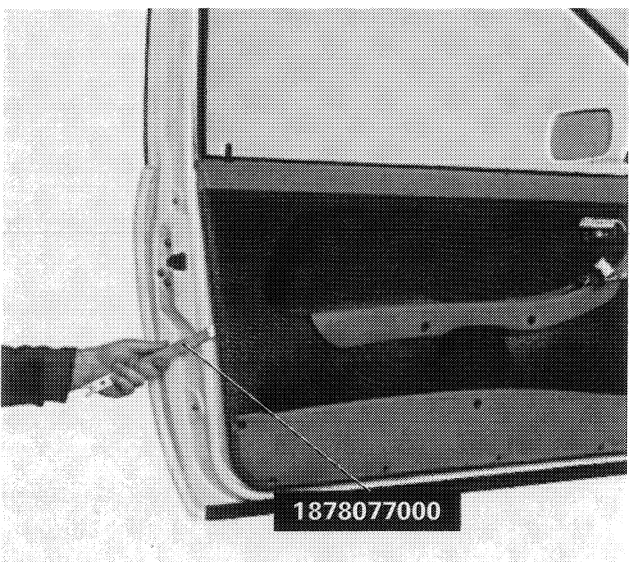


P3M002M04



- working as illustrated in the diagram using tool 1878077000, separate the door panel from the retaining springs;




P3M003M01

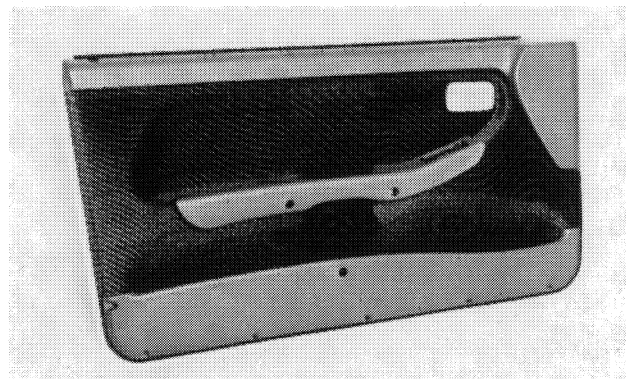

P3M003M02

- lift the door panel upwards, to gain access to the safety closure knob, then extract it;

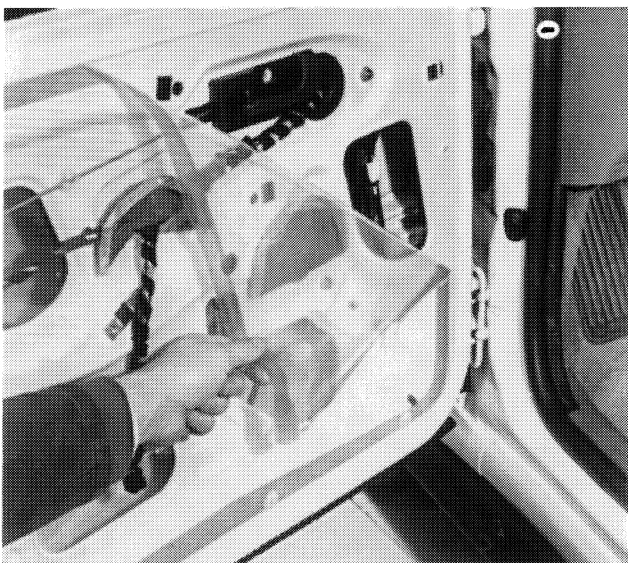

P3M003M03




- remove the protective door cover.



Carefully remove the cover taking care not to damage it; then place it where it will be protected from dust so as not to damage the adhesive on the edges.

When refitting take care to ensure that the adhesive edge sticks to the door frame; if the adhesive is no longer working properly, then the cover has to be replaced.

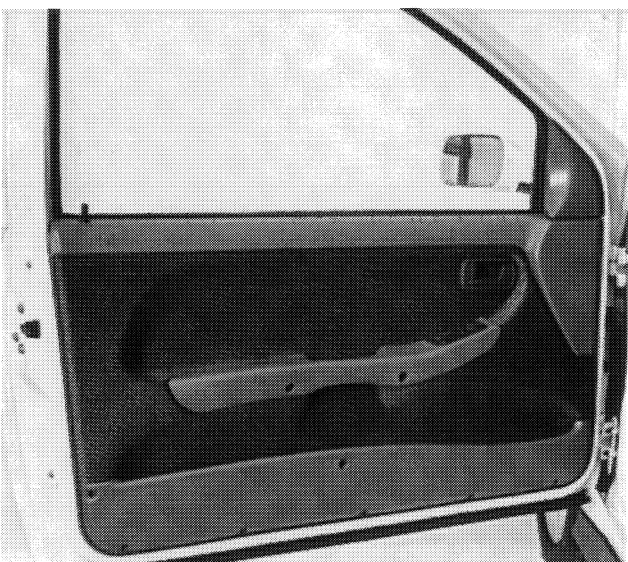


P3M003M04



Refitting

When refitting, simply reverse the order of the operations carried out for the removal.

70.

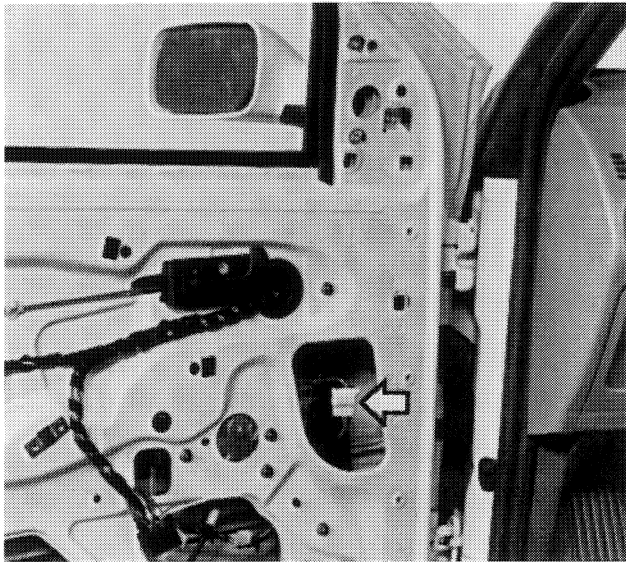


P3M004M01



EXTERNAL REAR VIEW MIRROR

Removing


- Remove the door panel and protective cover following the instructions given on page 1;
- disconnect the supply connector for controlling the adjustment of the external rear view mirror;

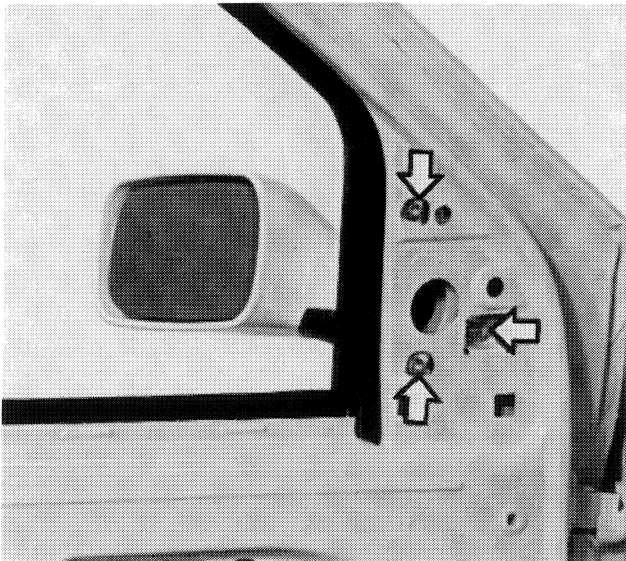

P3M004M02



- loosen the bolts shown, then extract the mirror, at the same time releasing the control cables through the door.

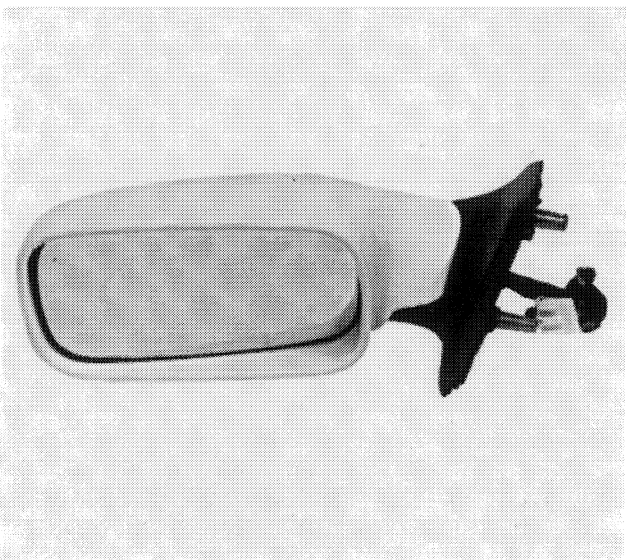


P3M004M03



Refitting

When refitting, simply reverse the order of the operations carried out for the removal.

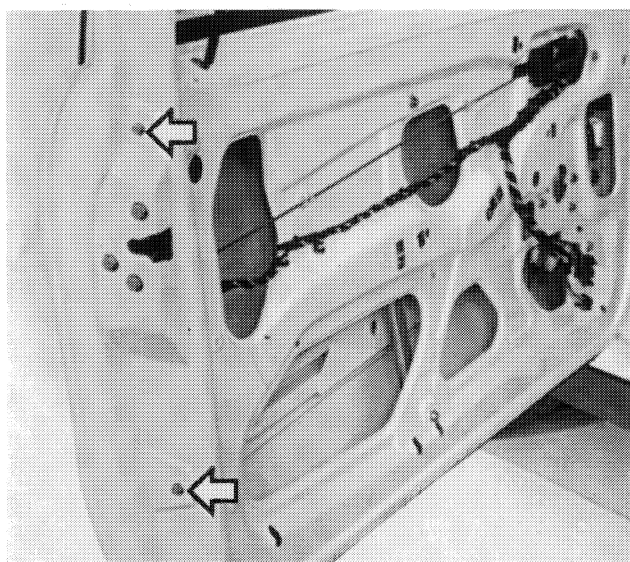

P3M005M01




REMOVING-REFITTING OUTER DOOR HANDLE

Order of operations


- Remove the door panel and protective cover following the instructions given on page 1;

NOTE Before removing the panel, ensure that the window glass is in the end of travel position (top).

- loosen the bolt shown, then remove the left guide for the window glass;

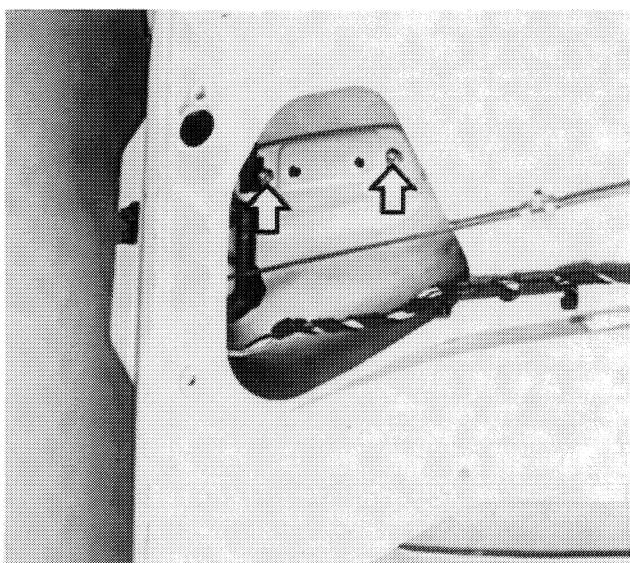

P3M005M02

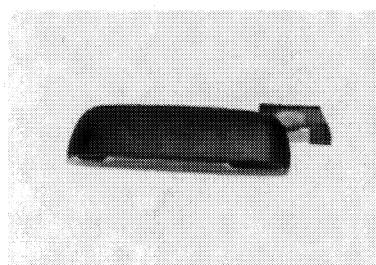

P3M005M03


- loosen the bolts fixing the exterior handle to the door, then remove it.



P3M005M04




- when refitting, simply reverse the order of the operations carried out for the removal.

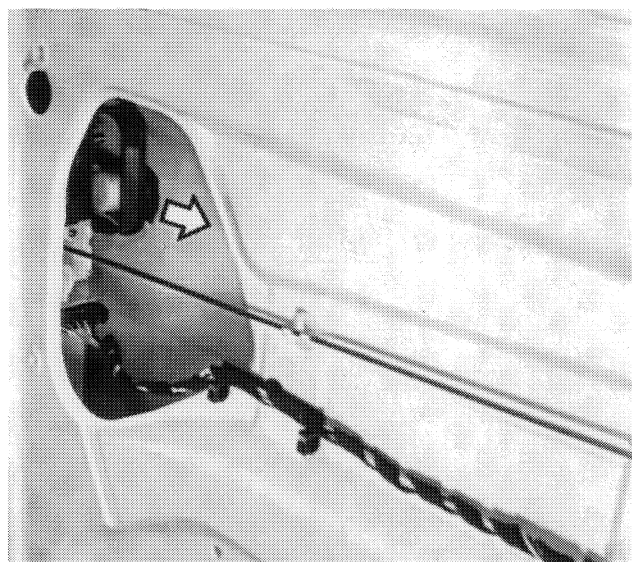

P3M006M01




REPLACING DOOR LOCK BARREL

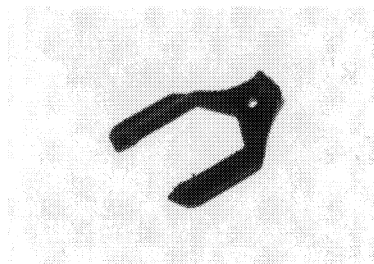


P3M006M02

Removing-refitting

- Remove the opening window glass guide (see previous page);
- extract the barrel retaining spring, in the direction shown by the arrow;

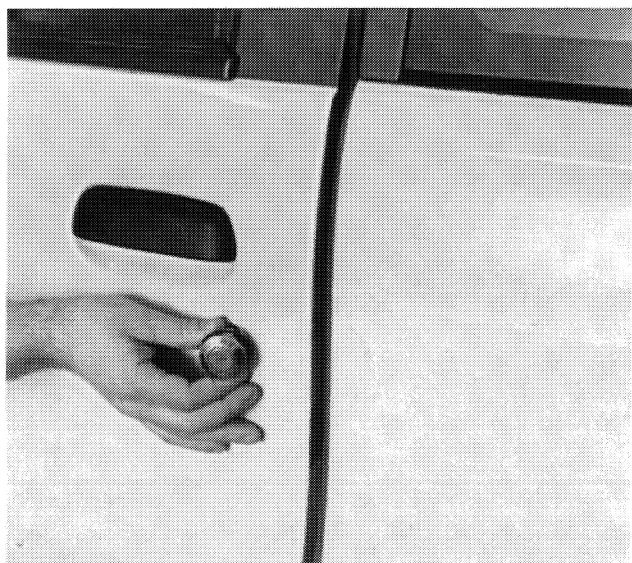


P3M006M03

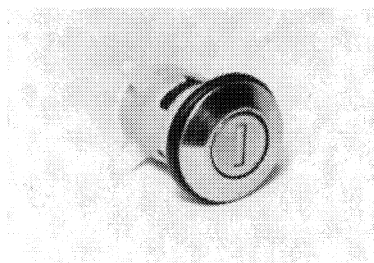


P3M006M04

- extract the lock barrel from the door, following the illustration.

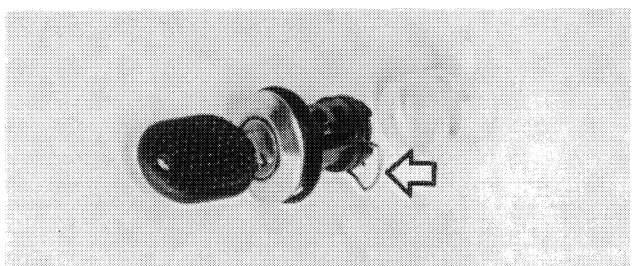

P3M006M05

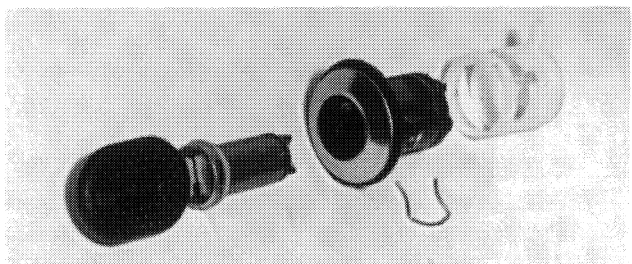

P3M006M06

Dismantling-reassembly

- Insert the key into the barrel, remove the plastic shield and extract the retaining spring (see upper inset);
- extract the barrel from its housing;
- replace the barrel and refit it reversing the order of the operations.



P3M007M01




REMOVING-REFITTING DOOR LOCK


- Remove the door panel and protective cover, following the instructions given on page 1;

NOTE Before removing the door panel, ensure that the window glass is in the end of travel position (top).

- release the door opening control lever rod from the lock and disconnect the connector for operating the door central locking;

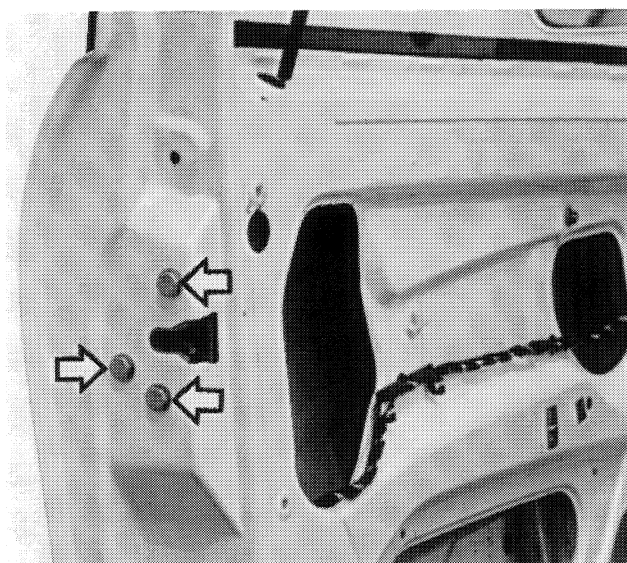


P3M007M02

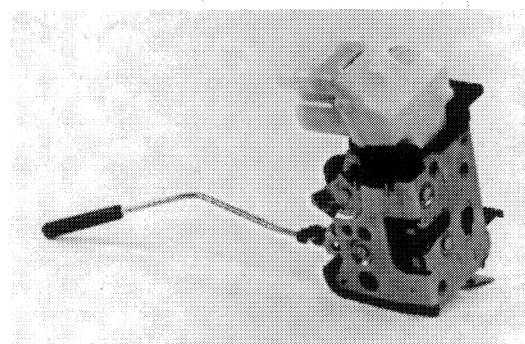

P3M007M03


- loosen the bolts fixing the lock complete with safety closing rod to the door and remove it.

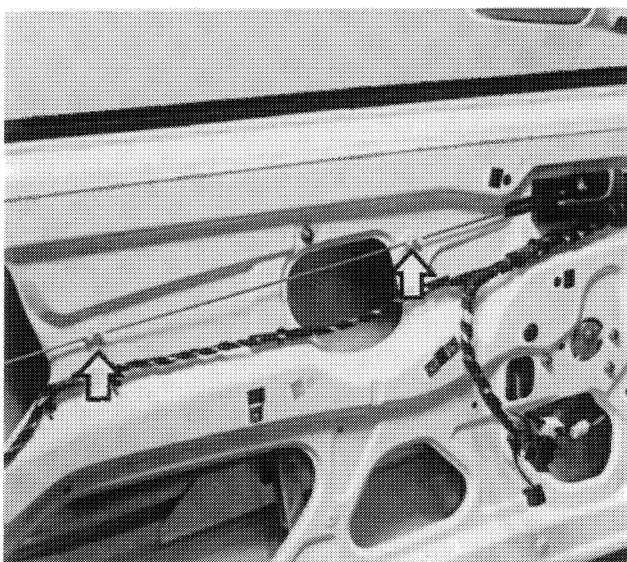

P3M007M04




REMOVING-REFITTING DOOR OPENING LEVER

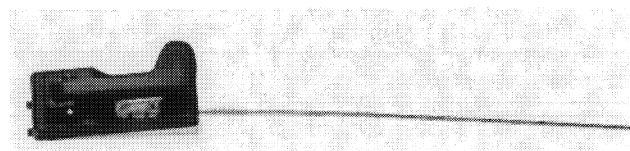

P3M007M05

- Remove the door panel and protective cover, following the instructions given on page 1;
- disconnect the rod from the lock releasing it from the fixing clips, then remove the door opening control lever complete with rod.

70.

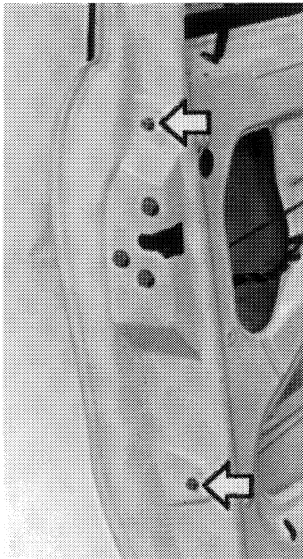

P3M008M01



P3M008M02




REMOVING-REFITTING OPENING WINDOW GLASS

- Remove the door panel and protective cover, following the instructions given on page 1;

NOTE Before removing the door panel, ensure that the window glass is in the halfway position to allow its subsequent removal.

- remove the left window glass guide, loosening the fixing bolts (see left inset);
- proceed in the same way, removing the right window glass guide (see right inset);

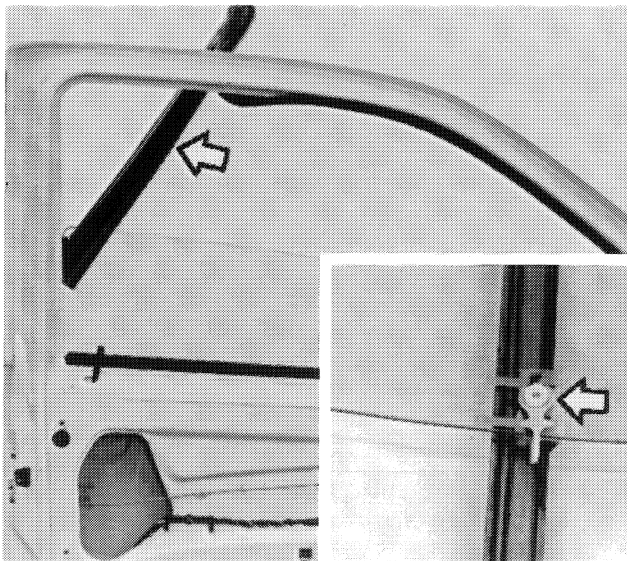


P3M008M03




- partly remove the window glass trim, as illustrated in the diagram;
- remove the window glass from the window opening device (see inset);




P3M008M05

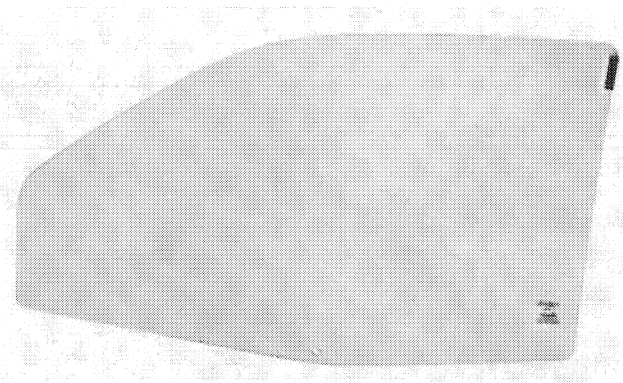


- working as illustrated in the diagram, rotate the window glass and then extract it from the door.

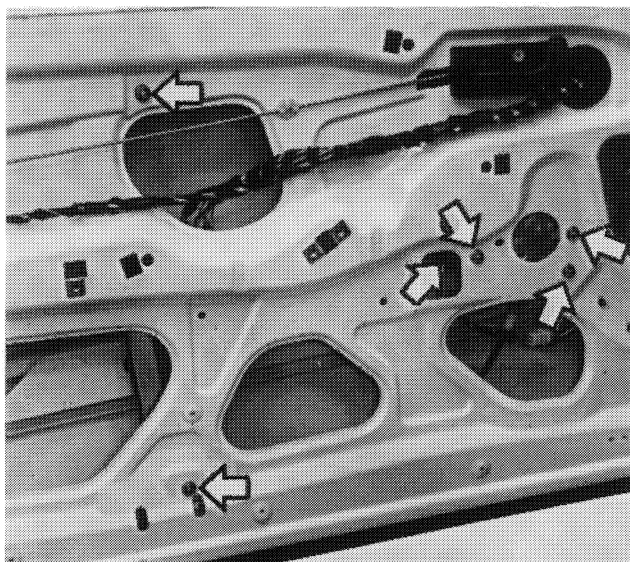


P3M009M01

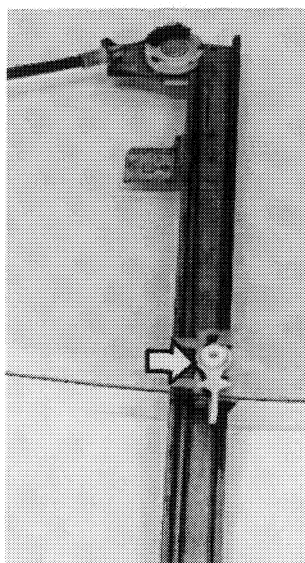

P3M009M02

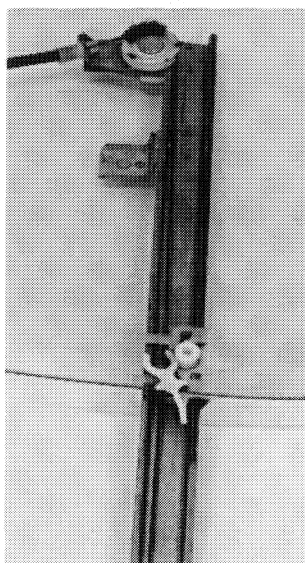

P3M009M03

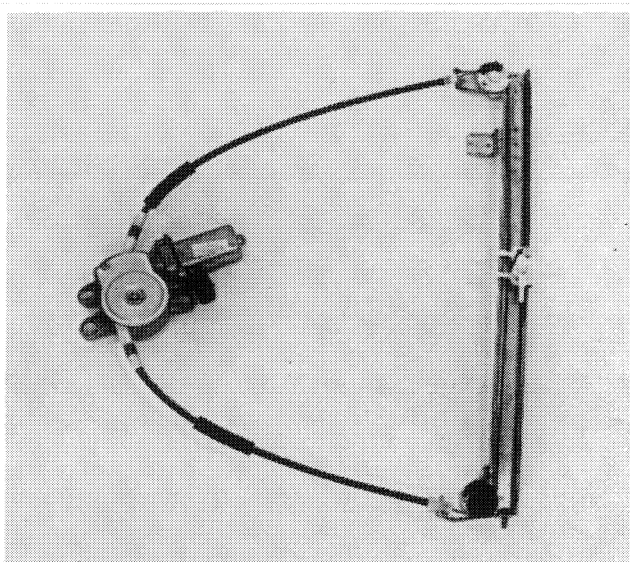


P3M009M04

REMOVING-REFITTING WINDOW LIFT MECHANISM

- Remove the trim panel;
- Lift the window glass about half of its travel;
- separate the glass from the window lift mechanism by releasing the clip and withdrawing the pin of the window-lift shoe from the hole in the glass;
- lift the glass by hand to the end of its upward travel and secure it with adhesive tape;
- disconnect the connector from the engine;
- undo the nuts securing the motor;
- undo the nuts on the window lift guide;
- remove the window lift cable clip;
- remove the window lift mechanism by withdrawing it from the door frame.

NOTE *Make sure that the glass is in a stable position.*

- refit the window lift mechanism by reversing the procedure for removal.

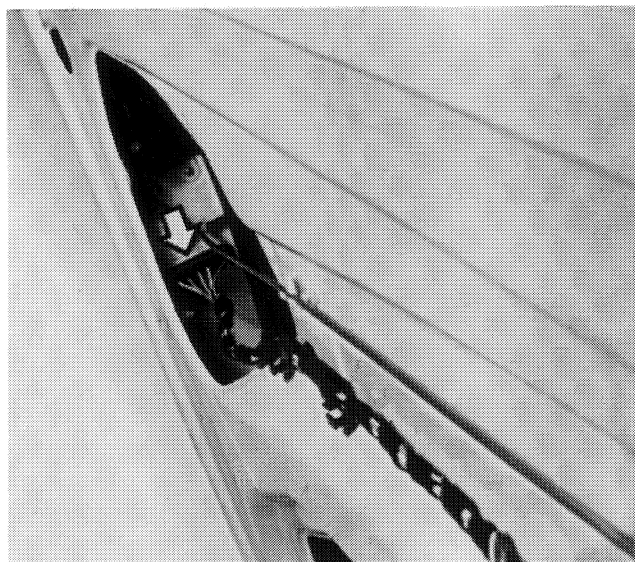

P3M010M01




REMOVING-REFITTING DOOR INTERIOR WIRING

- Remove the door panel and protective cover as described on page 1;

NOTE Before removing the panel, raise the glass into the end of travel position.


- disconnect the connector from the door lock, shown in the diagram;

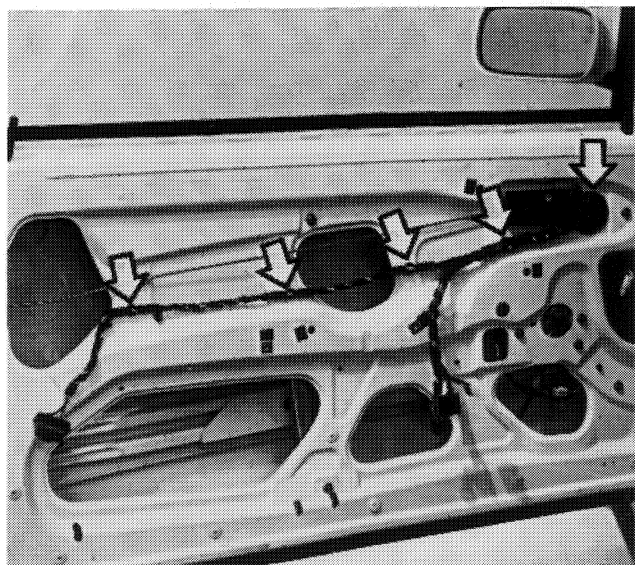


P3M010M02




- remove the fixing bands and the seal, shown in the diagram;

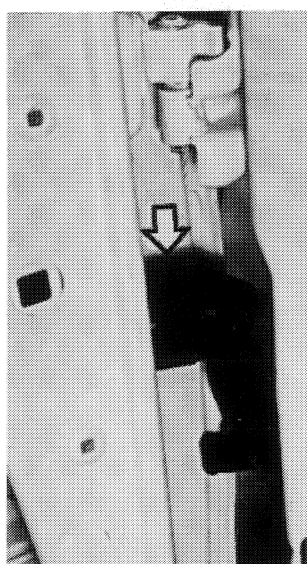

P3M010M03

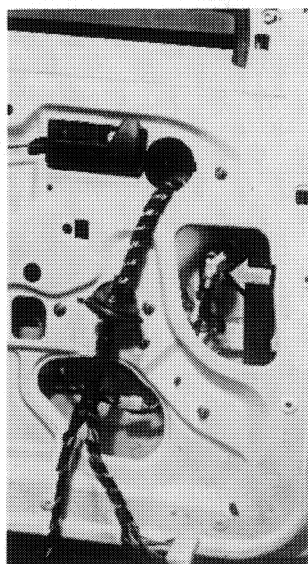


P3M010M04

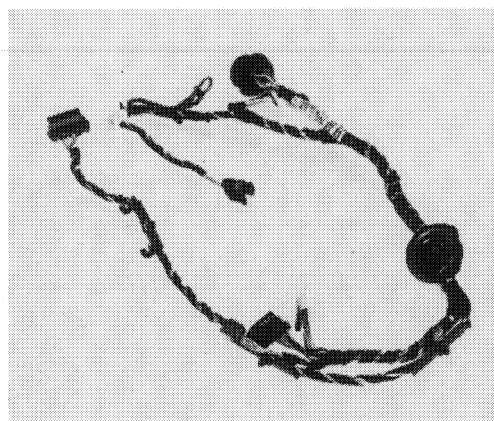


P3M010M05


- disconnect the connector from the door pillar (left inset);
- disconnect the connectors from the window opening and rear view mirror adjustment motor (right inset);
- remove the wiring from the door.

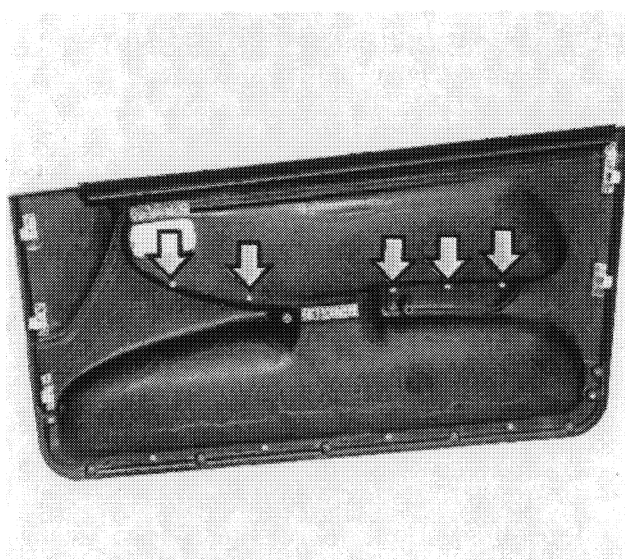

P3M011M01

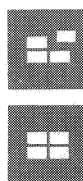


PARTIAL REPLACEMENTS

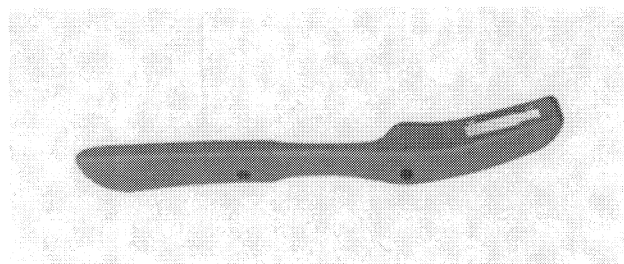


P3M011M02

Removing-refitting interior handle

- Remove the door panel and protective cover, following the instructions given on page 1;
- acting from the inside of the panel, loosen the fixing bolts shown and remove the interior handle.

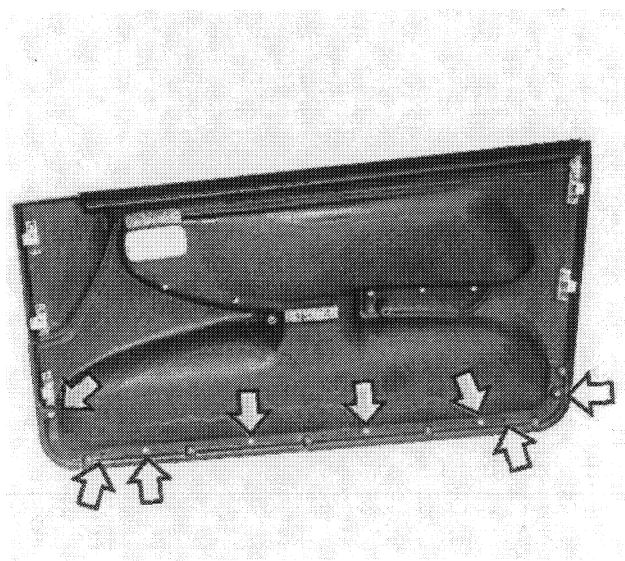


P3M011M03

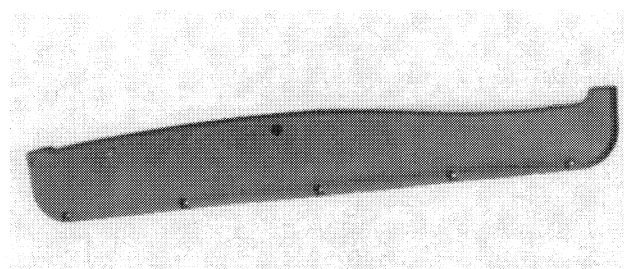


P3M011M04

Removing-refitting oddments pocket

- Remove the door panel and protective cover, following the instructions given on page 1;
- acting from the inside of the panel, loosen the bolts shown and remove the oddments pocket.

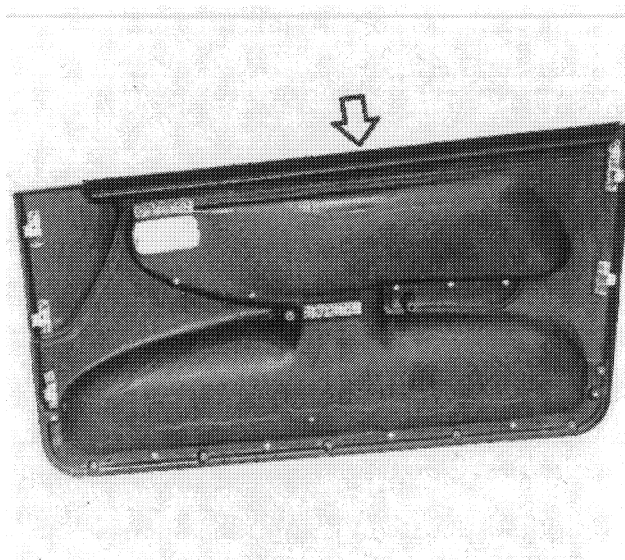

P3M011M05

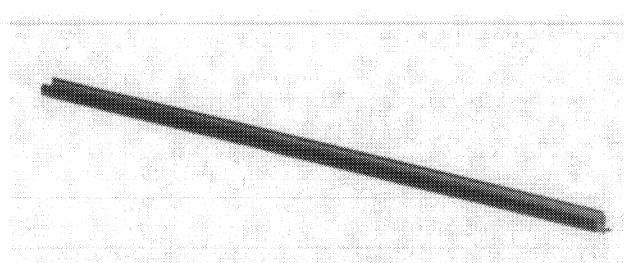


P3M011M06

Removing-refitting lower glass trim

- Remove the door panel and protective cover, following the instructions given on page 1;
- using a suitable tool, remove the trim from the door panel.

70.

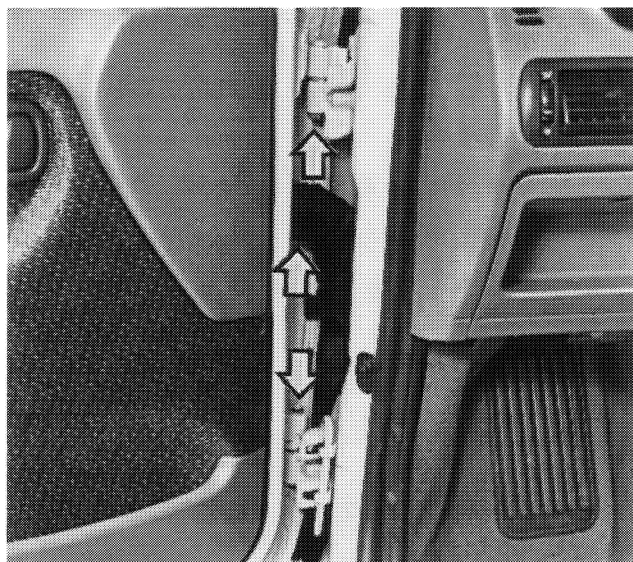


P3M012M01



REMOVING-REFITTING FRONT DOOR

Order of operations


- Disconnect the supply connector for the electrical devices for the door;
- loosen the bolts fixing the hinges to the door;

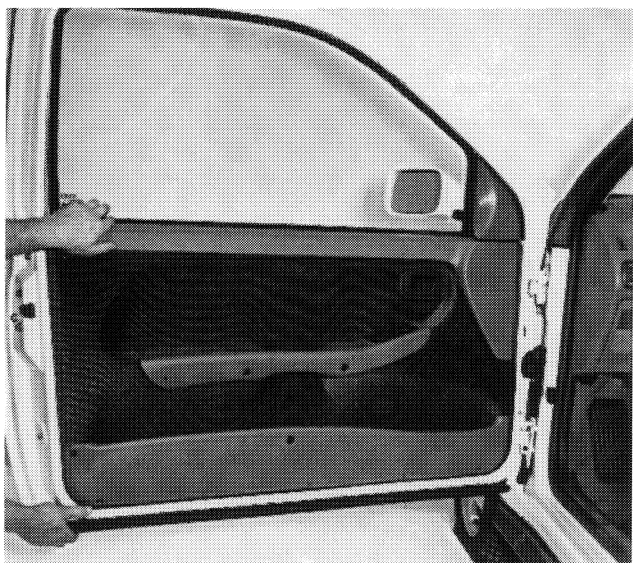

P3M012M02



- remove the door, working as illustrated in the diagram;

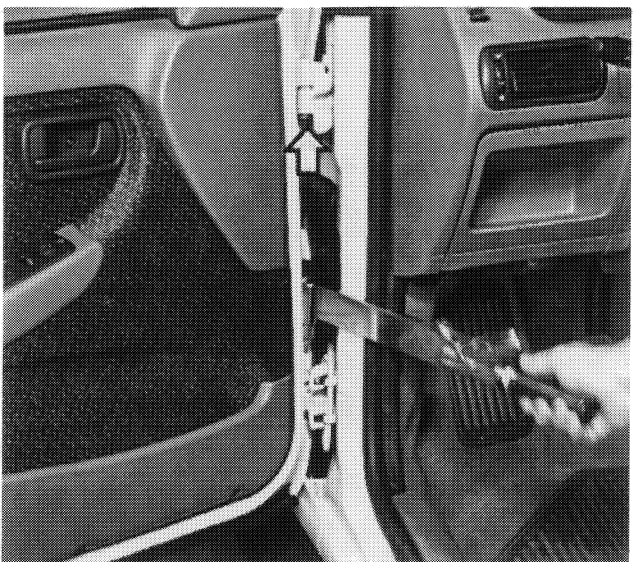


P3M012M03



1,5 daNm

- when refitting, reverse the order of the operations carried out for the removal;
- tighten the bolts fixing the hinges to the door to the recommended torque.

FRONT DOOR ADJUSTMENTS

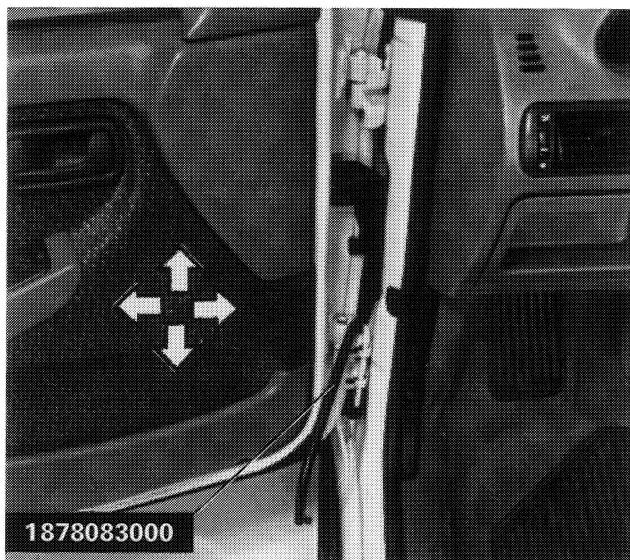

P3M013M01

Adjusting front door position


- Loosen the bolts fixing the hinges to the bodyshell, using tool 1878083000;
- adjust the position of the door;

NOTE The arrows indicate the possible movements for the adjustment.



P3M013M02

- when the adjustment is completed, fully tighten (recommended torque: 3.5 daNm) the bolts fixing the hinges to the bodyshell, using tool 1878083000.

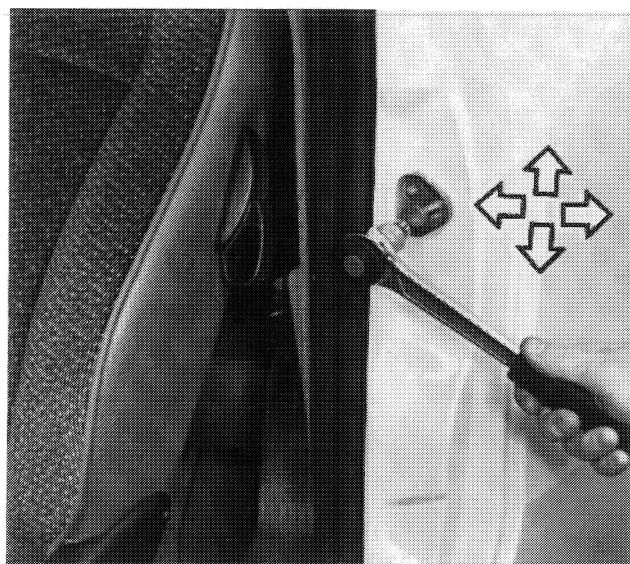

P3M013M03

Adjusting door lock striker position

NOTE In order to adjust the lock striker correctly, it may be necessary to insert suitable shims. The arrows indicate the possible movements for the adjustment.