

PUNTO eMANUAL

Bodywork

Title	Page
Removing/replacing & adjustments	1 ➡



P3M014M01




REMOVING-REFITTING AND ADJUSTING REAR DOOR



NOTE *The procedures for removing-refitting and dismantling-reassembling the rear door are the same as those for the front door.*

Removing-refitting rear door

- Disconnect the connector shown;
- undo the bolts fixing the hinges to the door, then remove it.

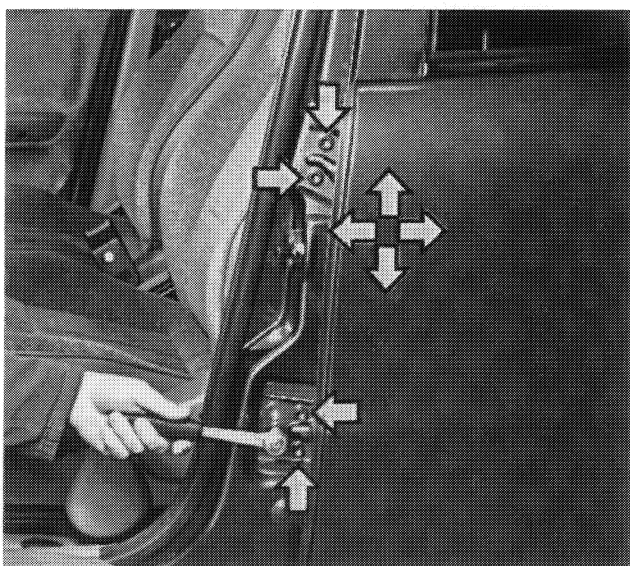

P3M014M02




Adjusting rear door position

- Loosen the bolts fixing the hinges to the bodyshell;
- adjust the position of the door;

NOTE *The arrows indicate the possible movements for the adjustment.*

- when the adjustment has been carried out, fully tighten (recommended torque: 3.5 daNm) the bolts fixing the hinges to the bodyshell.

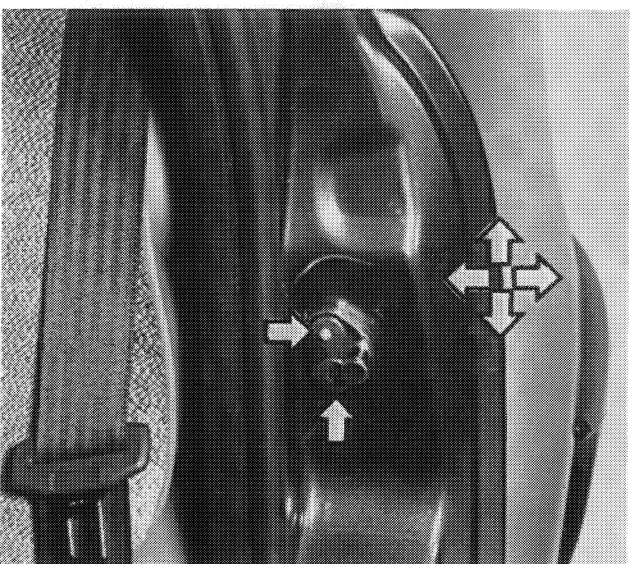

P3M014M03



Adjustment position of door lock striker

NOTE *In order to adjust the striker correctly, it may be necessary to insert appropriate shims. The arrows show the possible movements for the adjustment.*