

PUNTO eMANUAL

Bodywork

Title	Page
Removing/refitting front seats	1 ➡
Dismantling/reassembly - front seats	2 ➡
Removing/refitting rear seats	8 ➡



P3M029M01




REMOVING-REFITTING FRONT SEAT



Order of operations


- Undo the front bolts fixing the seat to the floor panel;

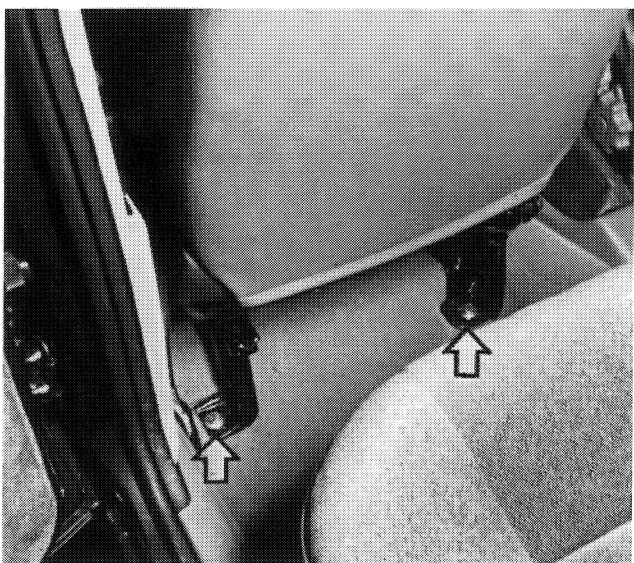

P3M029M02




- undo the rear bolts fixing the seat to the floor panel;
- extract the seat from the vehicle.

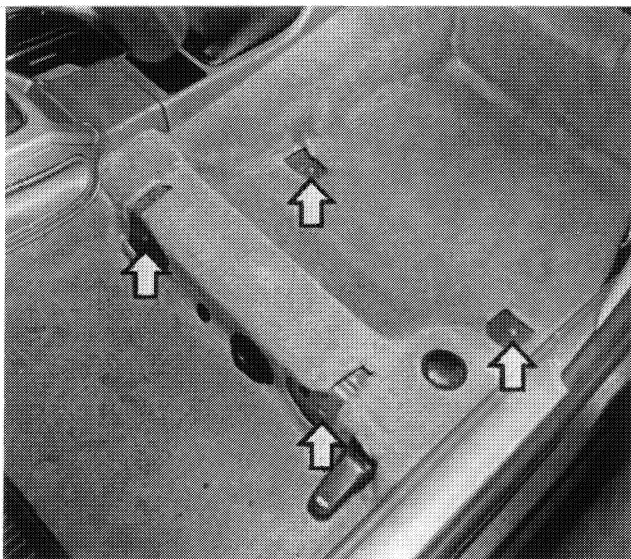

P3M029M03



Location of fixing points for seat to floor panel

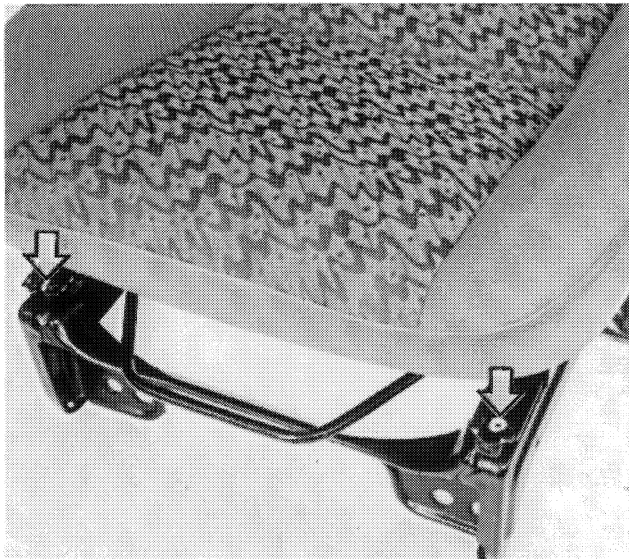

P3M030M01




DISMANTLING-REASSEMBLING FRONT SEAT




Dismantling-reassembling frame

- Move the seat backwards to allow access to the front fixing bolts;
- undo the front fixing bolts for the seat;

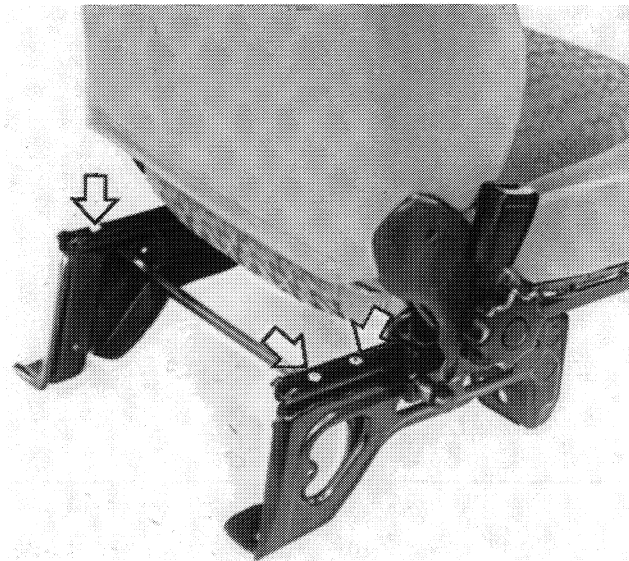


P3M030M02

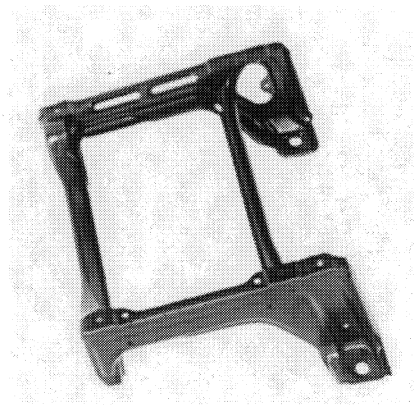


P3M030M03


- move the seat forwards;
- undo the rear fixing bolts and remove the frame from the seat.

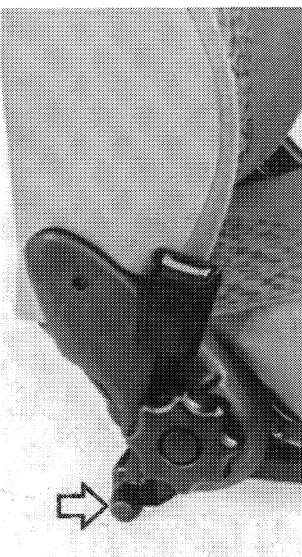

P3M030M04

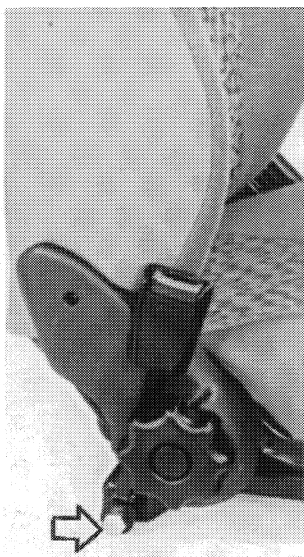


P3M030M05

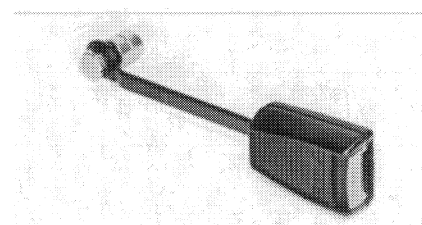

P3M030M06

Removing-refitting seat belt anchorage device

- Remove the fixing cover (left inset);
- undo the fixing bolt and remove the seat belt anchorage device.

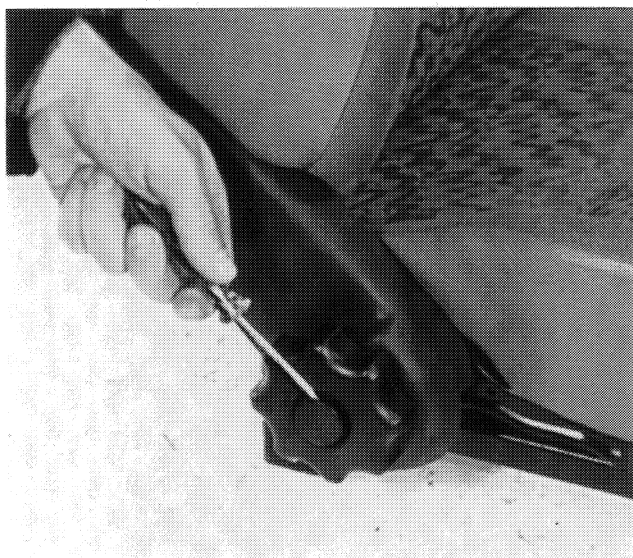


P3M031 M01




Removing-refitting backrest adjustment knob

- Working as illustrated in the diagram, remove the fixing button;

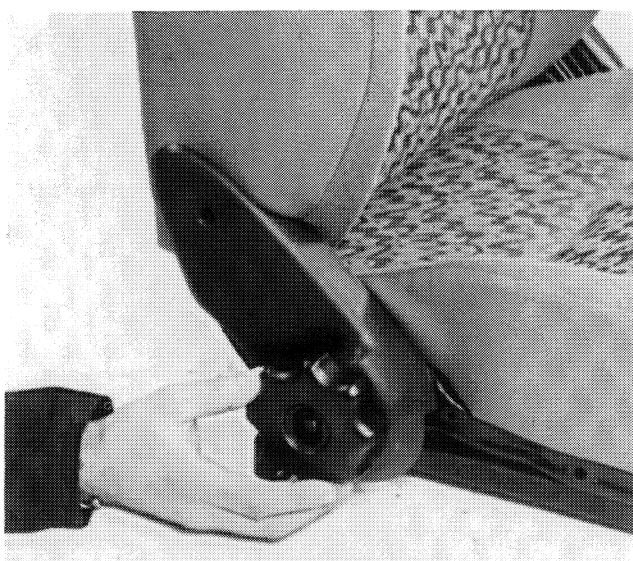

P3M031 M02

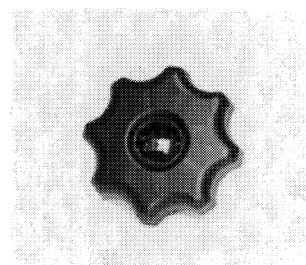


P3M031 M03

- extract the knob from the seat cover moulding.




P3M031 M04

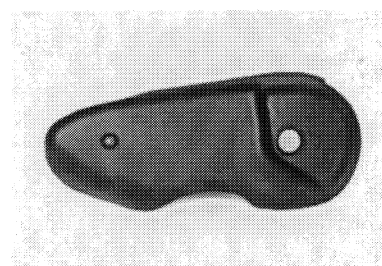



P3M031 M05

Removing-refitting seat cover moulding

- Remove the right cover moulding for the seat, undoing the fixing bolt shown.

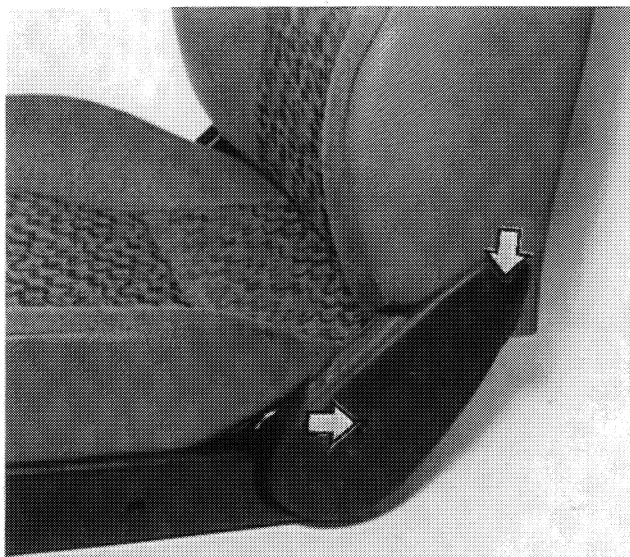


P3M032M01

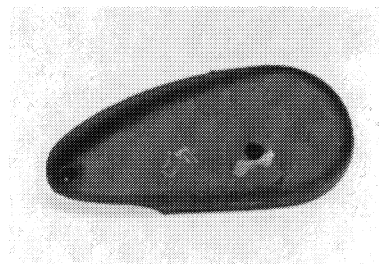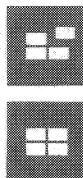


P3M032M02

- similarly, loosen the fixing bolts shown and remove the moulding on the opposite side of the seat.

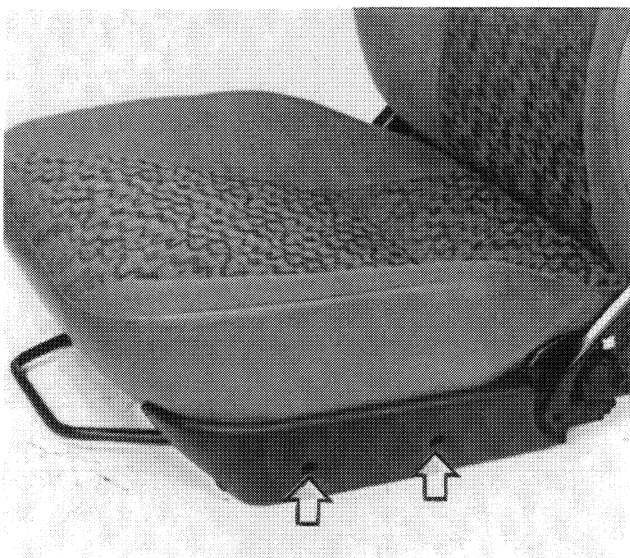


P3M032M03

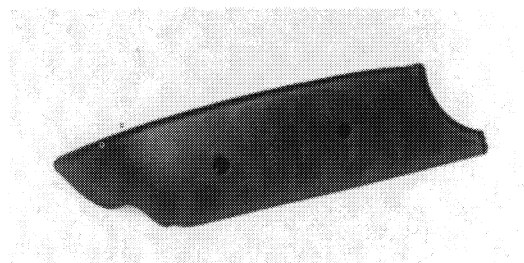

P3M032M04

Removing-refitting lower side trim

Remove the trim, undoing the fixing bolts shown.

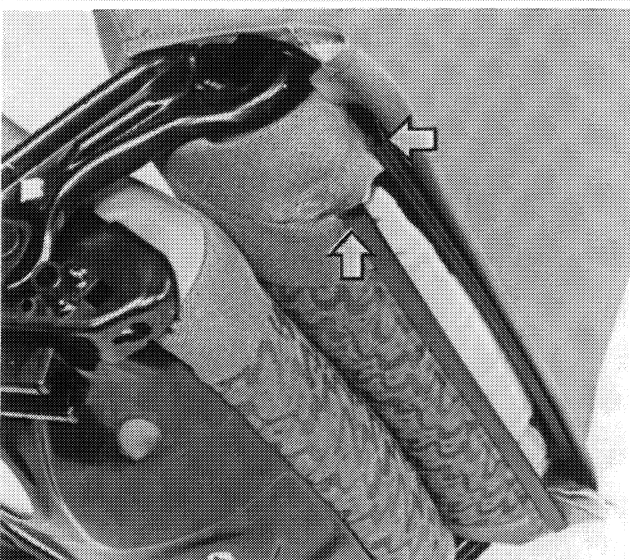


P3M032M05



Removing-refitting backrest

- Remove the rear cover from the lower part of the backrest;
- release the edge of the backrest cover, then separate the two edges shown;

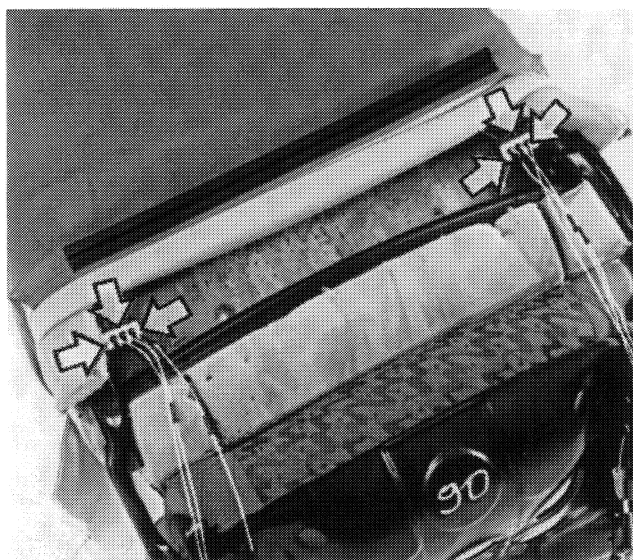


P3M033M01




- release the tensioning cables from the seats shown in the diagram, then lift up the cover along the backrest to allow access to the head restraint retaining hooks;

P3M033M03

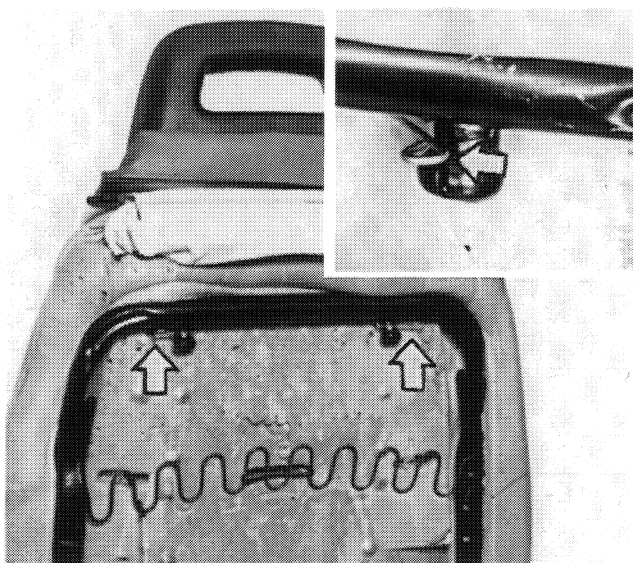


P3M033M02

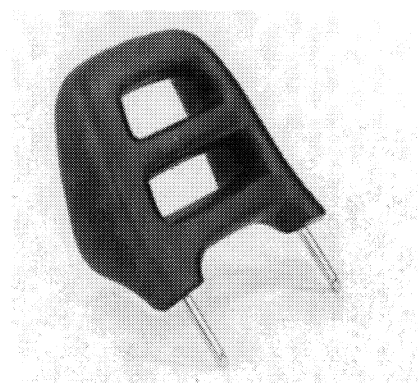

P3M033M04

- press on the retaining hooks, shown by the arrows, then extract the head restraint;

NOTE The inset shows the retaining hook and the housing for the head restraint support pin.

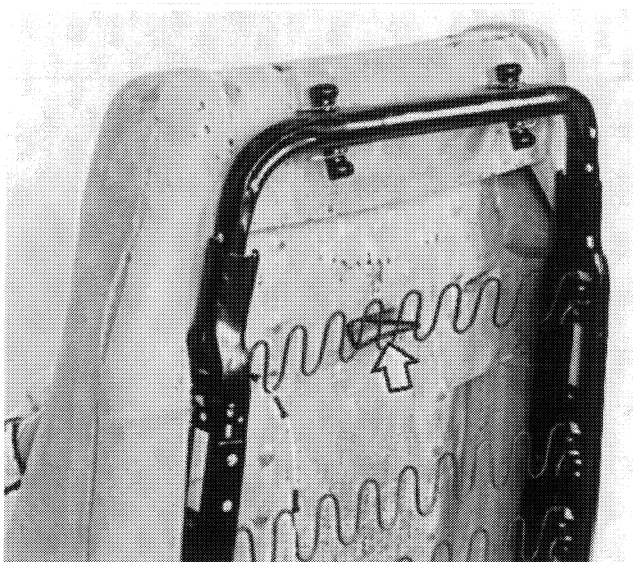



P3M033M05



- remove the clip securing the upholstery to the seat frame, then remove the backrest cover and upholstery;

70.

P3M034M02

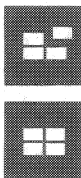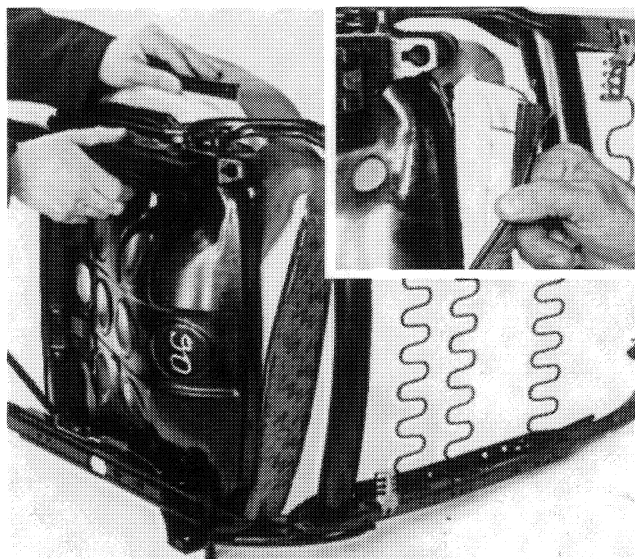

Removing-refitting cushion



- Release the edge of the cover from the entire perimeter of the cushion, working as illustrated in the diagram;
- remove the seat cover and upholstery.

P3M034M01



Seat frame

P3M034M03

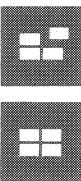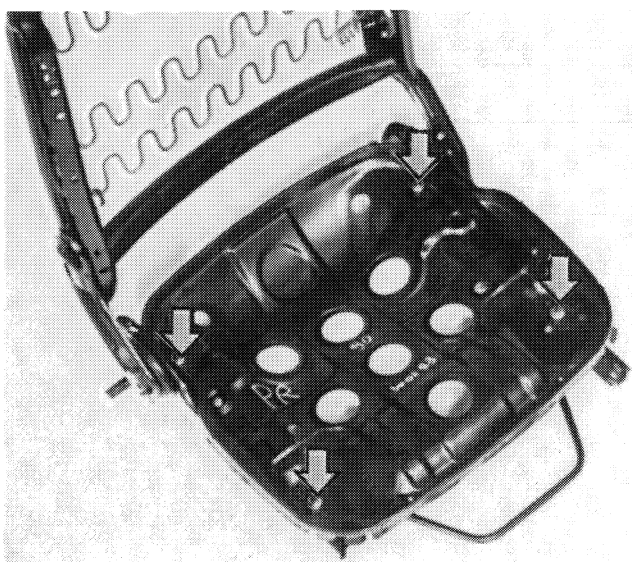

Removing-refitting seat sliding guides

- Undo the bolts fixing the guides to the seat frame;


P3M034M04



P3M035M01



- remove the rivet shown in the diagram, then separate the sliding guides from the seat frame.

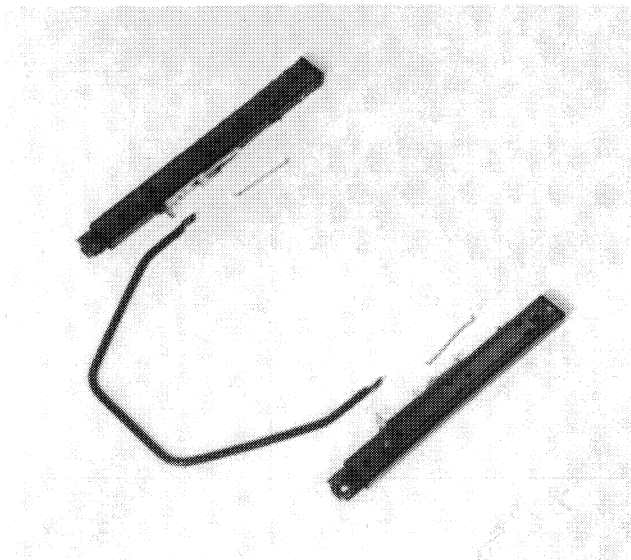



P3M035M02



Seat sliding guides assembly




P3M035M03

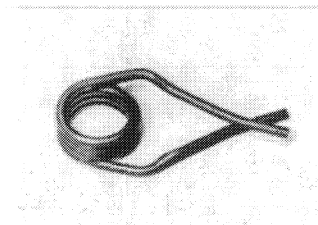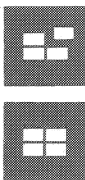


P3M035M04

Removing-refitting backrest adjustment knob spring

- Remove the backrest adjustment knob, following the instructions given on page 31;
- acting as shown in the diagram, remove the backrest adjustment spring from the pin.

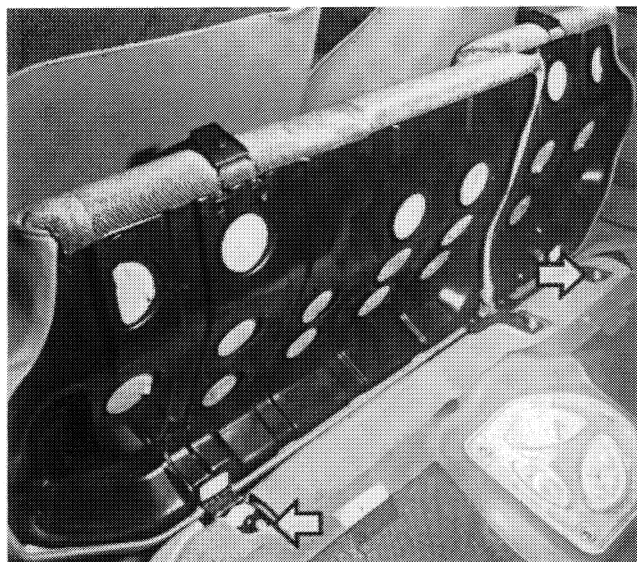

P3M036M01

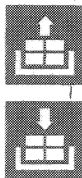

REMOVING-REFITTING REAR SEAT

 
NOTE *The procedure for removing-refitting the rear seat (not split) is the same as described below.*

Order of operations

- Undo the bolts fixing the cushions to the bodyshell;
- remove the cushions from the vehicle;




P3M036M02



- lower the backrest and undo the bolts fixing the luggage compartment cover to the backrest;



P3M036M03

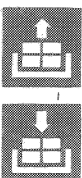

- move the luggage compartment cover aside, then undo the bolts fixing the backrest to the bodyshell;
- remove the backrest from the vehicle;
- when refitting, reverse the order of the operations carried out for the removal.