


PUNTO eMANUAL

Bodywork

Title	Page
Removing/refitting	1 ➡
Removing/refitting hinges	4 ➡
Replacing lock	5 ➡
Adjustments	6 ➡
Rear screen wiper motor	7 ➡

70.

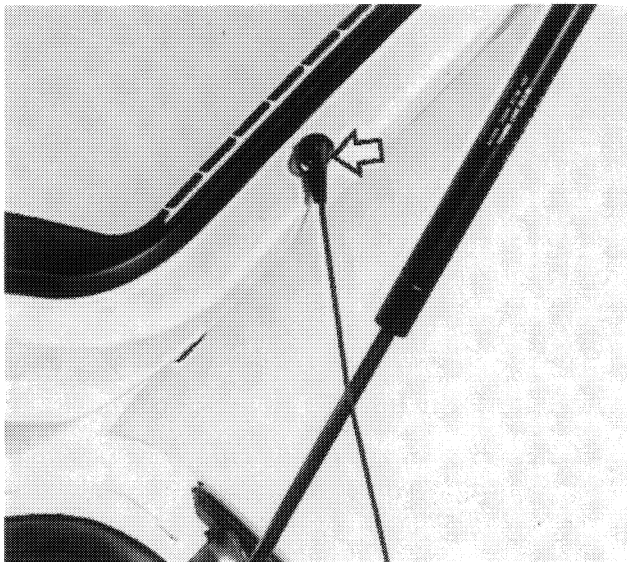


P3M022M01



REMOVING-REFITTING TAILGATE

Removing

- Release the rear parcel shelf lifting cables from the tailgate;

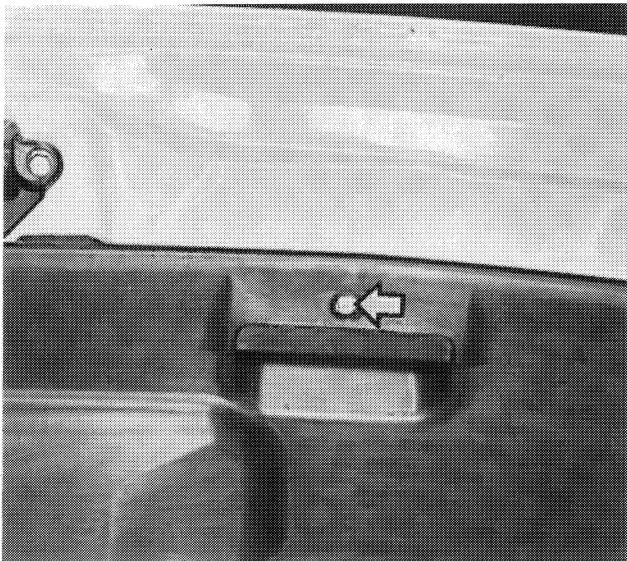


P3M022M02



- undo the fixing bolt for the tailgate cover panel;




P3M022M03

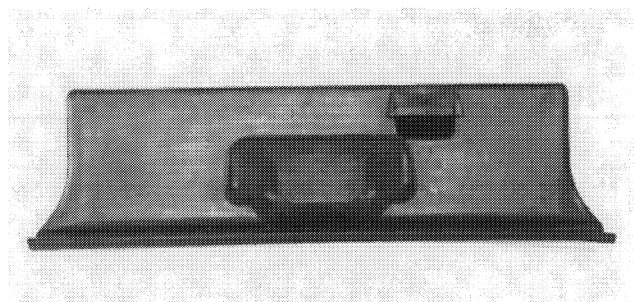


P3M022M04

- using tool 1878077000, separate the cover panel from the retaining springs on the tailgate;
- remove the cover panel from the tailgate;

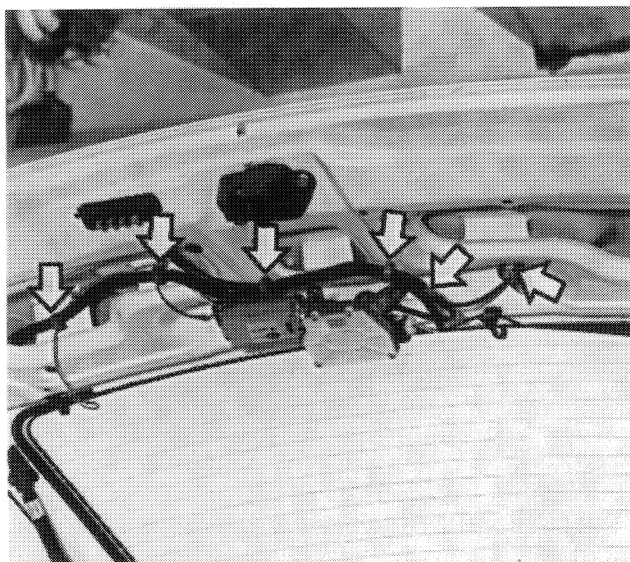


P3M023M01

- disconnect the supply connectors, then remove the retaining bands to release the wiring from the tailgate;

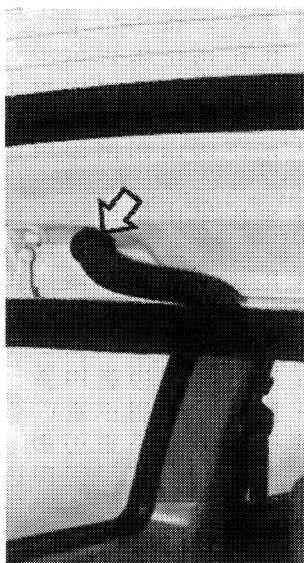

P3M023M02

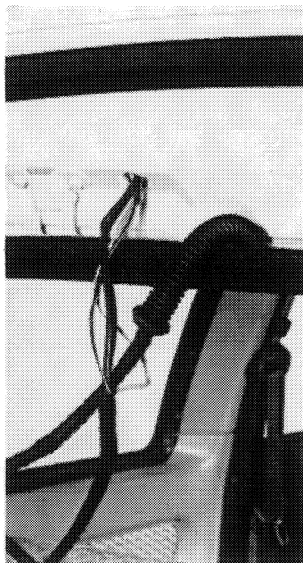


P3M023M03

- separate the cable protective outer casing from the tailgate (left inset);
- release the cables via the tailgate (right inset);




Suitably bind the cables to facilitate the subsequent refitting inside the tailgate.

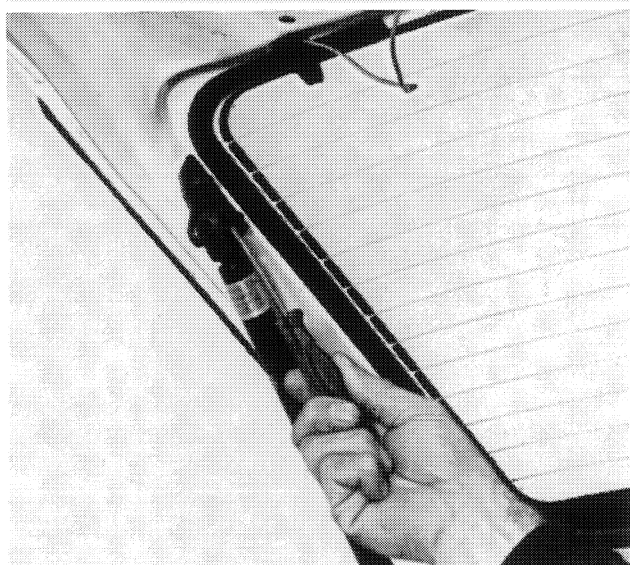

P3M023M04

- working as illustrated in the diagram, remove the retaining spring for the shock absorber stem from the pin on the tailgate;

70.

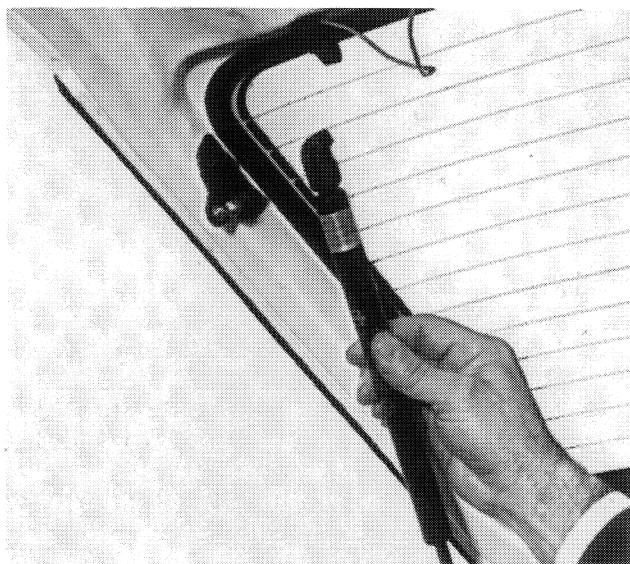


P3M024M01




- remove the shock absorber from the tailgate, disconnecting the upper mounting;



Support the tailgate, before carrying out the removal operations.

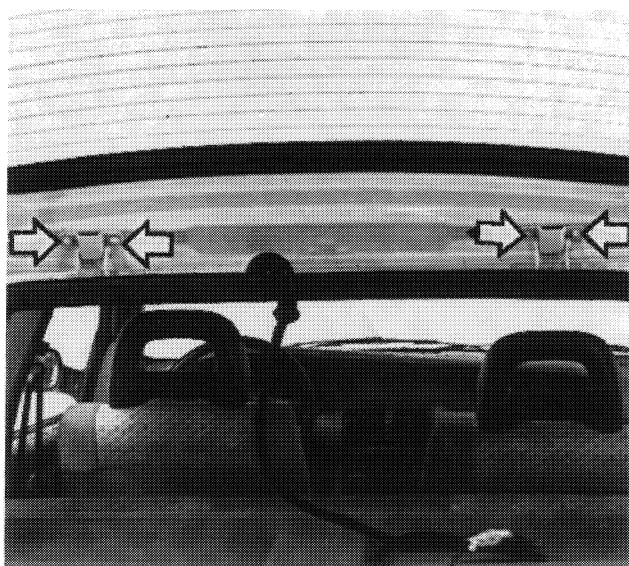


P3M024M02

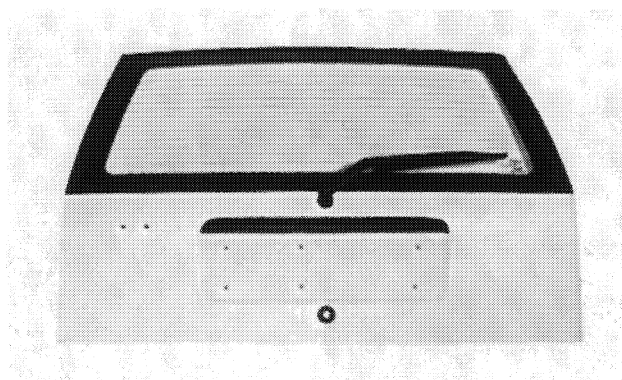

P3M024M04

- loosen the bolts fixing the hinges to the tailgate;
- remove the tailgate from the vehicle, with the help of a second operator.

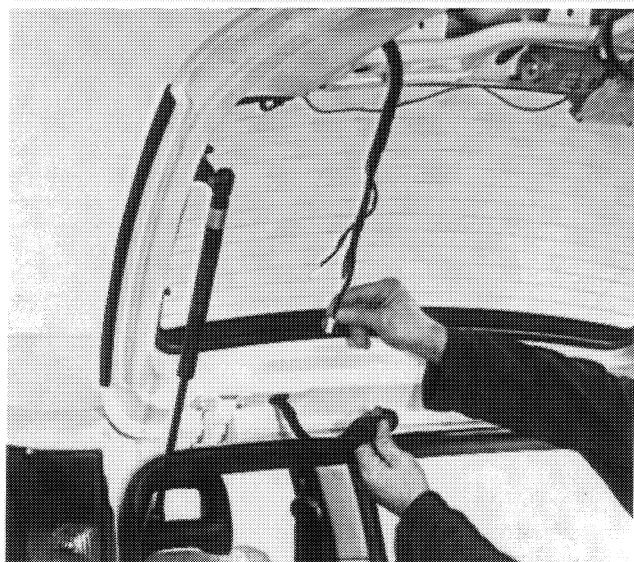


P3M024M03




Refitting


- Reattach the tailgate;
- with the help of a sensor, refit the cables inside the frame, then connect the appropriate connectors;
- complete the refitting by reversing the order of the operations carried out for the removal.

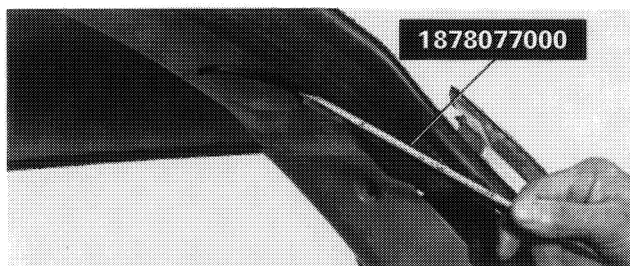

P3M025M01

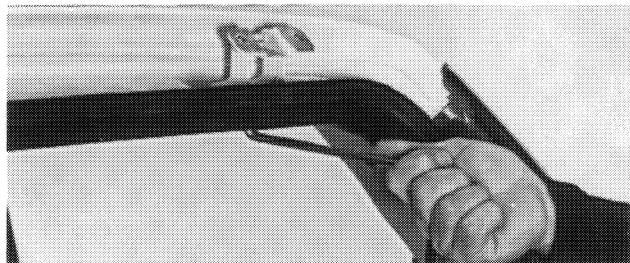


P3M025M02

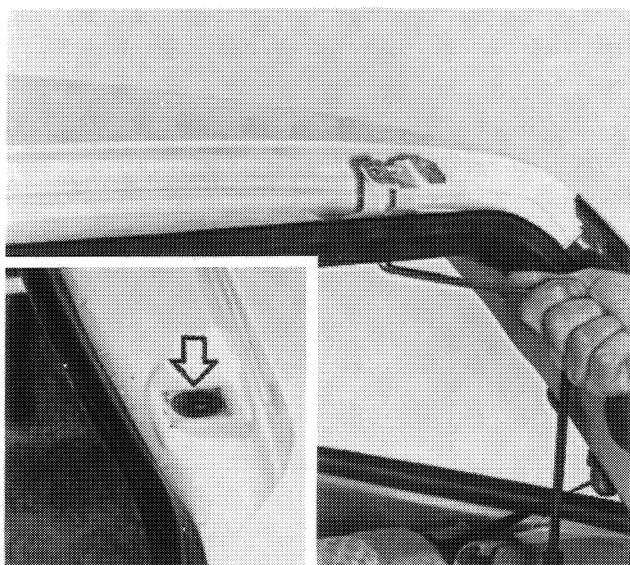

P3M025M04

P3M025M03

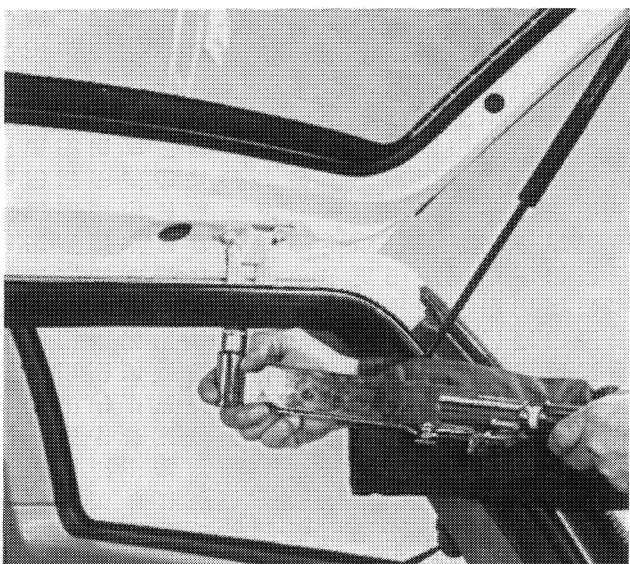

P3M025M05

REMOVING-REFITTING TAILGATE HINGES

Removing

- Remove the tailgate, following the instructions given on pages 22 - 24;
- remove the fixing cover from the roof panel, using tool 1878077000 (see upper inset);
- undo the bolt fixing the hinge to the bodyshell, then remove it.

Refitting

When refitting, proceed as described below:

- remove any traces of thermo-expansible sealant from the area surrounding the hinge housing;
- insert a suitable thermo-expansible sealant between the hinge and the bodyshell;




If the thermo-expansible sealant is not applied, water penetration will occur.

- tighten the fixing bolt without locking it;
- place the tailgate in position and temporarily tighten the bolts fixing the hinges to the tailgate;

1,2 daNm

- adjust the position of the tailgate, following the instructions given on page 27;
- when the adjustment of the tailgate is complete, tighten the bolt fixing the hinge to the bodyshell to the recommended torque.

70.

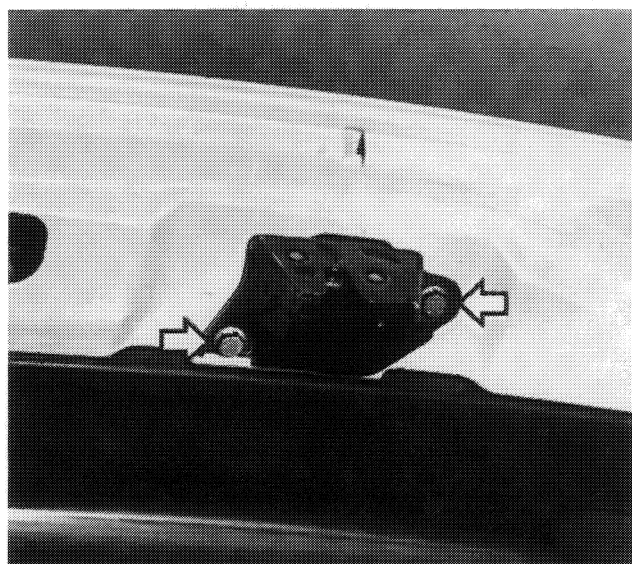

P3M026M01



REPLACING LOCK BARREL

Order of operations


- Undo the bolts shown and remove the tail-gate lock;




P3M026M02



- separate the barrel from the closing device;

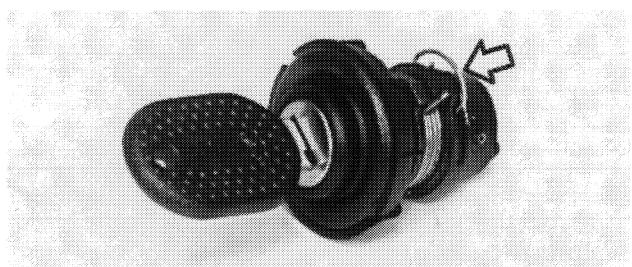


P3M026M03

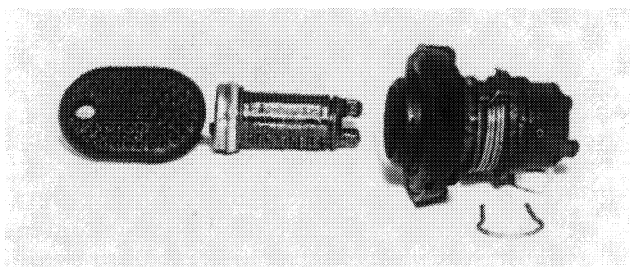

P3M026M04

- insert the key into the barrel, then extract the circlip shown in the upper inset;
- extract the barrel, then replace it (see lower inset);
- when refitting, proceed in the reverse order to the removal.

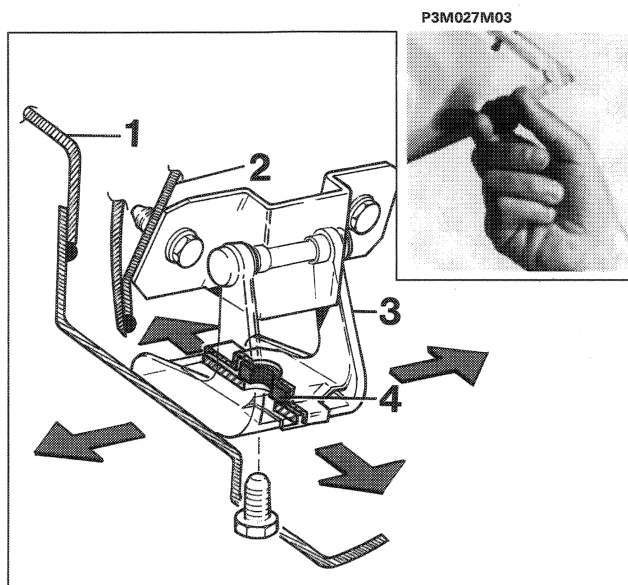

TAILGATE ADJUSTMENTS


Adjusting tailgate position

- Adjust the position of the tailgate, moving the hinge in the adjustment slot, as appropriate, in the directions shown by the arrows;
- carefully adjust the position of the buffers on the lower edge of the tailgate, tightening or loosening them to vary the height of the buffer (see inset);





If the buffers are not correctly adjusted this results in either forcing the tailgate structure or a clearance for the closing mechanism.

NOTE The diagram shows the roof panel (1), the tailgate (2), the hinge (3) and the block (4) for fixing the hinge to the roof panel.

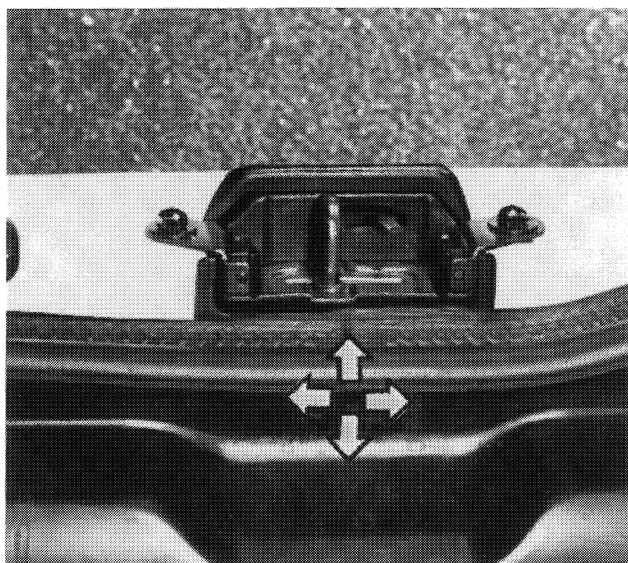

Adjusting position of tailgate lock striker


NOTE The arrows show the possible movements for adjusting the striker.

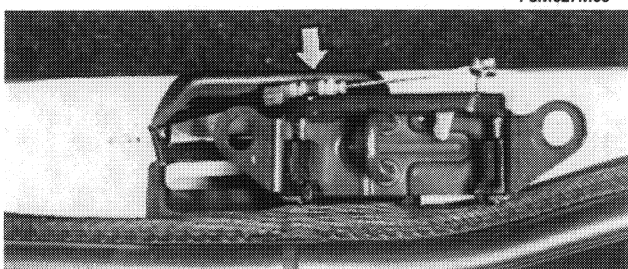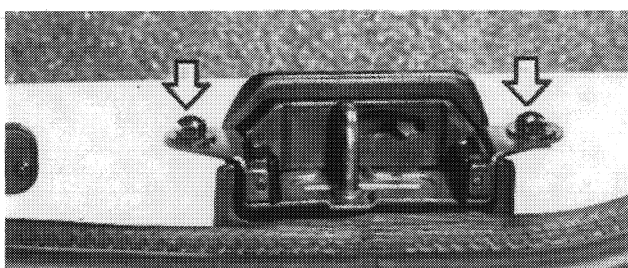


Adjusting tailgate opening rod

- undo the fixing bolts and separate the striker from the bodyshell (upper inset);
- working in the area shown, adjust the position of the tailgate opening rod (lower inset).

70.

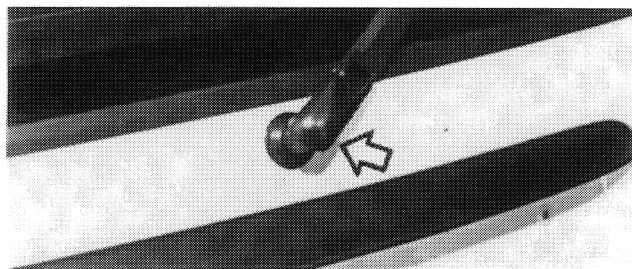


P3M028M01

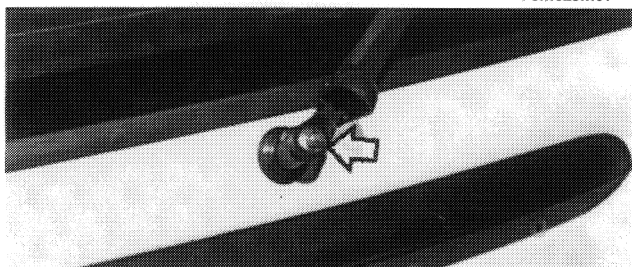

P3M028M02




REARSCREEN WIPER MOTOR

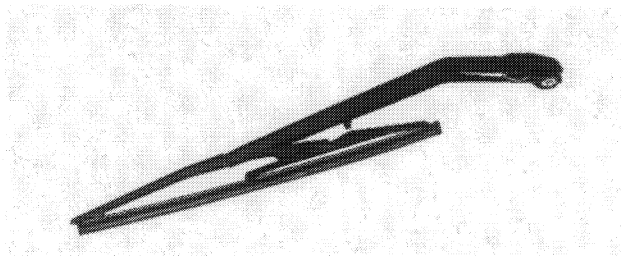


P3M028M03

Removing-refitting rear screen wiper motor

- Remove the tailgate cover panel (see page 22);
- lift the fixing cover;
- undo the bolt shown, then remove the rear screen wiper arm;

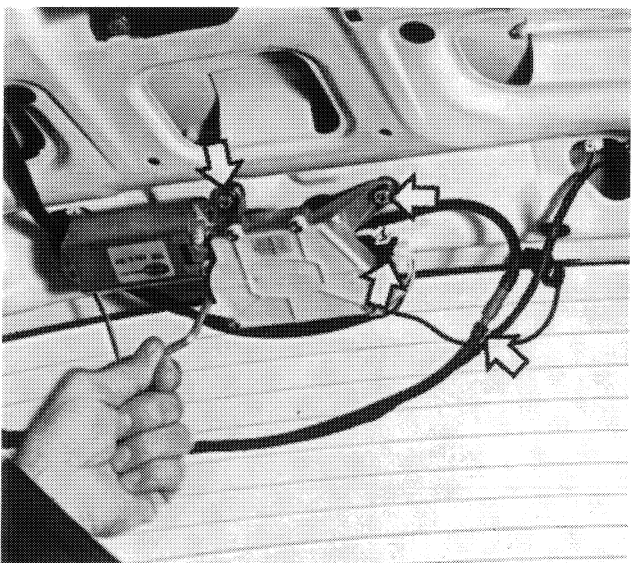


P3M028M04

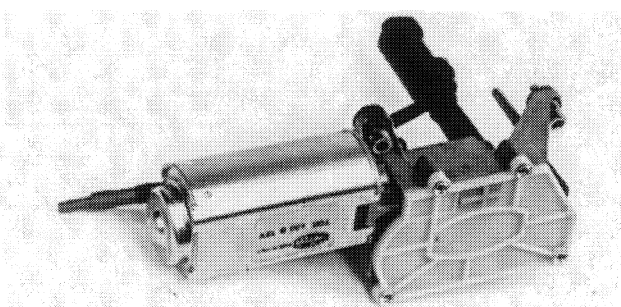


P3M028M05

- undo the fixing bolts, disconnect the connector and the rear screen washer pipe, then remove the rear screen wiper motor.

NOTE When refitting, simply reverse the order of the operations carried out for the removal.

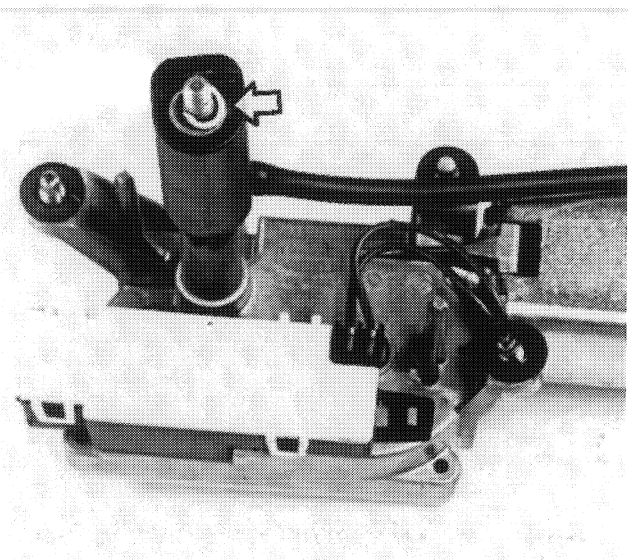

P3M028M06

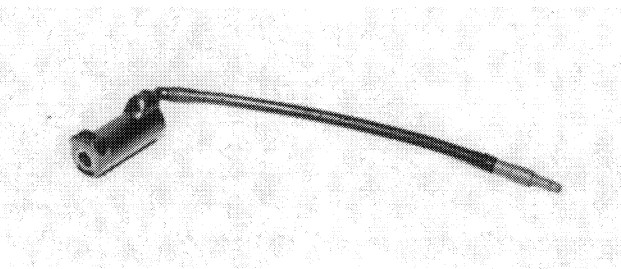

P3M028M07

Removing-refitting rear screen washer jet

After having removed the rear screen wiper motor, remove the circlip and extract the jet.