



# PUNTO eMANUAL

Bodywork


Title	Page
Removing/refitting rear darkened window .....	1 ➡
Removing/refitting partition grill .....	2 ➡
Removing/refitting side lining .....	3 ➡

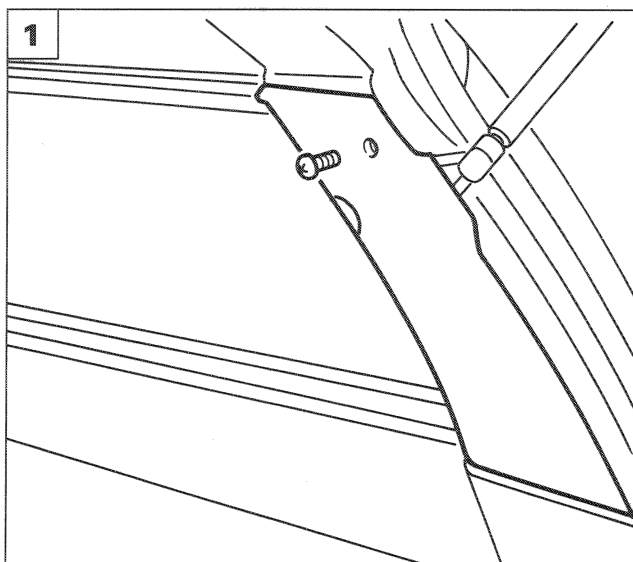


P3M01CM01

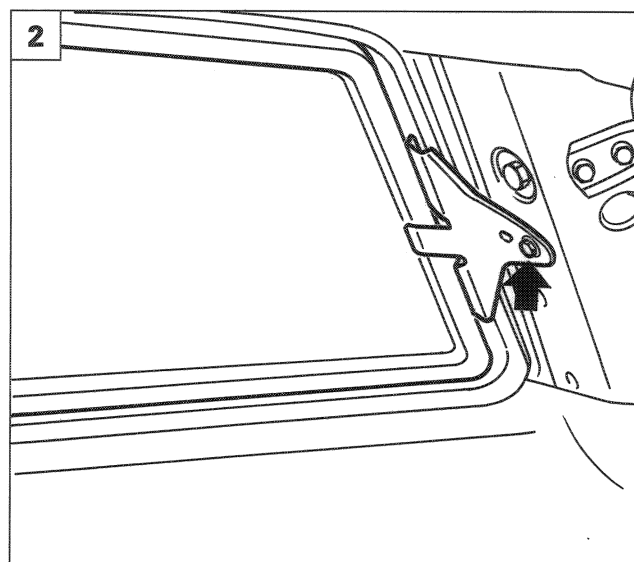

P3M01CM02

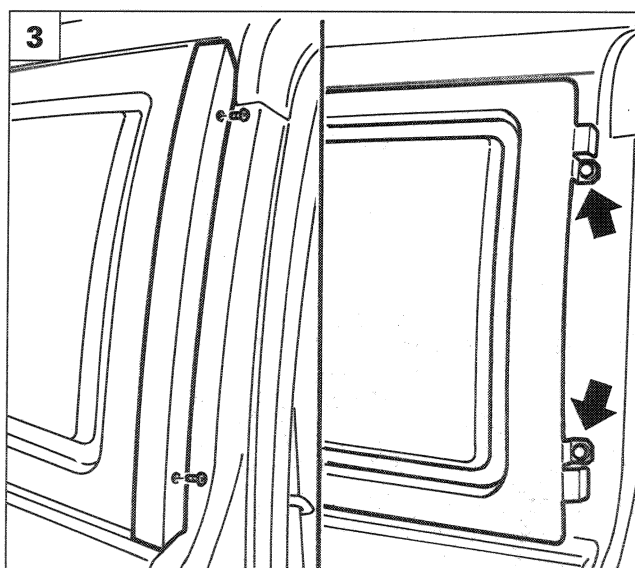


P3M01CM03

 

### REMOVING-REFITTING REAR DARK-ENED WINDOW

1. Remove the rear side pillar cover working on the retaining buttons and bolt.
2. Remove the inner bolt fixing the darkened window.
3. Working from outside the vehicle, remove the side trim for the darkened window, then undo the bolts fixing the actual window, shown in the diagram.
4. Remove the side darkened window, working from the outside of the vehicle. Then remove the trim along the window housing, which is a press fit.

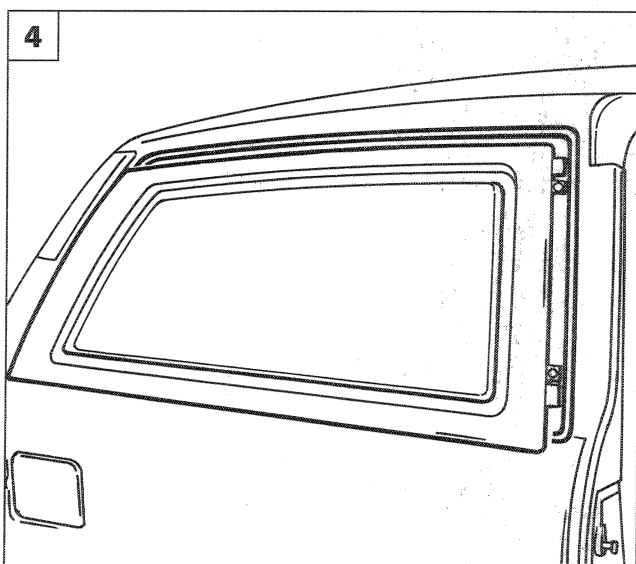


P3M01CM04




*When refitting, repeat the operations described for the removal, working in the reverse order.*


# 70.

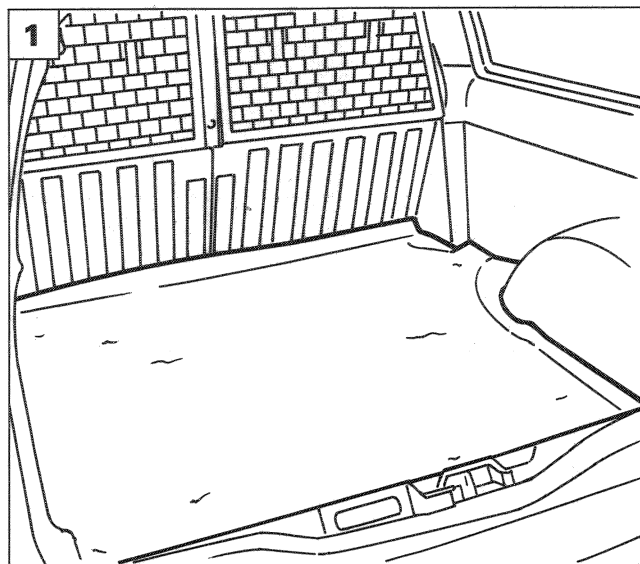

P3M02CM01

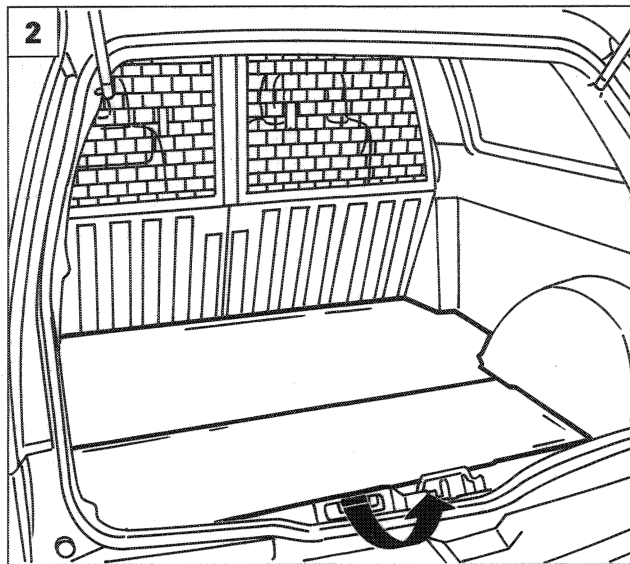

P3M02CM02

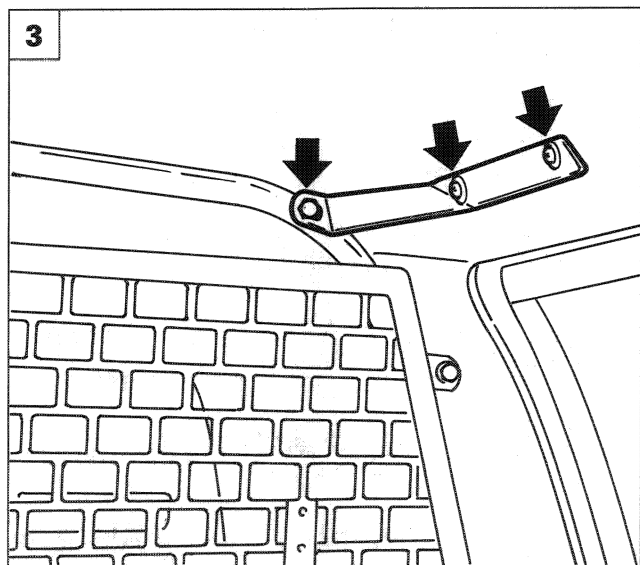


P3M02CM03




## REMOVING-REFITTING PARTITION GRILLE BETWEEN THE DRIVER AND THE LOAD CARRYING COMPARTMENT


1. Remove the load carrying compartment lining.
2. Remove the load carrying compartment floor panels.
3. Remove the upper fixing bracket for the partition grille.
4. Remove the lower part (metal) of the partition between the driver and the load carrying compartment, acting on the fixings shown in the diagram.

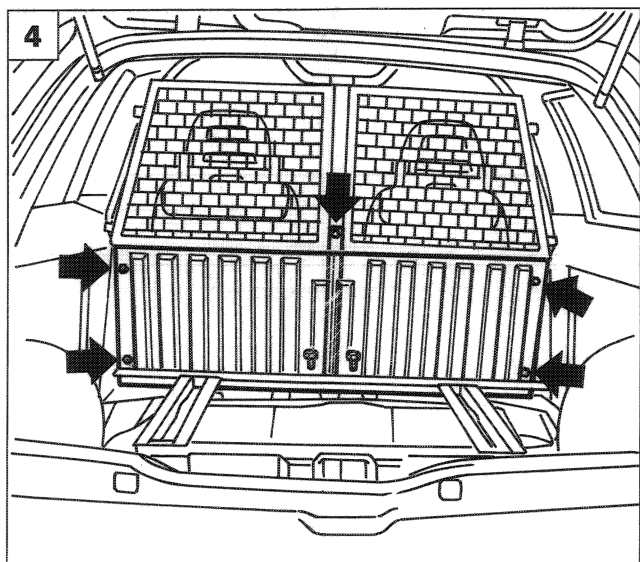


P3M02CM04

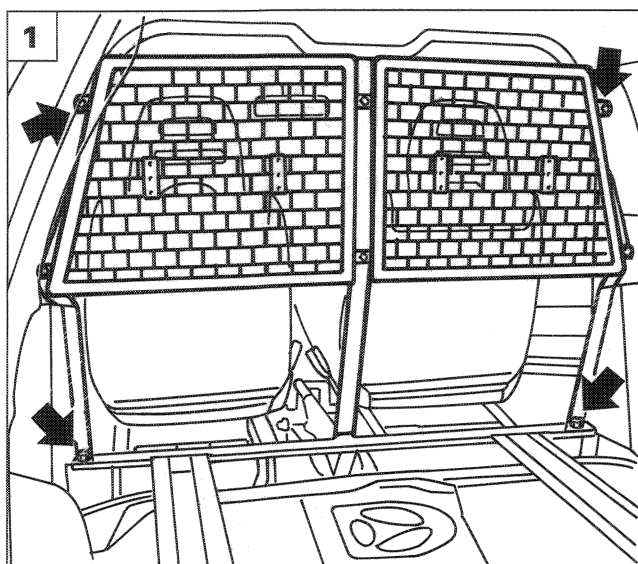


P3M03CM01

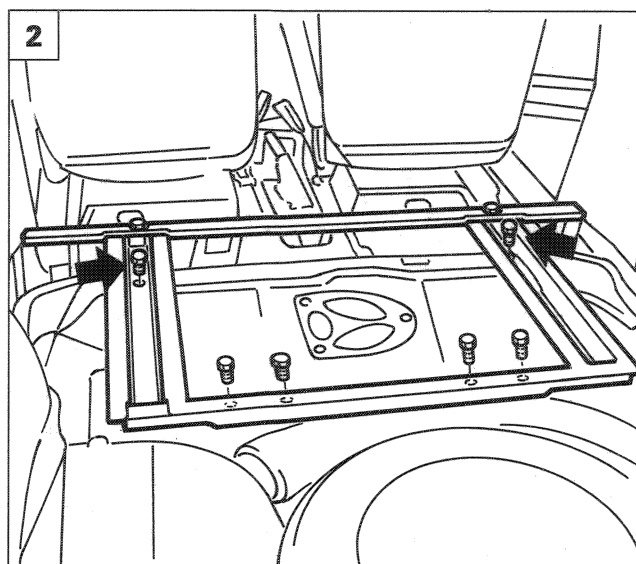

P3M03CM02

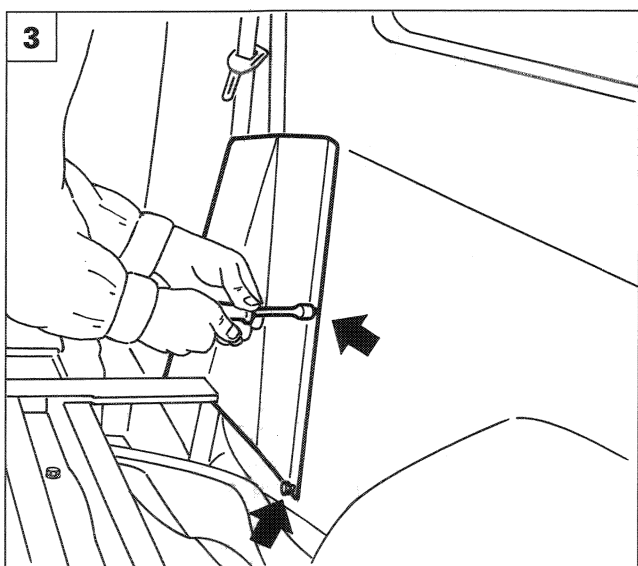

P3M03CM03

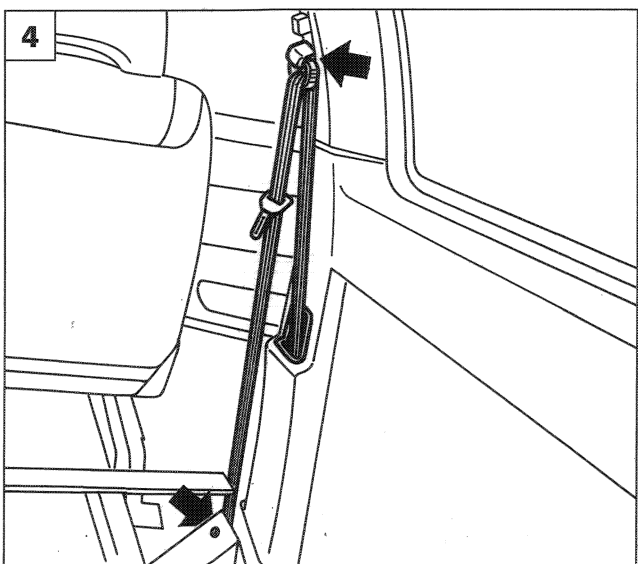

P3M03CM04



1. Remove the partition grille working on the fixings shown in the diagram;



*When refitting, repeat the operations described for the removal, working in reverse order.*

2. Remove the load carrying compartment floor panel support frame.

### REMOVING-REFITTING LOAD CARRYING COMPARTMENT SIDE LINING




*Remove the partition grille as described previously.*



3. Remove the metal partition shown.

4. Remove the upper and lower fixings for the seat belt, then pass it through the opening in the side lining.

**70.**

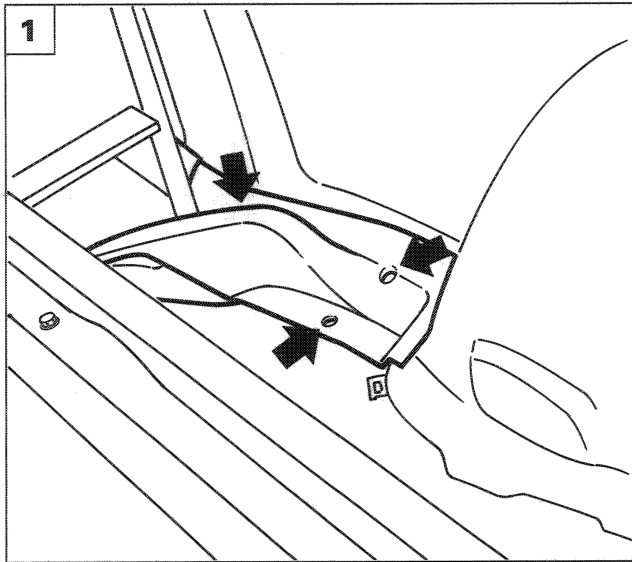

P3M04CM01

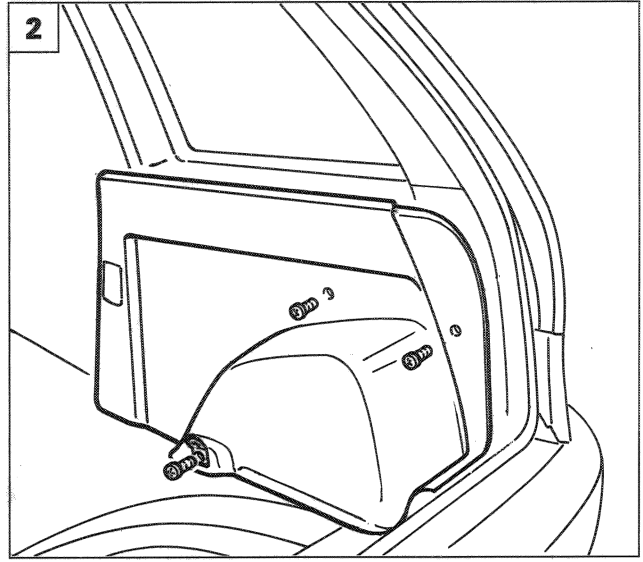 

P3M04CM02

1. Remove the plastic lining shown in the diagram, working on the fixings shown in the diagram;.

2. Remove the side lining for the load carrying compartment, working on the retaining buttons and bolts.



*When refitting, repeat the operations described for the removal, working in reverse order.*