



# PUNTO eMANUAL

Bodywork

Title	Page
Hood attachment edge .....	1 ➡

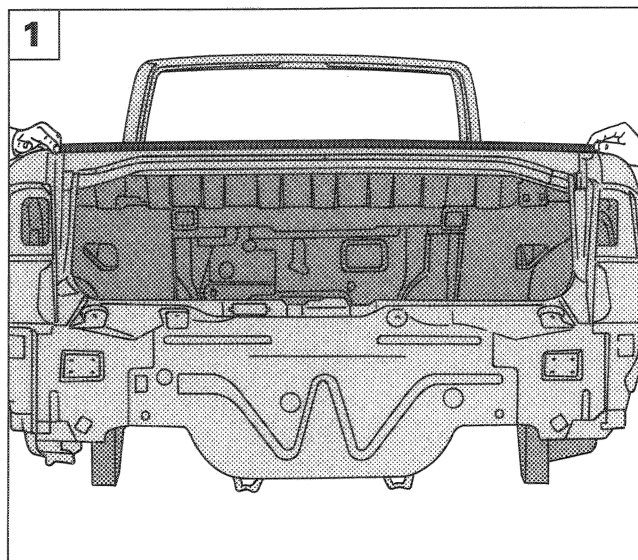

P3M80BM02 P3M80BM01

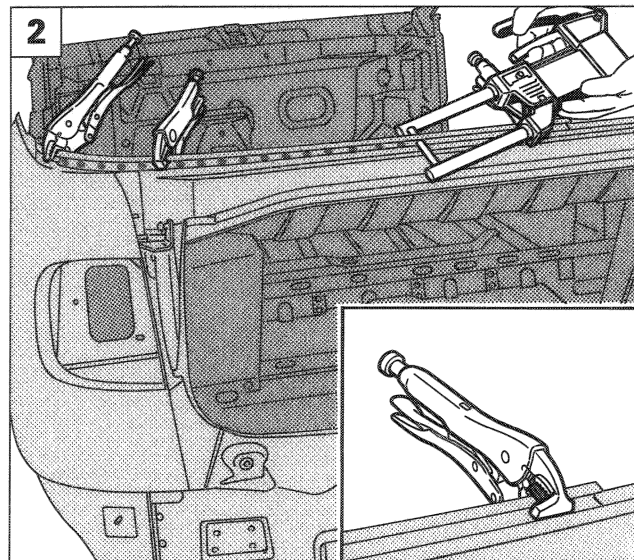


P3M80BM04 P3M80BM03


### REPLACING HOOD ATTACHMENT EDGE

Mill the welding edges shown in the diagram at the side, then remove the hood attachment edge.


1. Measure the luggage compartment opening between the internal parts of the wings and mark the centre on the bodysell by the edge housing.
2. Position left edge using self-locking clamps, one of which is illustrated in the inset, then spot weld.
3. Position the right edge using self-locking clamps and spot weld.
4. Carry out welding with brass using an oxy-acetylene canister by the centre join for the hood rear attachment edge.

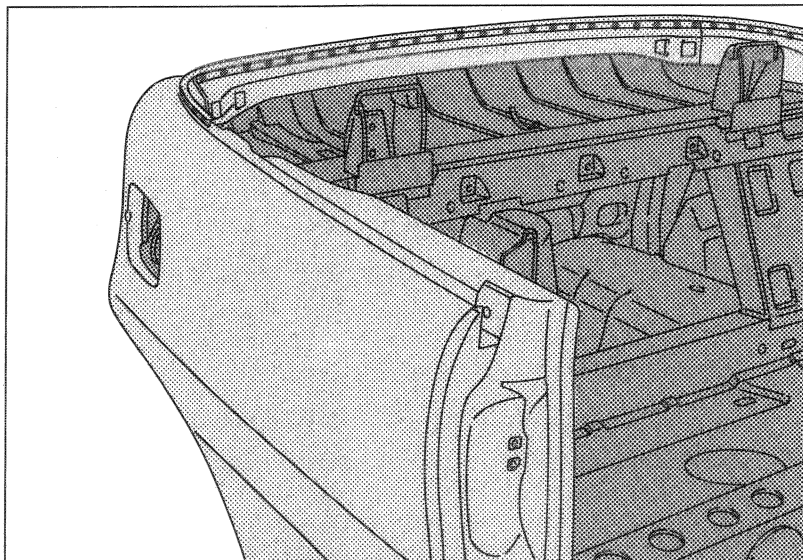

P3M80BM06 P3M80BM05

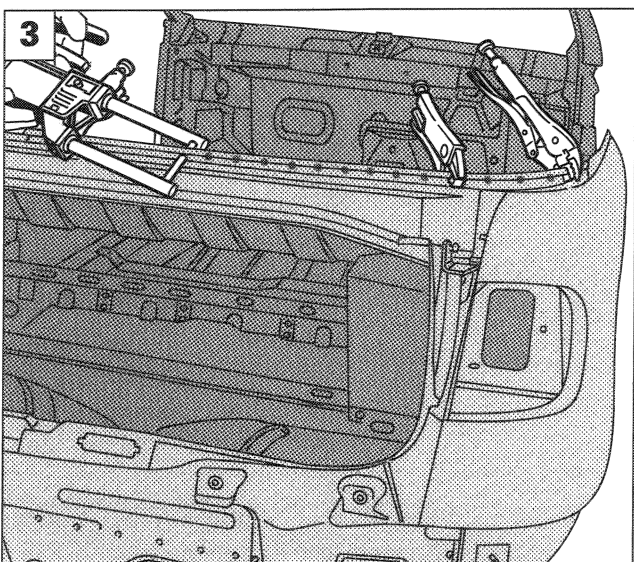

P3M80BM08 P3M80BM07

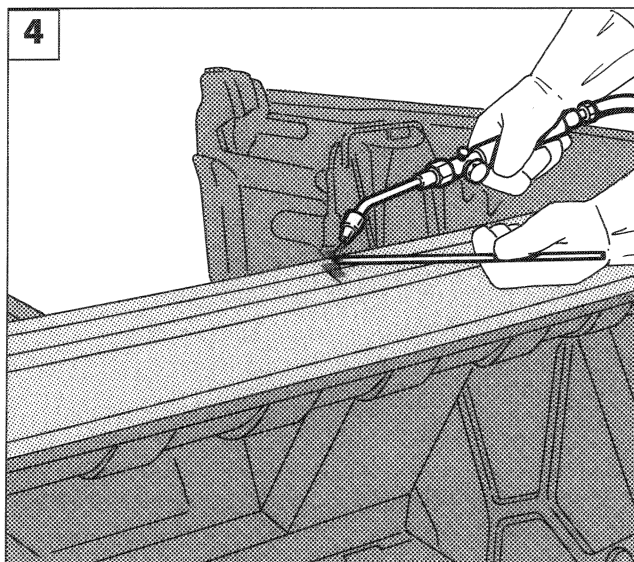

P3M80BM10 P3M80BM09