


PUNTO eMANUAL

Bodywork


Title	Page
Trims	1 ➡

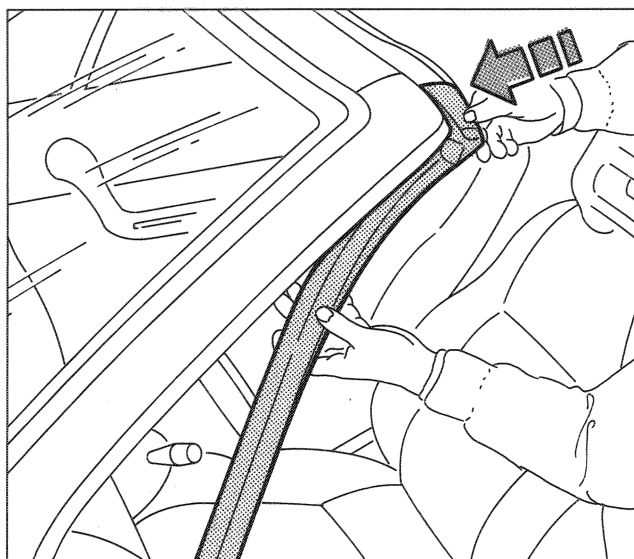

P3M71BM02 P3M71BM01




- remove the adhesive tape previously applied to the windscreen pillar;
- remove the protective film from the double-sided tape, applied to the outer part of the replacement part;
- position the trim on the front of the windscreen;

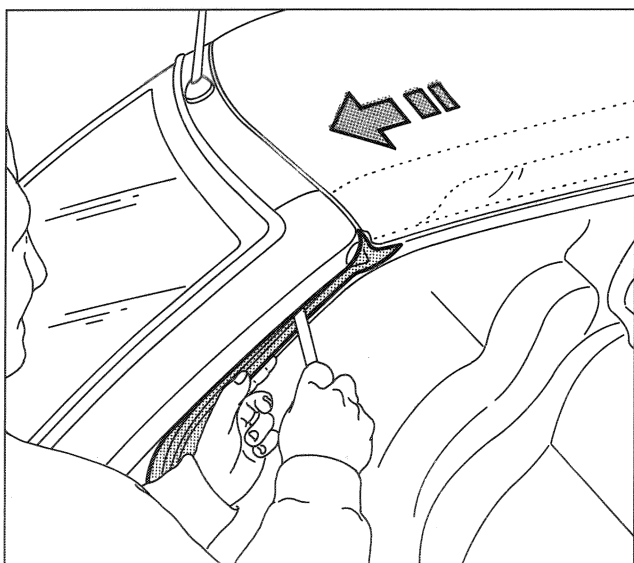

P3M71BM04 P3M71BM03




- place the hood in the closed position;
- using a special tool, fit the trim on the rain gutter fixed to the windscreen frame pillar;

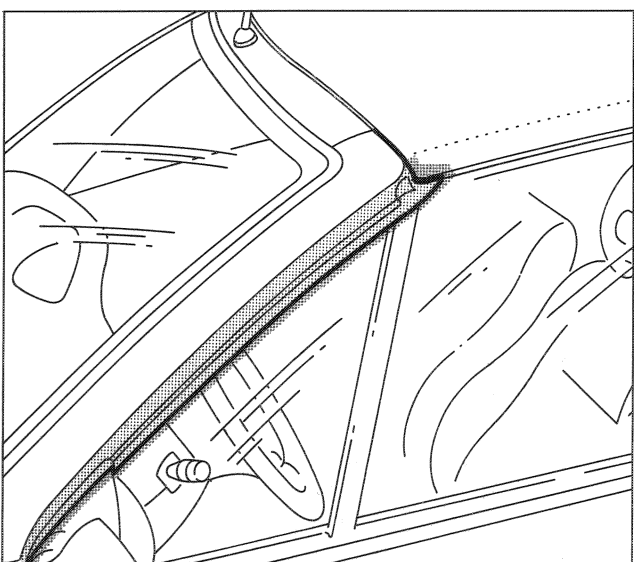


P3M71BM06 P3M71BM05



- wait at least five minutes with the hood in the closed position to ensure that the trim is properly stuck to the pillar;
- check the perfect alignment between the hood, the windscreen pillar and the fixed window.

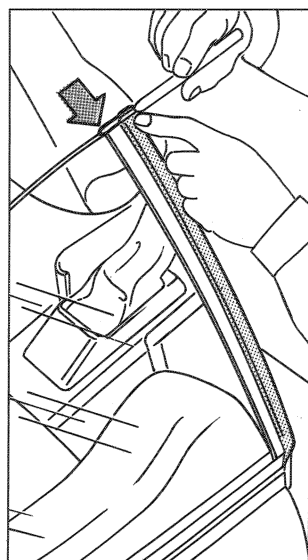

P3M72BM02 P3M72BM01

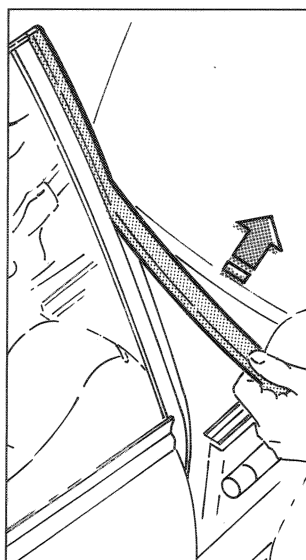


P3M72BM04 P3M72BM03



REMOVING-REFITTING REAR SIDE WINDOW TRIM

Removing


- Remove the trim finish;
- remove the trim.

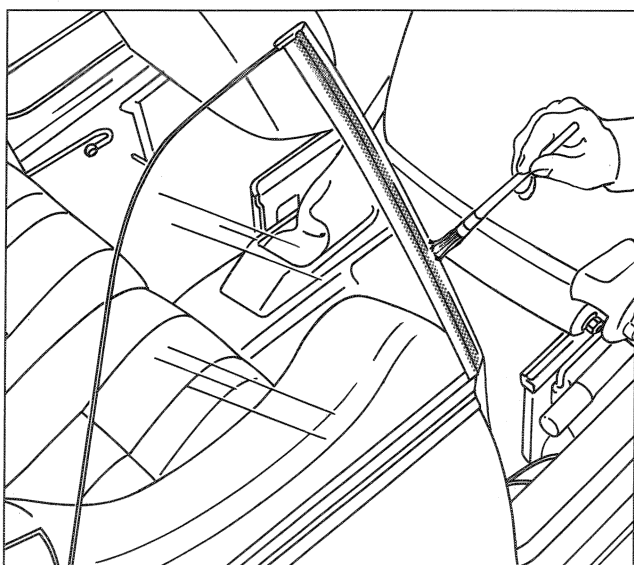


P3M72BM06 P3M72BM05

Refitting

- Using a brush apply a suitable amount of vaseline along the entire attachment trim;

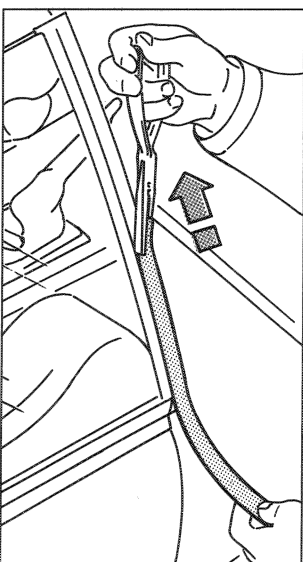

P3M72BM08 P3M72BM07

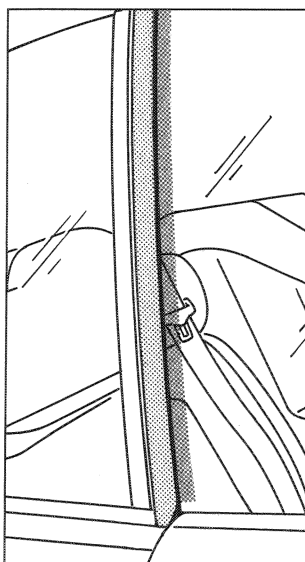

P3M72BM10 P3M72BM09



- fit the trim working from the lower part of the window;
- complete the refitting operations, positioning the trim finish and checking the openings between the side window and the hood.